

Thank you for purchasing the **MODWAY SWING CHAIR!**

Before you start, here is some helpful advice:


1. We suggest you spend a short time reading through this leaflet and then follow the simple step by step instructions.
2. Owing to the size and weight of the chair, we recommend that it is assembled by two adults, on a carpeted or padded area, in the room that it is intended for. Approx assembly time: 30 minutes.
3. Please do not use any tools other than those provided or recommended in these instructions.
4. Please do not throw away any of the packaging or the instruction until you have checked all the components and hardware and the furniture is fully assembled. Please ensure that the packaging is disposed of in a safe environmentally friendly way.
5. Assemble all components loosely until advised to tighten. Depending on use, it may be necessary to tighten the components from time to time, so please save the tools that has been provided.
6. Please keep all fitting out of reach of children.



Hardware:

A		Bolt/Nut M10x55mm	x1
B		Bolt/Nut M10x60mm	x4
C		Bolt/Nut M10x20mm	x3
D		Leveler	x10
E		Screw Set M6x30mm	x2
F		Spring	x1
G		Spring Holder	x1
H		Allen Wrench	x1
J		Open Wrench	x1

Component:

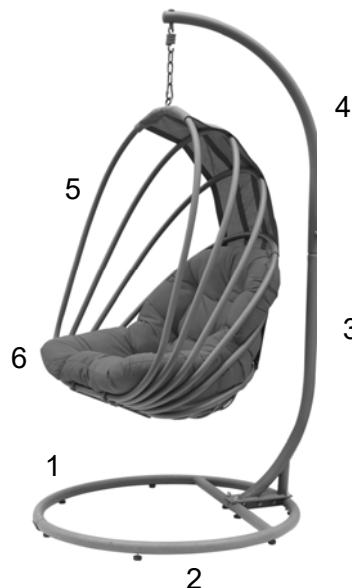

1	Left Base	x1	2	Right Base	x1	3	Lower Stand	x1
4	Upper Stand	x1	5	Basket Frame	x1	6	Cushion	x1

STEP 1:

Please put all chair parts on a carpeted or padded area.

Find hardware package in the box packing **Base (1/2) & Stand (3/4)**.

Place **left Base (1)** to **Right Base (2)** as shown.

Secure the back of base by using 3 sets of **Bolts/Nuts (C)**.

Secure the front of base by using 2 sets of **Screw Set (E)**.

Use **Allen Wrench (H)** and **Open Wrench (J)** to tighten **Bolts/Nuts (C)** and **Screw Sets (E)** clockwise until secure.

Secure 10 pieces of **Leveler (D)** into the bottom of assembled Base as shown.

STEP 2:

Attach **Lower Stand (3)** to the assembled Base as shown.

Secure the back of base by using 4 sets of **Bolts/Nuts (B)**.

Use **Allen Wrench (H)** and **Open Wrench (J)** to tighten **Bolts/Nuts (B)** clockwise until secure.

STEP 3:

Insert **Upper Stand (4)** into **Lower Stand (3)** as shown.

Secure by using 1 set of **Bolt/Nut (A)**.










Use **Allen Wrench (H)** and **Open Wrench (J)** to tighten **Bolt/Nut (A)** clockwise until secure.

STEP 4:


Insert **Spring Holder (G)** into the pre-drilled hole at the top of **Upper Stand (4)** as shown.

Hang **Basket Frame (5)** to **Upper Stand (4)** by using 1 piece of **Spring (F)** as shown.

Place **Cushion (6)** to **Basket Frame (5)** as shown.

								
Ax1	Bx4	Cx3	Dx10	Ex2	Fx1	Gx1	Hx1	Jx1

Hardware & Tool required

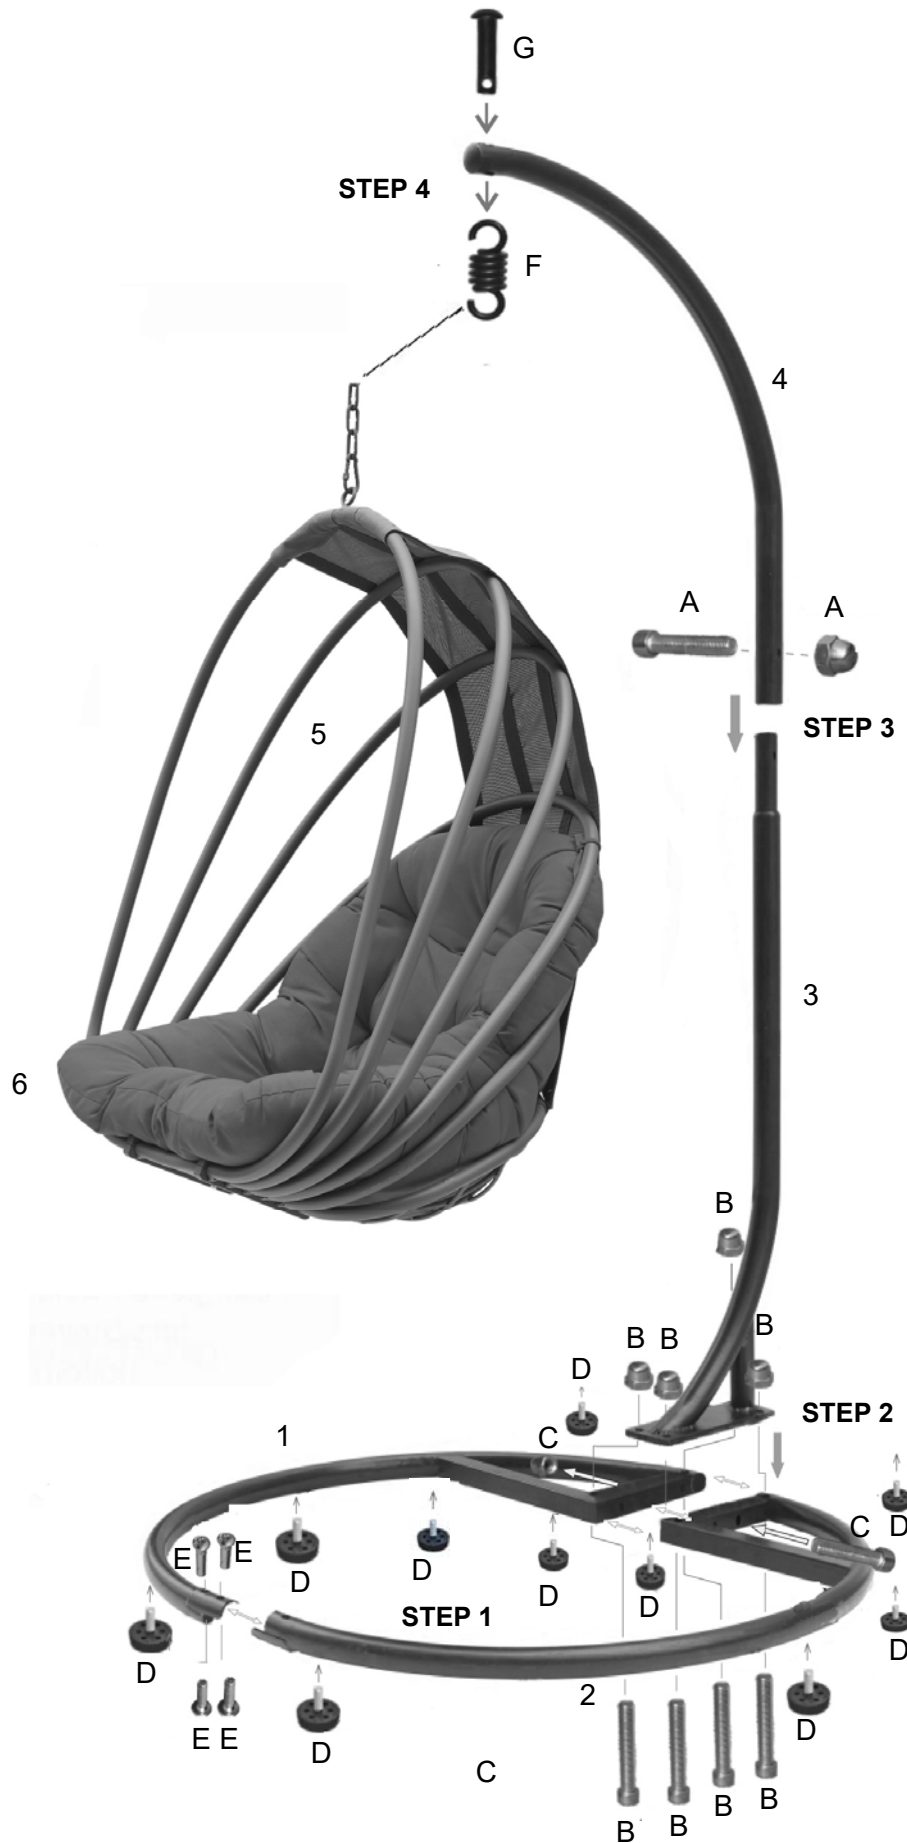

Maximum Weight: 120 KG

Assembly is completed. The swing chair is ready to enjoy now!

Assembly instruction for the chain to connect basket frame

Components: A. Hook x2 B. Chain x1 C. Basket frame (Style may vary) x1

Step 1 :

Hang Chain(B) with 1pc Hook (A) through the hanger rod which installed on the ceiling by yourself,you can adjust the length of chain (B) base on height your require.

Step 2 :

Another 1pc Hook(A) connect to Basket Frame (C) as shown.

ATTENTION: .pls make susre the weight capacity of hanger rod must be over 120KG(264LBS) for safety. The maximun weight for this product is 120KG.

