

ASSEMBLY INSTRUCTIONS

11026/11027 DINING ARM CHAIR

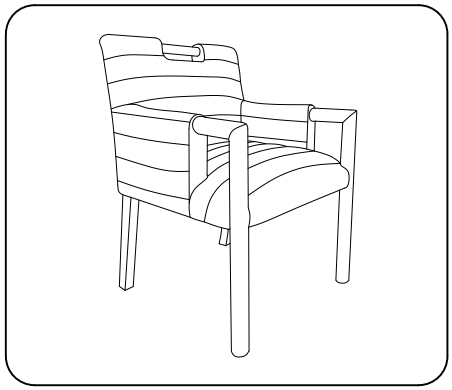


+ Part Included


① Cushions And Backrest x1pc

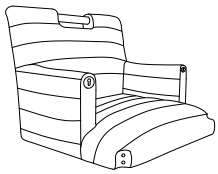

② Front Legs x2pcs



③ Back Legs x 2pcs



+ Do Not Use Power Tools



+ Suggested Adults



Note: For questions about parts or assembly please email support@meridianfurnitureusa.com or call us at 718-758-4455

1 Read instructions cover to cover.

2 Save all packaging until assembly is completed.

+ Hardware Included

Ⓐ Bolt Ø5/16"x 60MM x 8pcs



Ⓑ Lock Washer Ø5/16"xØ13 x 8pcs



Ⓒ Flat Washer Ø5/16"xØ22 x 8pcs



Ⓓ Allen Key M5 1 pc



1 IMPORTANT SAFETY INFORMATION

Part 1 - Cushions And Backrest

Part 2 - Front Legs

Part 3 - Back Legs


2 IMPORTANT SAFETY INFORMATION

If loosening persists, please make sure to tighten all the bolts periodically, or use a thread locker adhesive.


ASSEMBLY INSTRUCTIONS

11026/11027 DINING ARM CHAIR

1

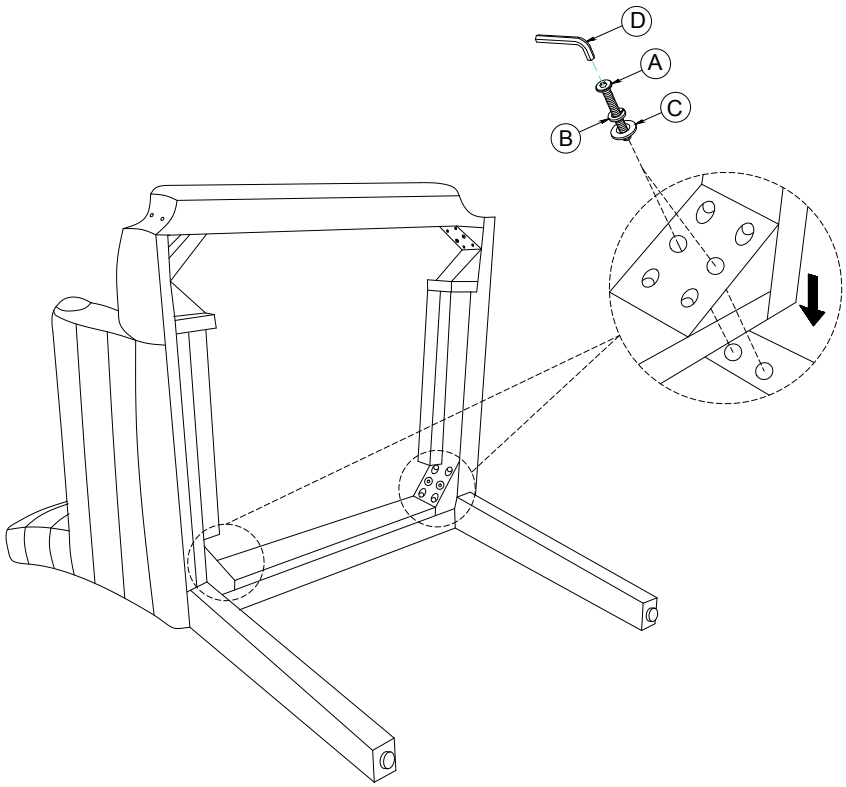

2

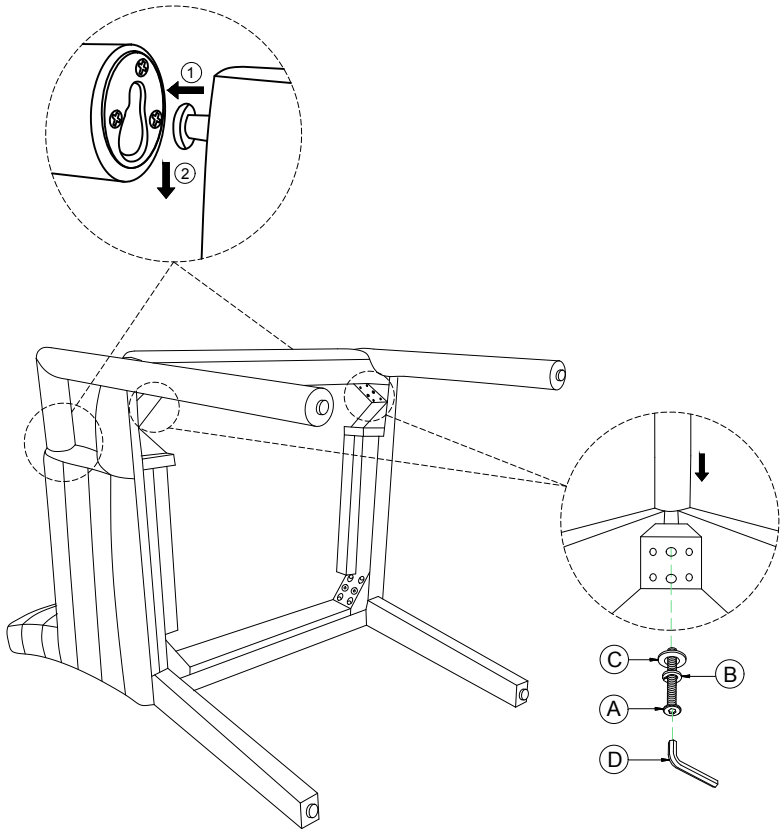


NOTE: For questions about parts or assembly please email support@meridianfurnitureusa.com or call us at 718-758-4455

ASSEMBLY INSTRUCTIONS

meridian furniture

11026/11027 DINING ARM CHAIR

3

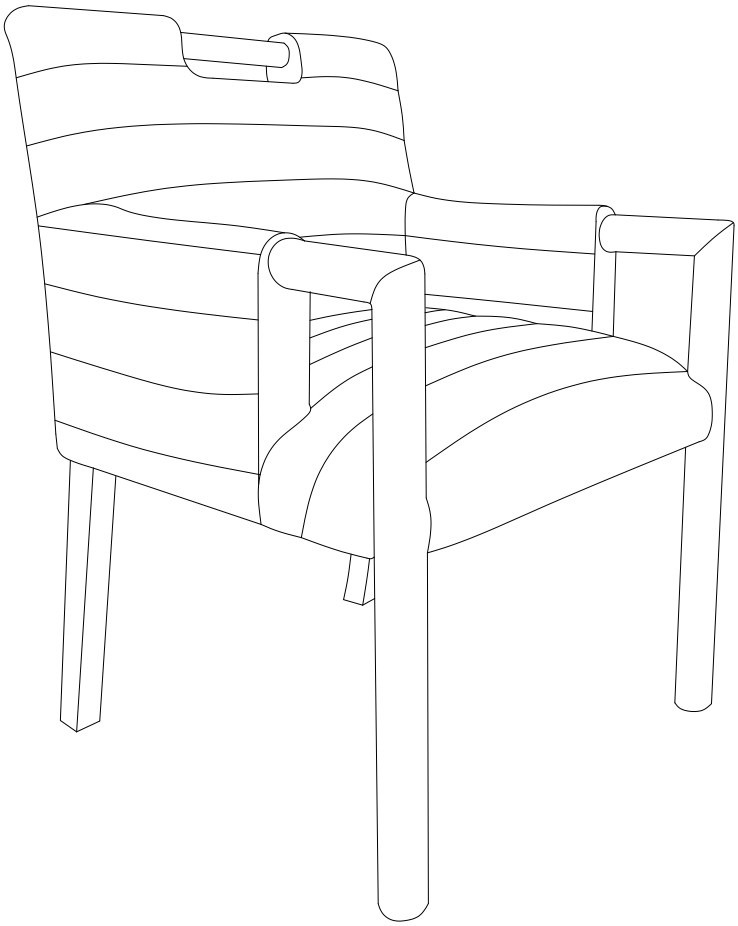

NOTE: For questions about parts or assembly please email support@meridianfurnitureusa.com or call us at 718-758-4455