
ASSEMBLY INSTRUCTIONS
11098 DINING CHAIR

meridian furniture

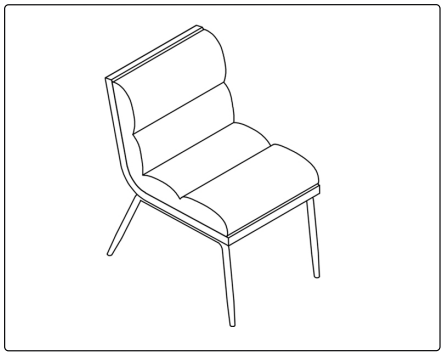

+ Do Not Use Power Tools



+ Suggested Adults



NOTE: For questions about parts or assembly please email support@meridianfurnitureusa.com or call us at 718-758-4455.

1 Read instructions cover to cover.

2 Save all packaging until assembly is completed.

+ Parts Included

① Frame cushion x1 pc



② Right leg x1 pc



③ Left leg x1 pc



1 IMPORTANT SAFETY INFORMATION

Do not assemble the product if any of the following parts arrived damaged:

Part 1 - Frame cushion
Part 2 - Right leg
Part 3 - Left leg

Do not assemble if any of the following Hardware parts are missing:


Part A - Bolt
Part B - Lock washer
Part C - Flat washer
Part D - Allen key

2 IMPORTANT ASSEMBLY INFORMATION

Assembly Step If loosening persists, please make sure to tighten all the bolts periodically, or use a thread locker adhesive.

+ Hardware Included

A Bolt 1/4" x 20 mm x 8 pcs




B Lock washer x 8 pcs



C Flat washer x 8 pcs



D Allen key M4 x 1 pc




ASSEMBLY INSTRUCTIONS


11098 DINING CHAIR

meridian furniture


1

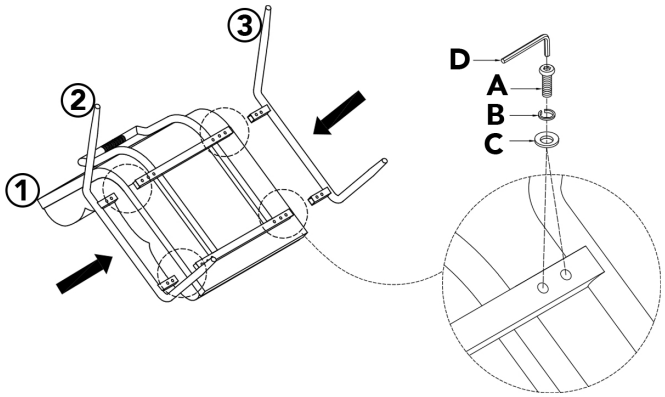

2

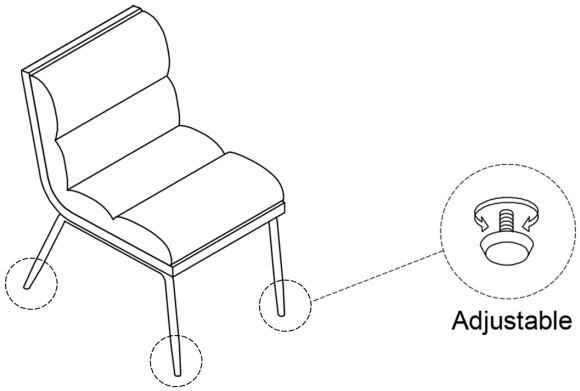

3

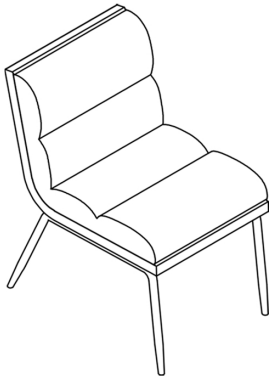

NOTE: For questions about parts or assembly please email support@meridianfurnitureusa.com or call us at 718-758-4455.