


MOE'S homecollection

ASSEMBLY INSTRUCTIONS


PERTH RECTANGULAR MIRROR

AI-1014-03

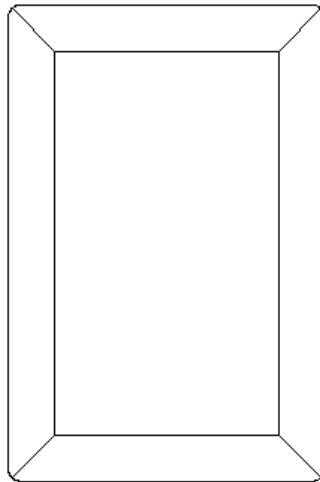


Thank You For Your Purchase

1. MIRROR FRAME X1

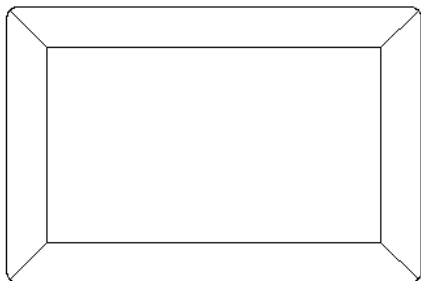

2. WALL MOUNTED BRACKET X1



3. WALL ANCHOR x 5
L40 mm x Ø13 mm



4. SCREW x 5
L38 mm x Ø7 mm



5. SCREWDRIVER x 1
(NOT INCLUDED)



6. POWER DRILL x 1
(NOT INCLUDED)




Notes


Thank you for purchasing this quality product!
Be sure to check all packing material carefully for small part that may have come loose inside the carton during shipping.

Caution: The item is heavy, assembly should be performed by two people.


STEP 1

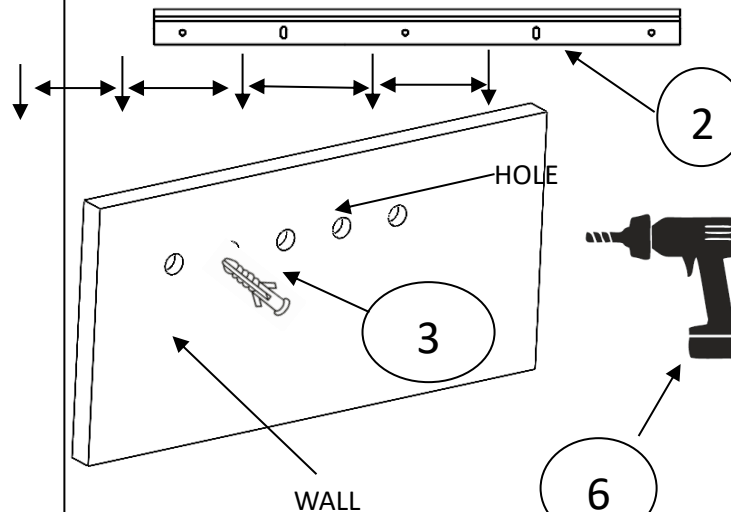

STEP 2 WALL

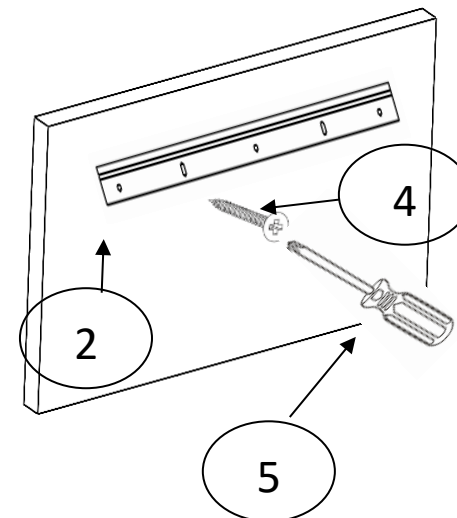

STEP 3

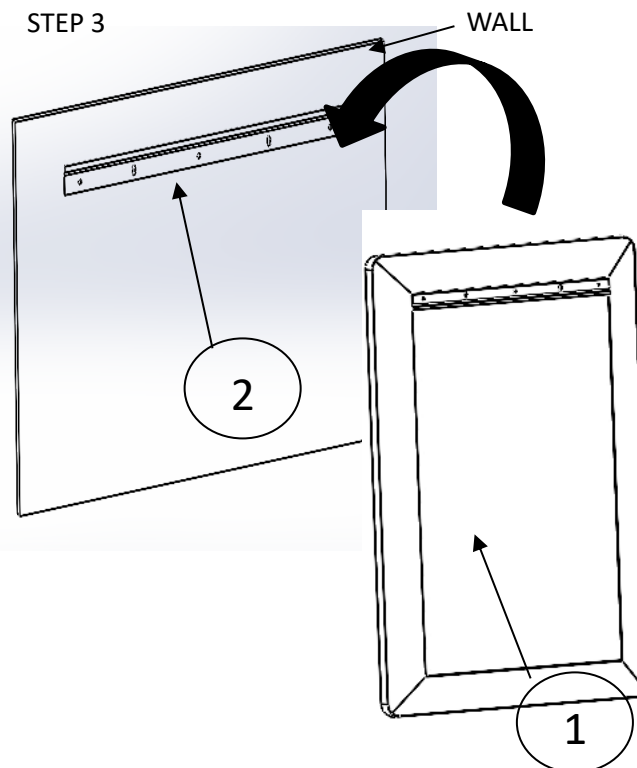

STEP 4

