







Thank you for purchasing the **MODWAY SWING CHAIR**!

Before you start, here is some helpful advice:

1. We suggest you spend a short time reading through this leaflet and then follow the simple step-by-step instructions.
2. Owing to the size and weight of the chair, we recommend that it is assembled by two adults, on a carpeted or padded area, in the room that it is intended for. Approx assembly time: 15 minutes.
3. Please do not use any tools other than those provided or recommended in these instructions.
4. Please do not throw away any of the packaging or the instruction until you have checked all the components and hardware and the furniture is fully assembled. Please ensure that the packaging is disposed of in a safe environmentally friendly way.
5. Assemble all components loosely until advised to tighten. Depending on use, it may be necessary to tighten the components from time to time, so please save the tools that has been provided.
6. Please keep all fitting out of reach of children.



**Hardware:**

A		Bolt M10x60mm	x2
B		Nut M10	x2
C		Spring	x1
D		Spring Holder	x1
E		Allen Wrench	x1
F		Open Wrench	x1

**Components:**



1	Chair Base	x1	2	Stand	x1	3	Basket Frame	x1	4	Cushion	x1
---	------------	----	---	-------	----	---	--------------	----	---	---------	----

## STEP 1:

Please put all chair parts on a carpeted or padded area.

Find the hardware package inside of the tube on **Chair Base (1)**.

Insert **Stand (2)** into **Chair Base (1)** as shown.

Secure by using 2 pieces of **Bolt (A)** with 2 pieces of **Nut (B)**. **Note: Bolt (A)** should be inserted by the left side.


Use **Allen Wrench (E)** and **Open Wrench (F)** to tighten **Bolts (A)** and **Nuts (B)** clockwise until secure.

## STEP 2:





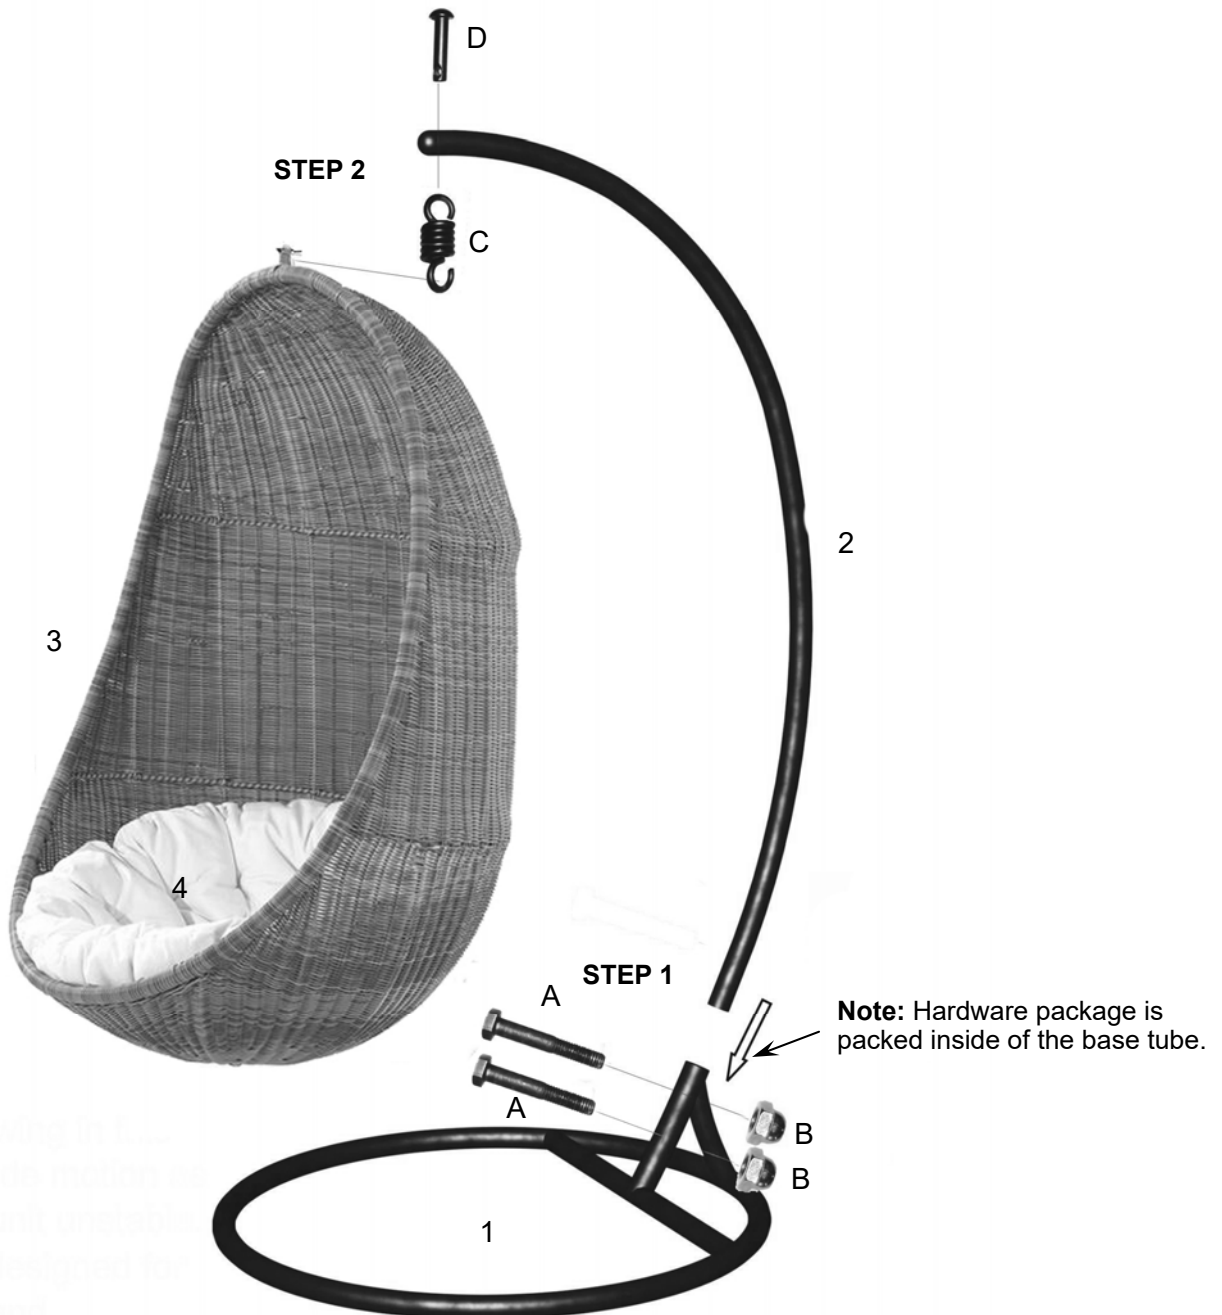

Insert **Spring Holder (D)** into the pre-drilled hole at the top of **Stand (2)** as shown.

Hang **Basket Frame (3)** to **Stand (2)** by using 1 piece of **Spring (C)** as shown.

Place **Cushion (4)** to **Basket Frame (3)** as shown.



Assembly is completed. The swing chair is ready to enjoy now!

					
Ax2	Bx2	Cx1	Dx1	Ex1	Fx1

**Maximum Weight: 120 KG**

Hardware & Tool required

## Assembly instruction for the chain to connect basket frame

**Components:** A. Hook x2 B. Chain x1 C. Basket frame (Style may vary) x1

### Step 1 :

Hang Chain(B) with 1pc Hook (A ) through the hanger rod which installed on the ceiling by yourself,you can adjust the length of chain (B) base on height your require.

### Step 2 :

Another 1pc Hook(A) connect to Basket Frame (C) as shown.

**ATTENTION:** .pls make susre the weight capacity of hanger rod must be over 120KG(264LBS) for safety. The maximun weight for this product is 120KG.

