ASSEMBLY INSTRUCTIONS

EEI-5675

V1.08.03.21

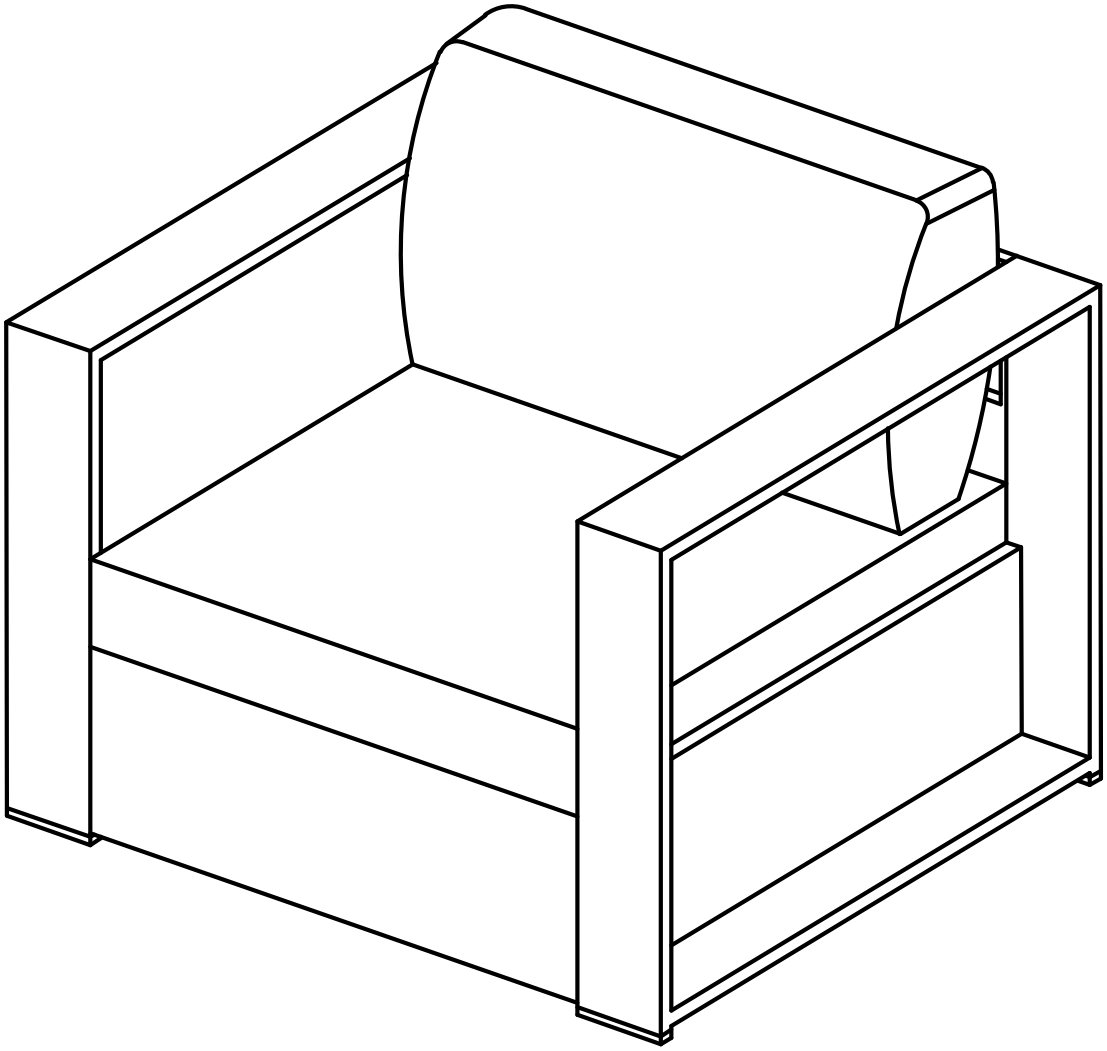

Questions? Contact us!

609.256.9000 • cs@modway.com
www.modway.com

*modway

Let's get started!

*modway

Read through all of the instructions before starting

Care instructions are listed in the last step of this manual

Approx. 60 minutes assembly time

Make sure you have all parts and components before discarding any packing materials

2 people recommended for assembly

Only use hand tools to assemble this item. Do not use power tools. Do not tighten bolts or screws completely until all hardware is lined up and inserted into the holes.

Do not over-tighten screws and bolts to avoid stripping the hardware or cracking the item.

Assemble your item on a flat, carpeted area, with plenty of space to work. This will prevent damage and scratches to your floors or the item while you're assembling the product.

Keep all components and packaging out of reach of children or animals to avoid risk of choking or suff ocation.

Furniture components:

A	Left Armrest	x1
B	Right Armrest	x1
C	Backrest	x1
D	Chair Base	x1
E	Backrest Cushion	x1
F	Seat Cushion	x1

Provided hardware:

G		Bolt M6 x 35mm	x10
H		Bolt M6 x 20mm	x4
I		Allen Key 4mm	x1

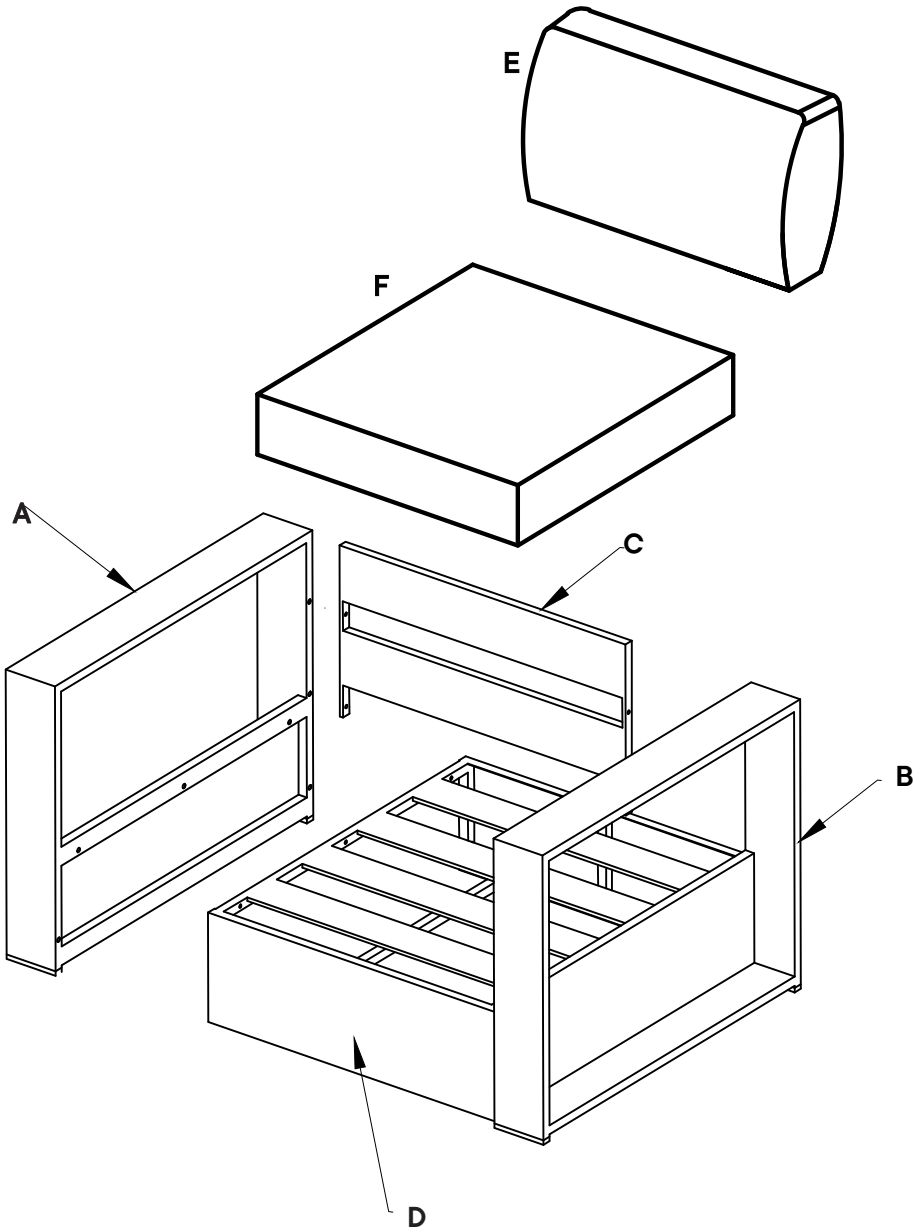

Wait!

Missing parts or hardware? Need assistance?
Contact us before returning your item. We're here to help!
609.256.9000 • cs@modway.com

Step 1

HARDWARE

G	Bolt M6 x 35mm	x10
I	Allen Key	x1

COMPONENTS

A	Left Armrest	x1
B	Right Armrest	x1
D	Chair Base	x1

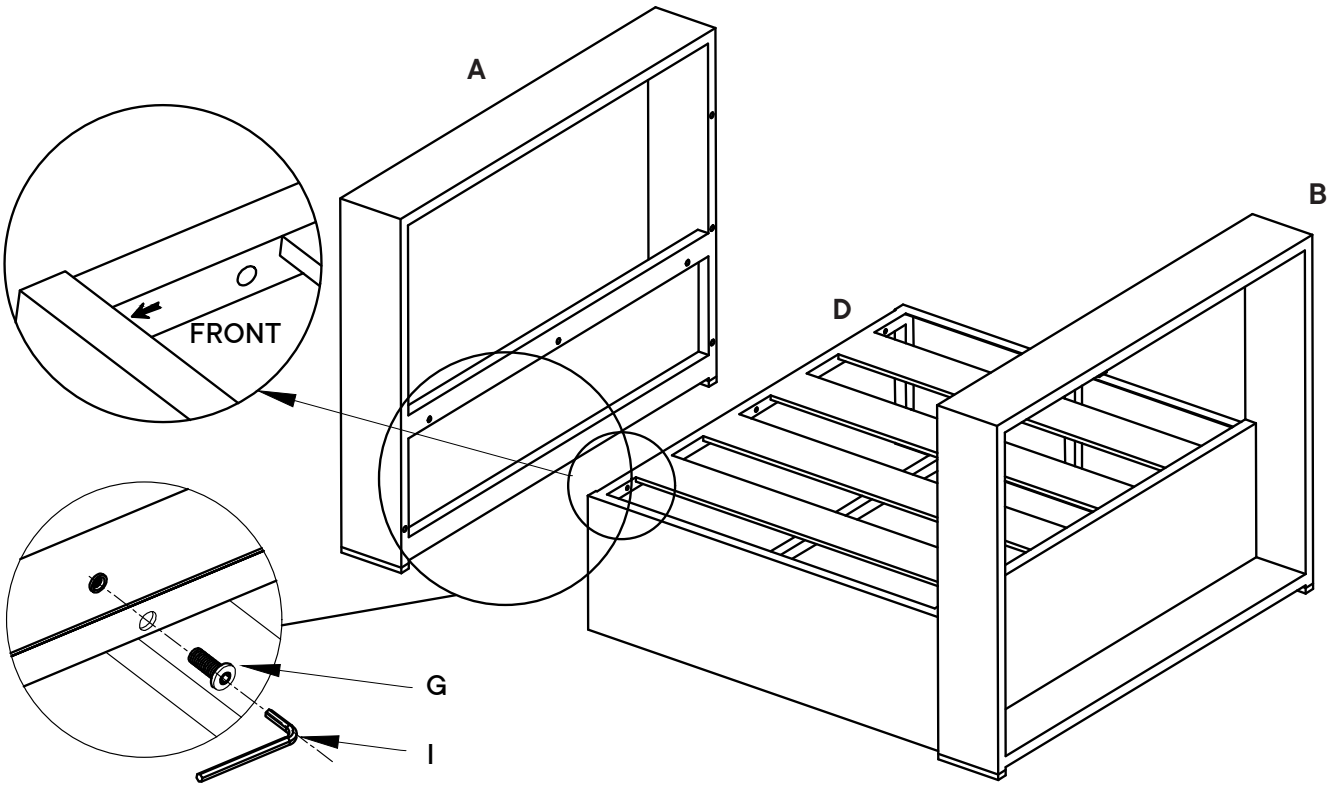

DO NOT FULLY TIGHTEN THE BOLT YET.

Step 2

HARDWARE

H	Bolt M6 x 20mm	x4
I	Allen Key	x1

COMPONENTS

A	Left Armrest	x1
B	Right Armrest	x1
C	Backrest	x1
D	Chair Base	x1

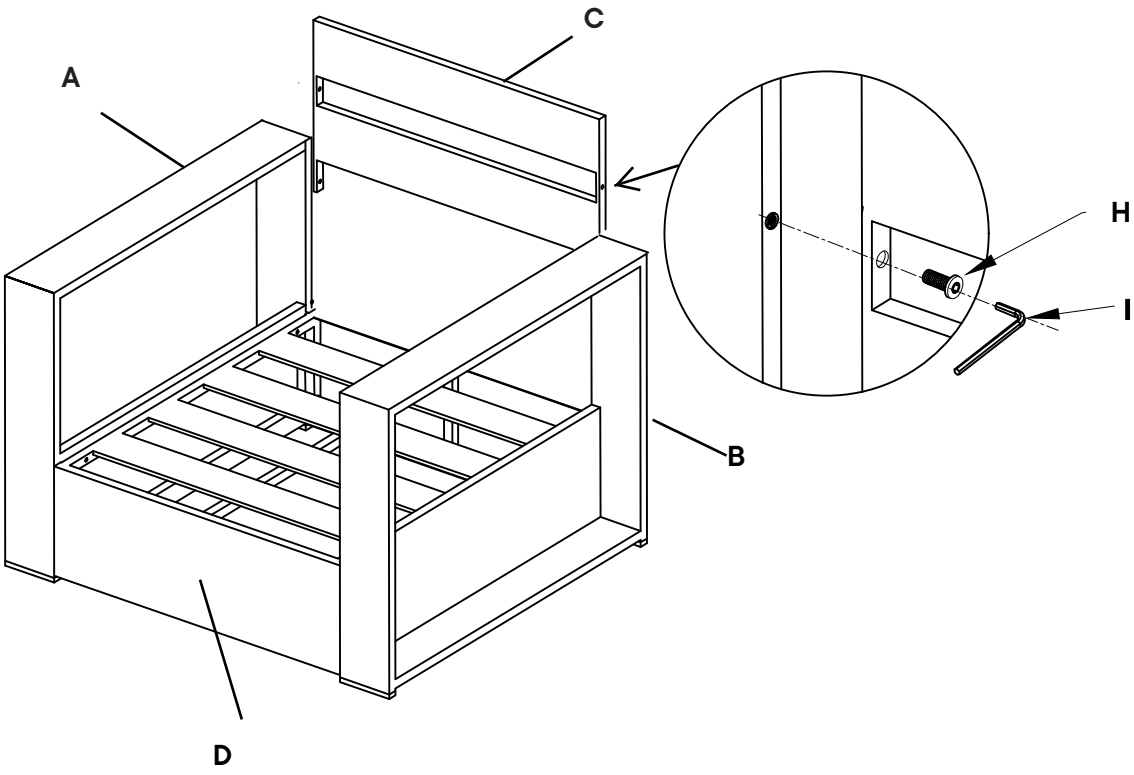

FULLY TIGHTEN ALL BOLTS TO COMPLETE THE ASSEMBLY.

Step 3

COMPONENTS

E	Backrest Cushion	x1
F	Seat Cushion	x1

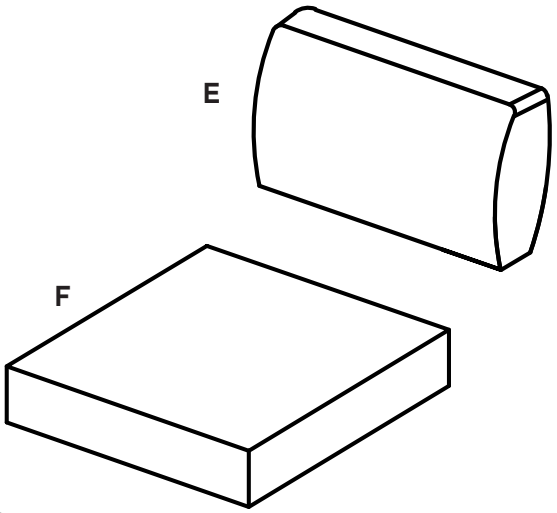

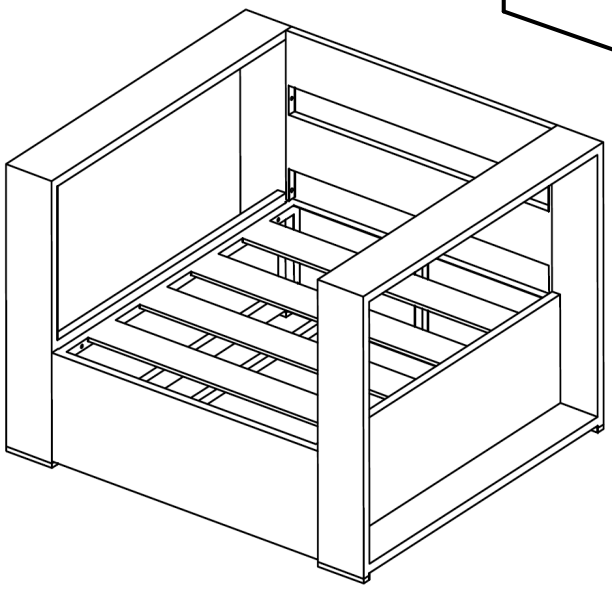

Great job!

Chair assembly is complete .

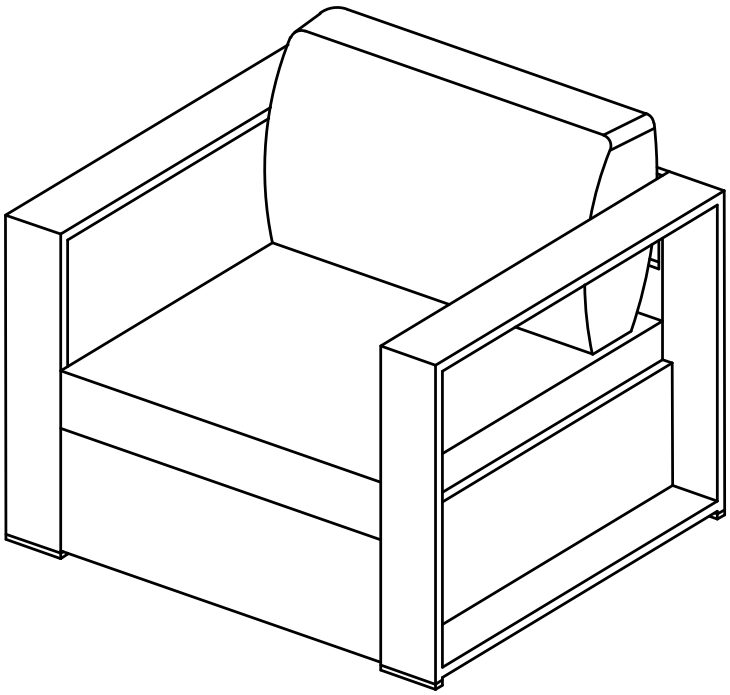

CARING FOR YOUR ITEM

For indoor or outdoor use..

Not contract grade.

Clean using a non-abrasive cloth and a mild cleaner.

Never use harsh chemicals, as they could damage the finish or integrity of the item.

CONNECT WITH US!

Tag us **@modway_furniture** and **#modway** for a chance to be featured.

ASSEMBLY INSTRUCTIONS

EEI-5676

V1.08.02.21

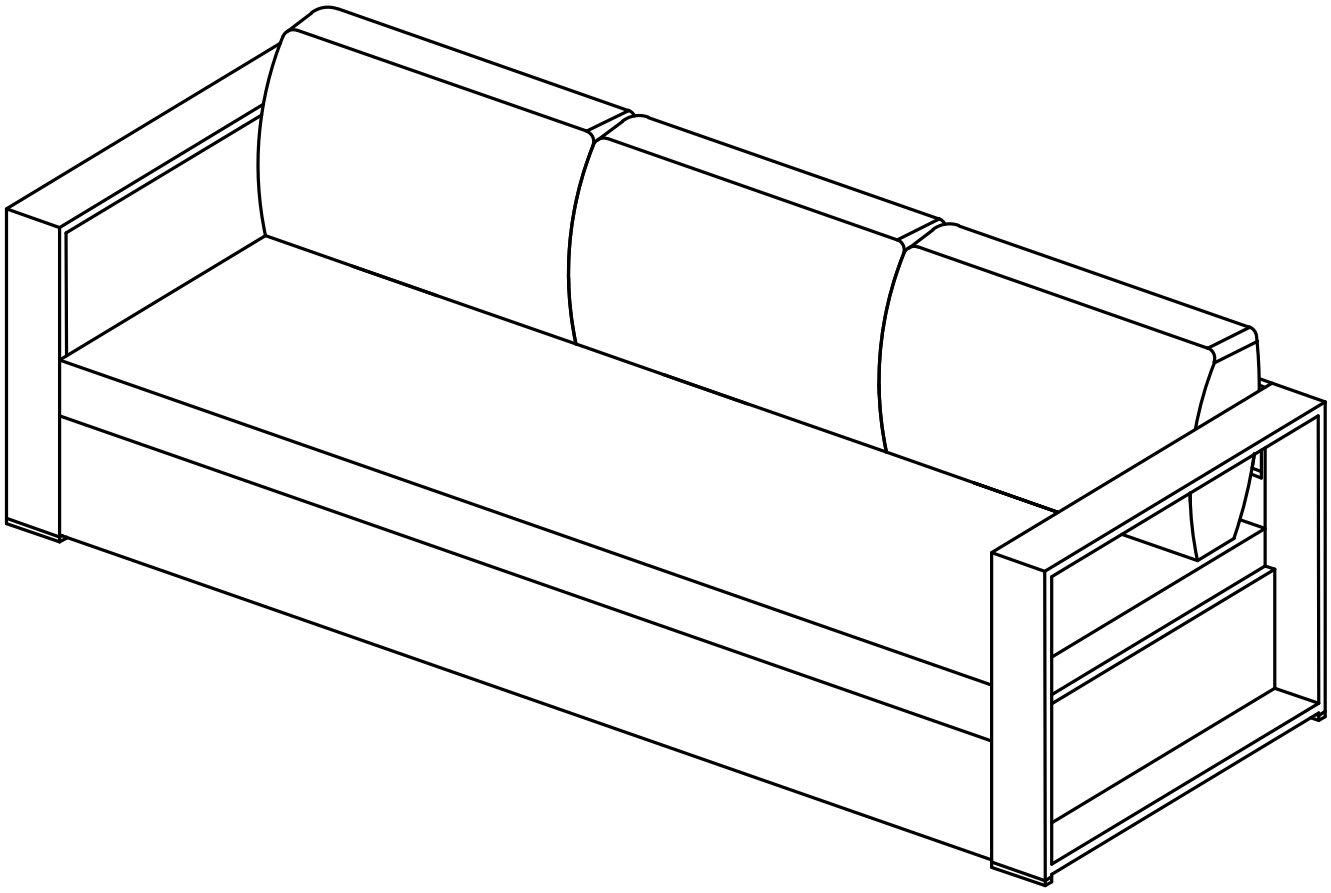

Questions? Contact us!

609.256.9000 • cs@modway.com
www.modway.com

*modway

Let's get started!

Read through all of the instructions before starting

Care instructions are listed in the last step of this manual

Approx. 60 minutes assembly time

Make sure you have all parts and components before discarding any packing materials

2 people recommended for assembly

Only use hand tools to assemble this item. Do not use power tools. Do not tighten bolts or screws completely until all hardware is lined up and inserted into the holes.

Do not over-tighten screws and bolts to avoid stripping the hardware or cracking the item.

Assemble your item on a flat, carpeted area, with plenty of space to work. This will prevent damage and scratches to your floors or the item while you're assembling the product.

Keep all components and packaging out of reach of children or animals to avoid risk of choking or suffocation.

Furniture components:

A	Left Arm Rest	x1
B	Right Arm Rest	x1
C	Back Rest	x1
D	Sofa Base	x1
E	Backrest **Cushion**	x3
F	Seat Cushion	x1

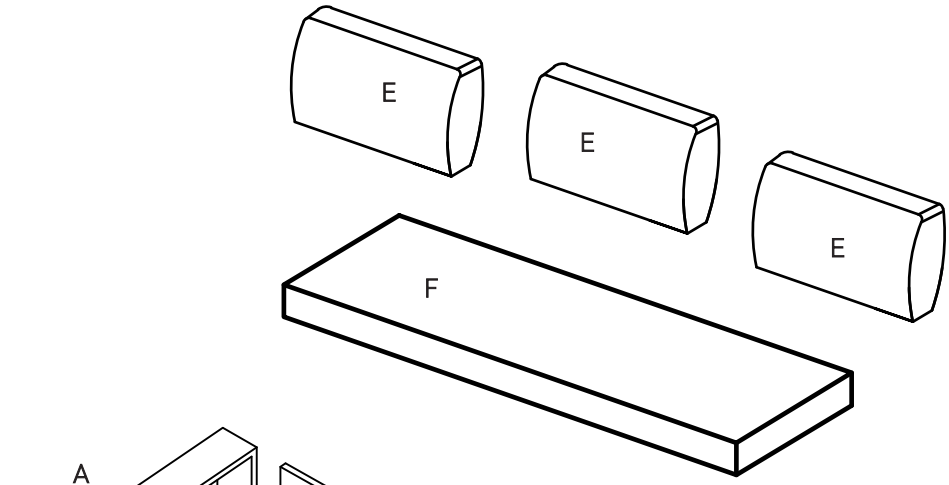

Provided hardware:

G		Bolt M6 x 35mm	x10
H		Bolt M6 x 20mm	x4
I		Allen Key 4mm	x1

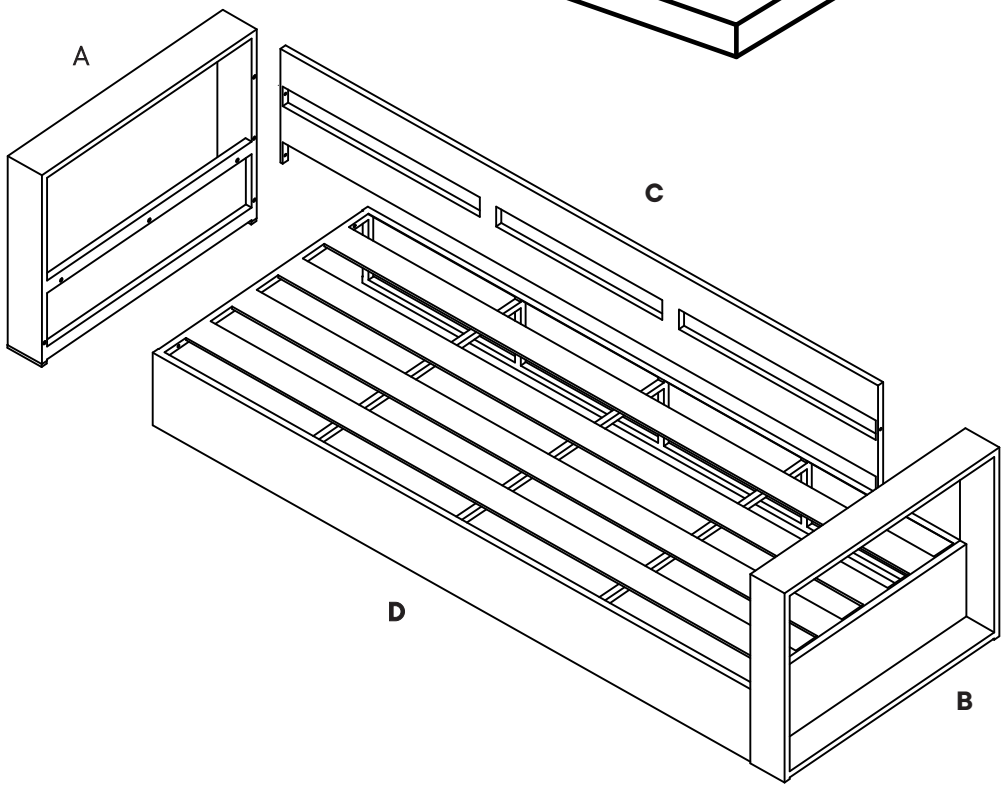

Wait!

Missing parts or hardware? Need assistance?
Contact us before returning your item. We're here to help!
609.256.9000 • cs@modway.com

Step 1

HARDWARE

G	Bolt M6 x 35mm	x10
I	Allen Key 4mm	x1

COMPONENTS

A	Left Arm Rest	x1
B	Right Arm Rest	x1
D	Sofa Base	x1

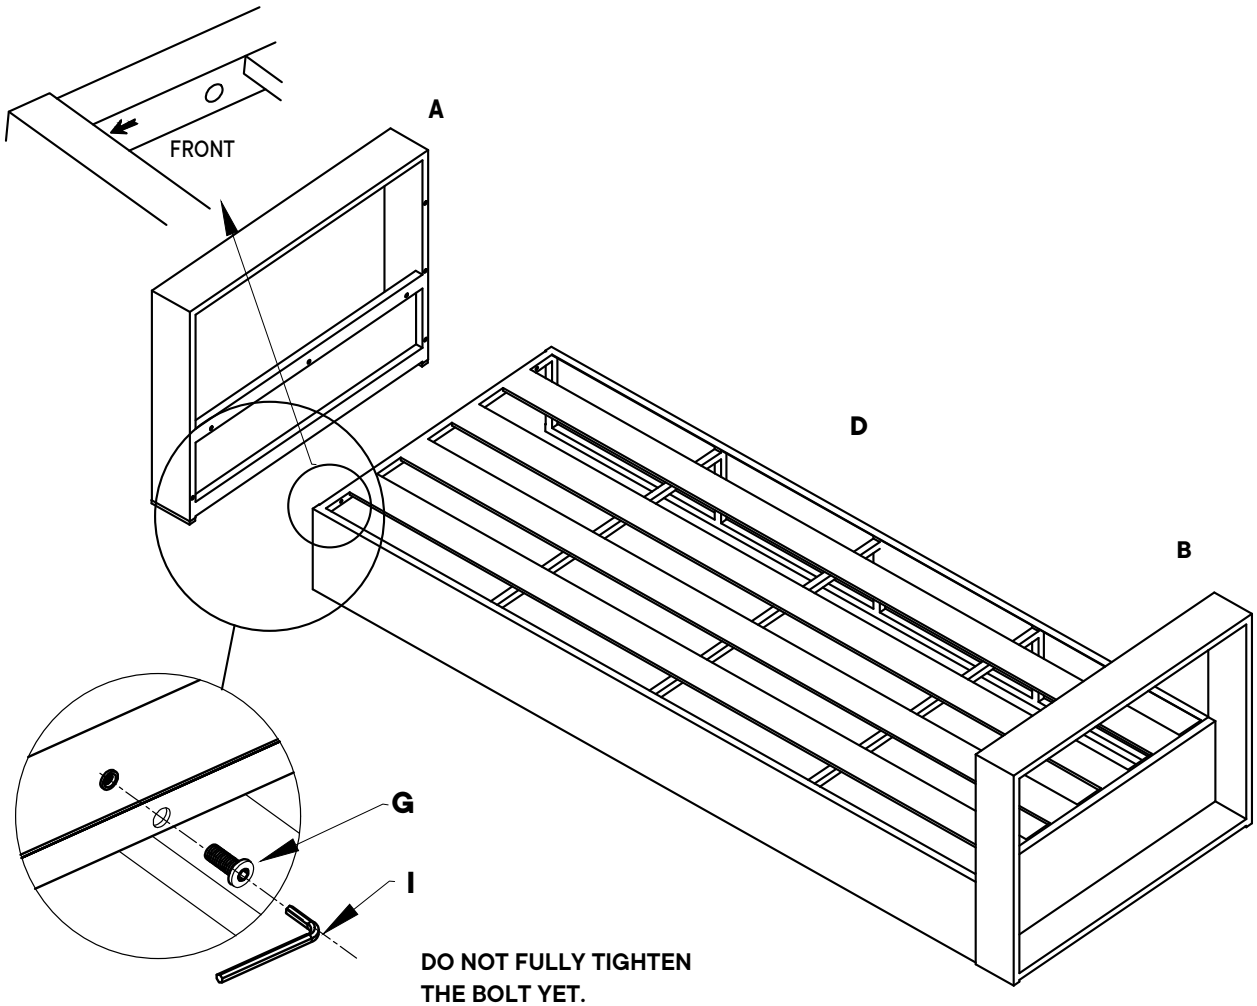

DO NOT FULLY TIGHTEN THE BOLT YET.

Step 2

HARDWARE

H	Bolt M6 x 20mm	x4
I	Allen Key 4mm	x1

COMPONENTS

A	Left Arm Rest	x1
B	Right Arm Rest	x1
C	Back Rest	x1
D	Sofa Base	x1

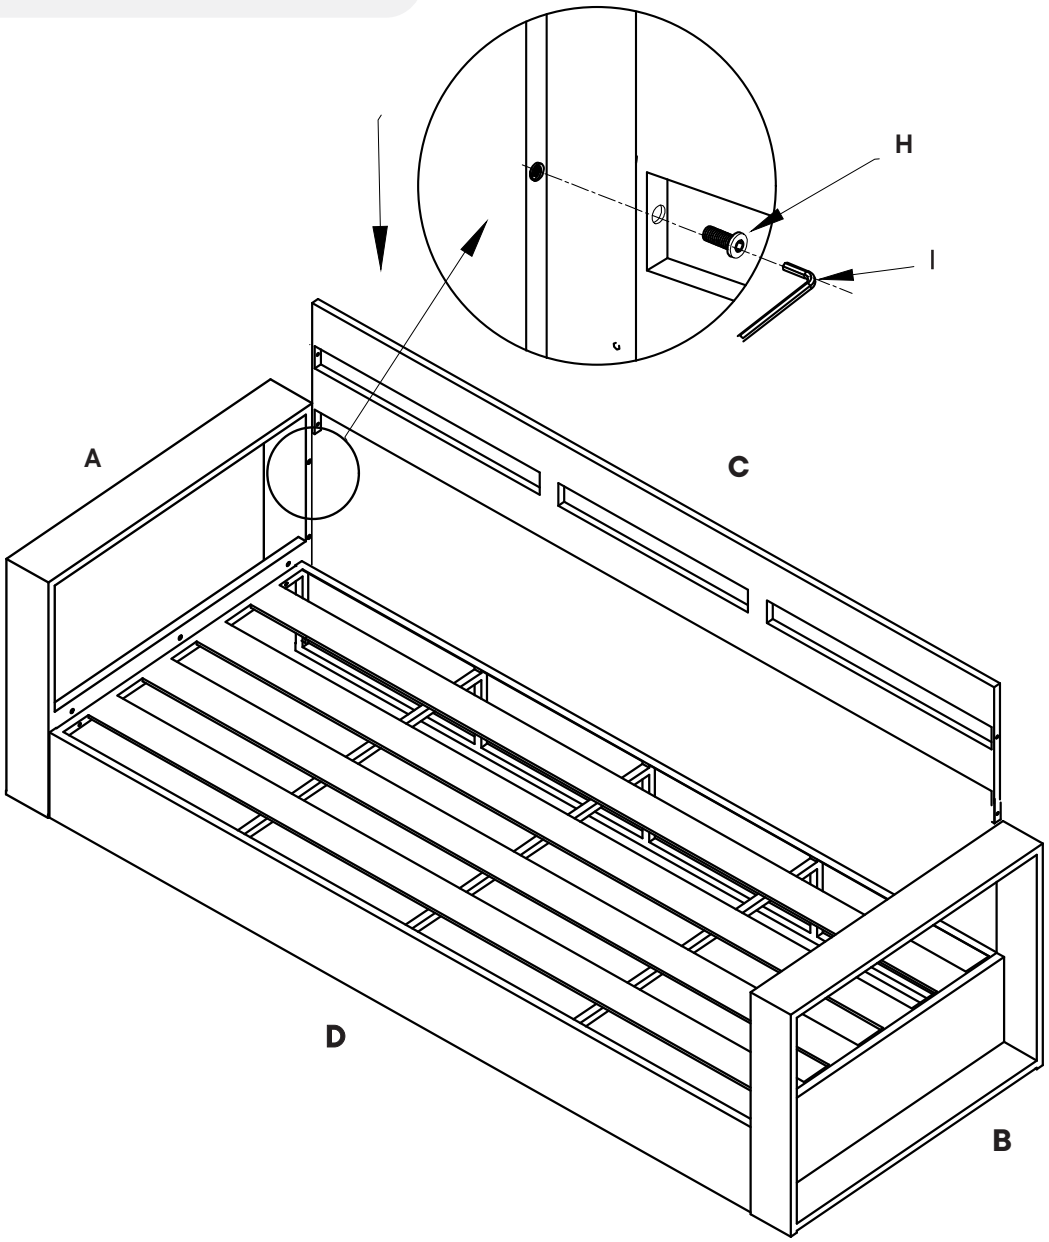

FULLY TIGHTEN ALL BOLTS TO COMPLETE THE ASSEMBLY.

Step 3

COMPONENTS

E	Backrest Cushion	x3
F	Seat Cushion	x1

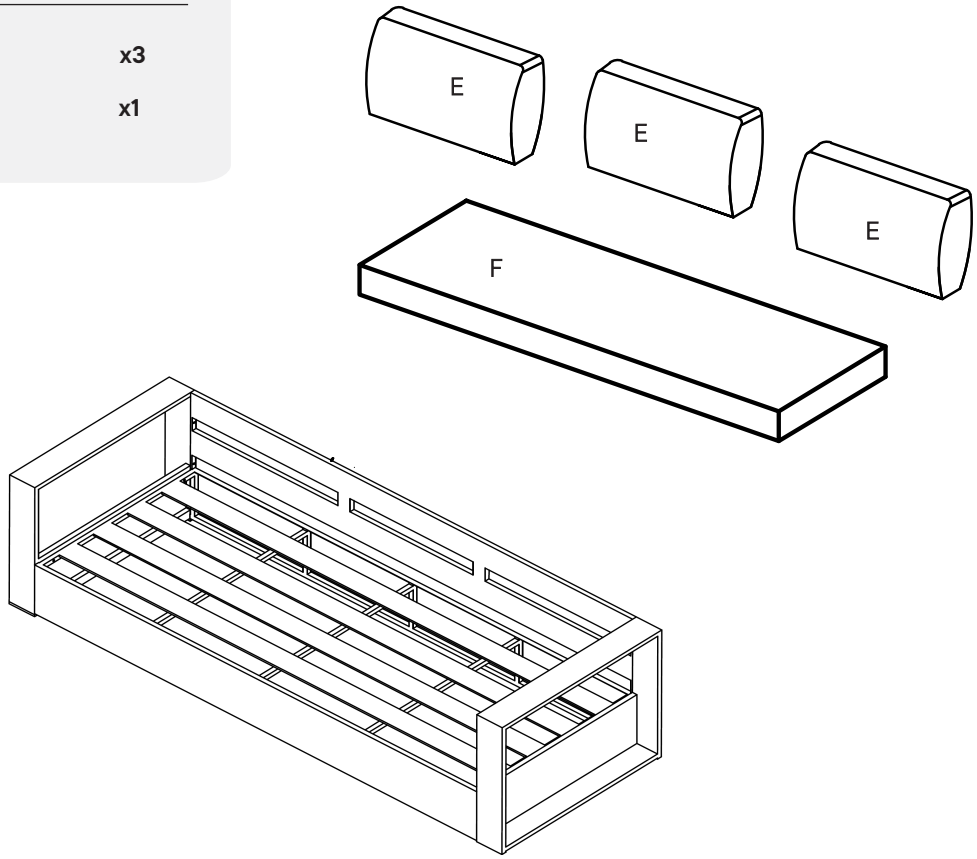

*modway

Great job!

Sofa assembly is complete .

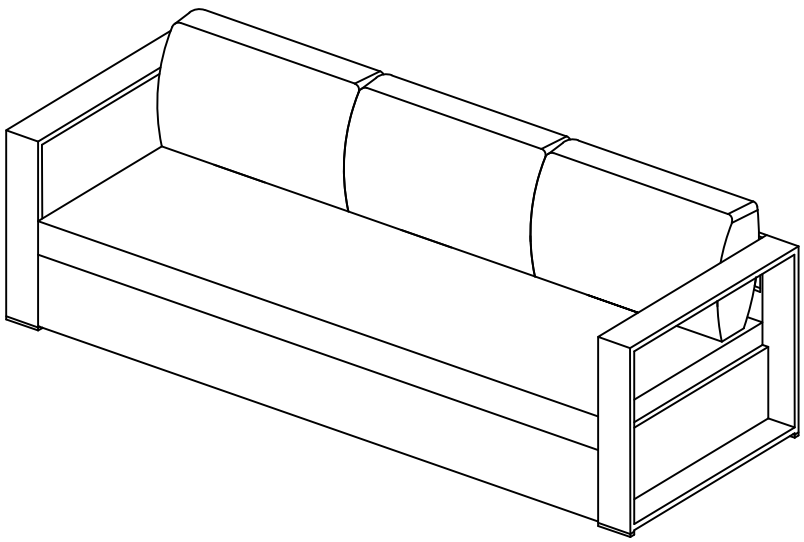

CARING FOR YOUR ITEM

For indoor or outdoor use.

Not contract grade.

Clean using a non-abrasive cloth and a mild cleaner.

Never use harsh chemicals, as they could damage the finish or integrity of the item.

CONNECT WITH US!

Tag us **@modway_furniture** and **#modway** for a chance to be featured.

ASSEMBLY INSTRUCTIONS

EEI-5677

V1.07.30.21

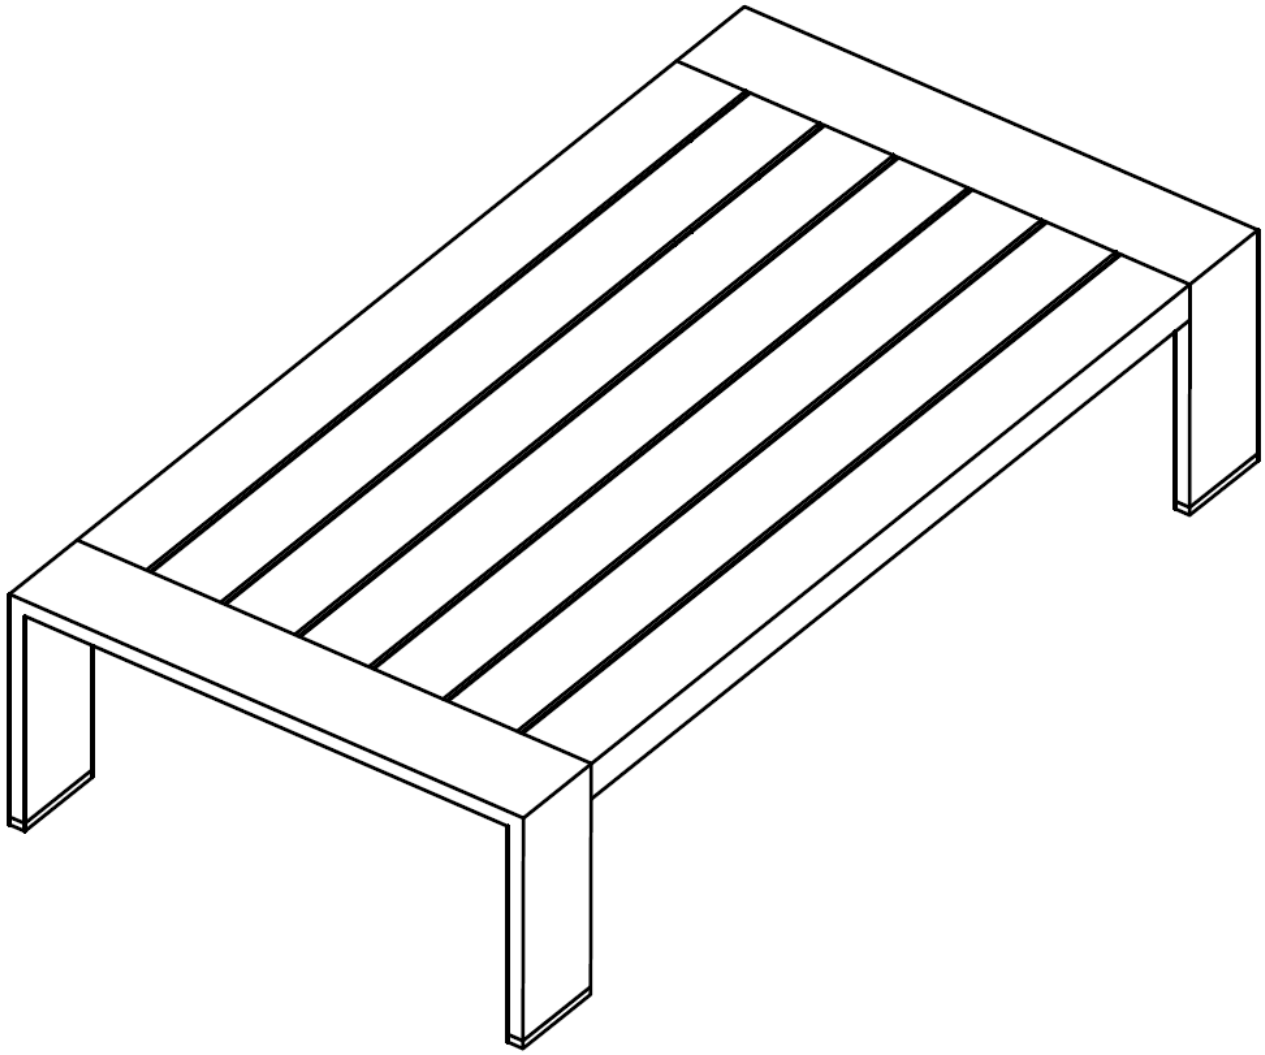

Questions? Contact us!

609.256.9000 • cs@modway.com
www.modway.com

Let's get started!

*modway

Read through all of the instructions before starting

Care instructions are listed in the last step of this manual

Approx. 30 minutes assembly time

Make sure you have all parts and components before discarding any packing materials

2 people recommended for assembly

Only use hand tools to assemble this item. Do not use power tools. Do not tighten bolts or screws completely until all hardware is lined up and inserted into the holes.

Do not over-tighten screws and bolts to avoid stripping the hardware or cracking the item.

Assemble your item on a flat, carpeted area, with plenty of space to work. This will prevent damage and scratches to your floors or the item while you're assembling the product.

Keep all components and packaging out of reach of children or animals to avoid risk of choking or suff ocation.

Furniture components:

A	**Left & Right Table Leg**	**x1**
B	**Tabletop**	**x1**

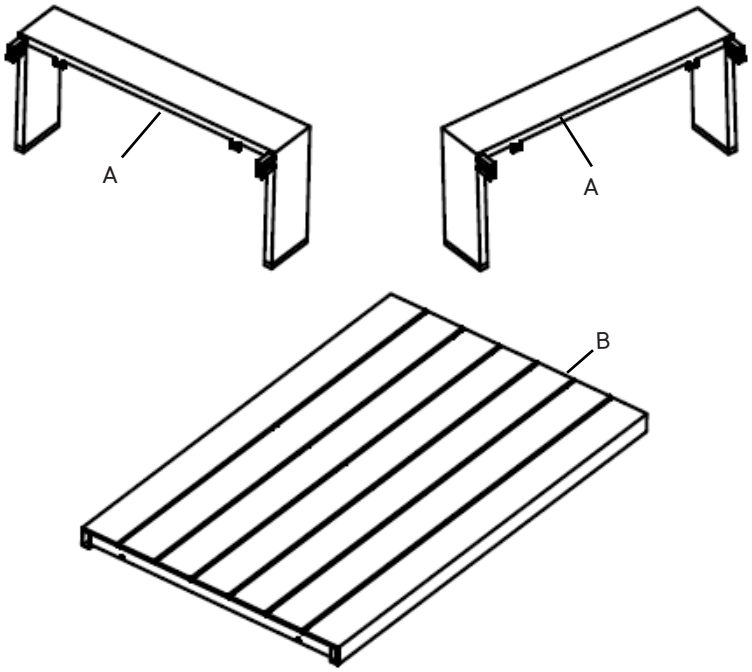

Provided hardware:

C		**Bolt M6 x 20mm**	**x4**
D		**Bolt M6 x 10mm**	**x4**
E		**Allen Key**	**x1**

Wait!

Missing parts or hardware? Need assistance?
Contact us before returning your item. We're here to help!
609.256.9000 • cs@modway.com

Step 1

HARDWARE

C	Bolt M6 x 20mm	x4
D	Bolt M6 x 10mm	x4
E	Allen Key	x1

COMPONENTS

A	Left & Right Table Leg	x1
B	Tabletop	x1

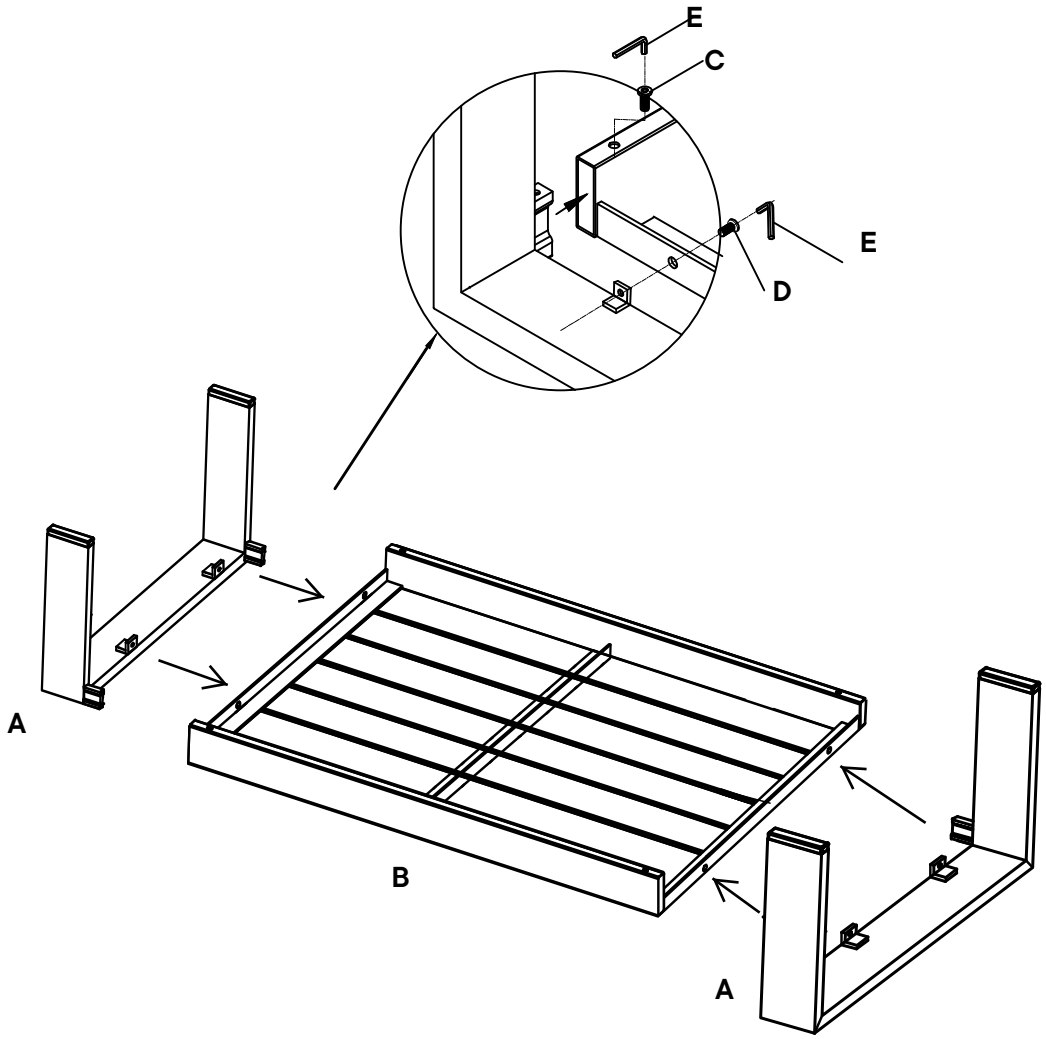

Great job!

Coffee table assembly is complete .

CARING FOR YOUR ITEM

For indoor or outdoor use.

Not contract grade.

Clean using a non-abrasive cloth and a mild cleaner.

Never use harsh chemicals, as they could damage the finish or integrity of the item.

CONNECT WITH US!
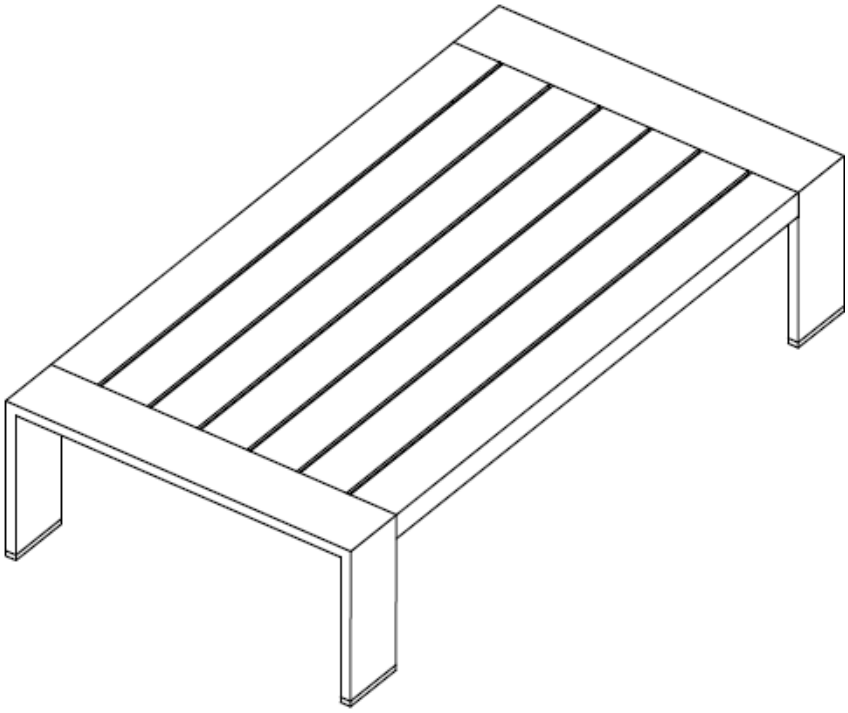
Tag us **@modway_furniture** and **#modway** for a chance to be featured.