


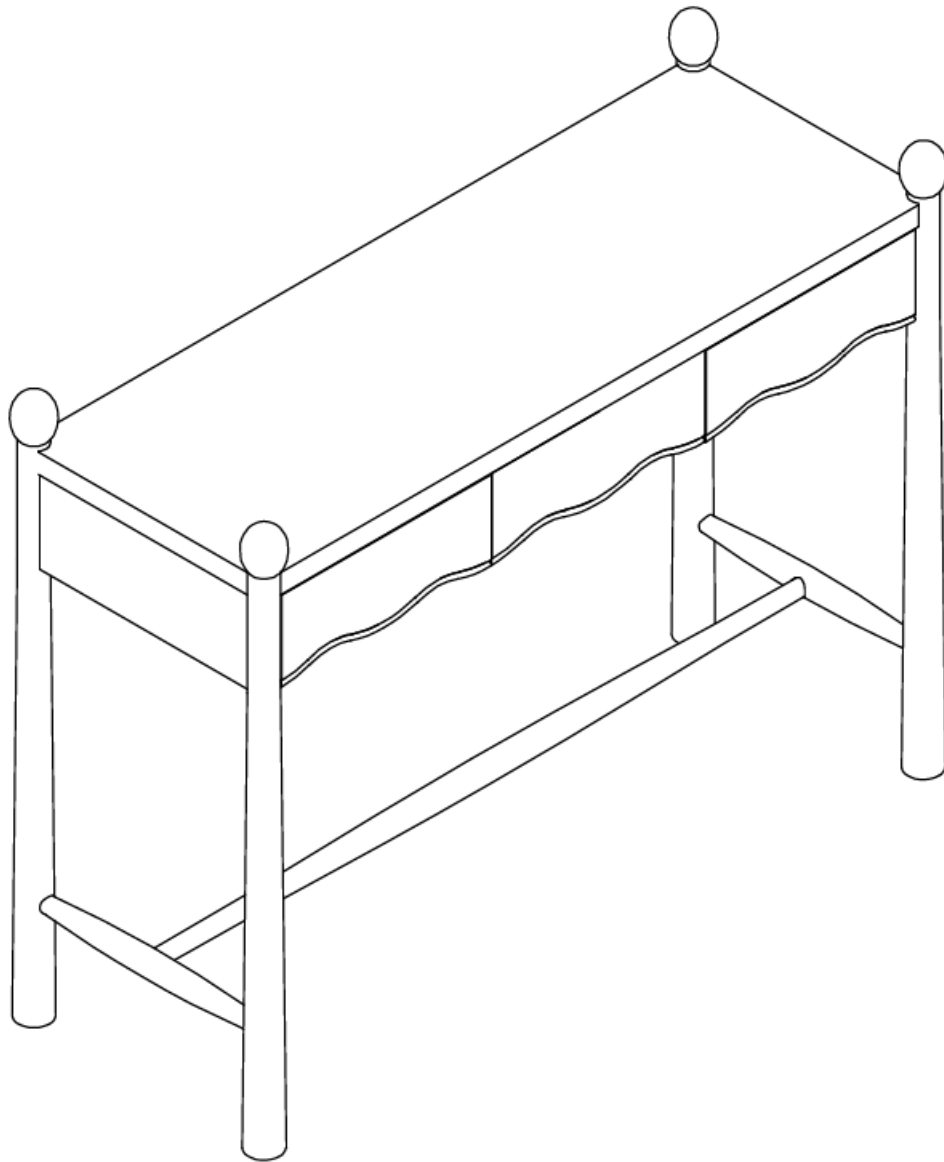

ASSEMBLY INSTRUCTIONS

Console Table

EEI-7794 / V0.04.27.26

modway



Questions? Contact us!
609.256.9000
cs@modway.com

Welcome.

Let's get started.

Before you begin, here are some things to keep in mind:

Assembly will take most people **about 30 minutes**. Consider having a friend help you!

Only use hand tools to assemble this item. Do not use power tools. Do not tighten bolts or screws completely until all hardware is lined up and inserted into the holes.

Read through all of the instructions before starting. Make sure you have all parts and components before discarding any packing materials.

Do not over-tighten screws and bolts to avoid stripping the hardware or cracking the item.

Assemble your item on a flat, carpeted area, with plenty of space to work. This will prevent damage and scratches to your floors or the item while you're assembling the product.

Keep all components and packaging out of reach of children or animals to avoid risk of choking or suffocation.

Care instructions are listed in the last step of this manual.

WAIT!




Missing parts or hardware? Need assistance?
Contact us before returning your item.
We're here to help!



HARDWARE INCLUDED IN THE BOX:

1		Ø¼" x 30mm Bolt	x4
2		Ø¼" x 70mm Bolt	x8
3		Ø6 Spring washer	x12
4		Ø6 x 16mm Flat washer	x12
5		Allen Key	x1
6		Screw 40mm	x2

FURNITURE COMPONENTS:

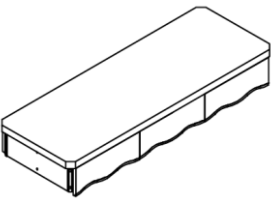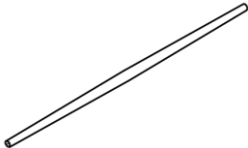		
A	B	C
A Top Frame	B Leg Frame	C Bottom Bar
x1	x2	x1

WHAT YOU NEED:



Phillip




Phillip Head Screwdriver

STEP 01

COMPONENTS

- A** Top Frame x1

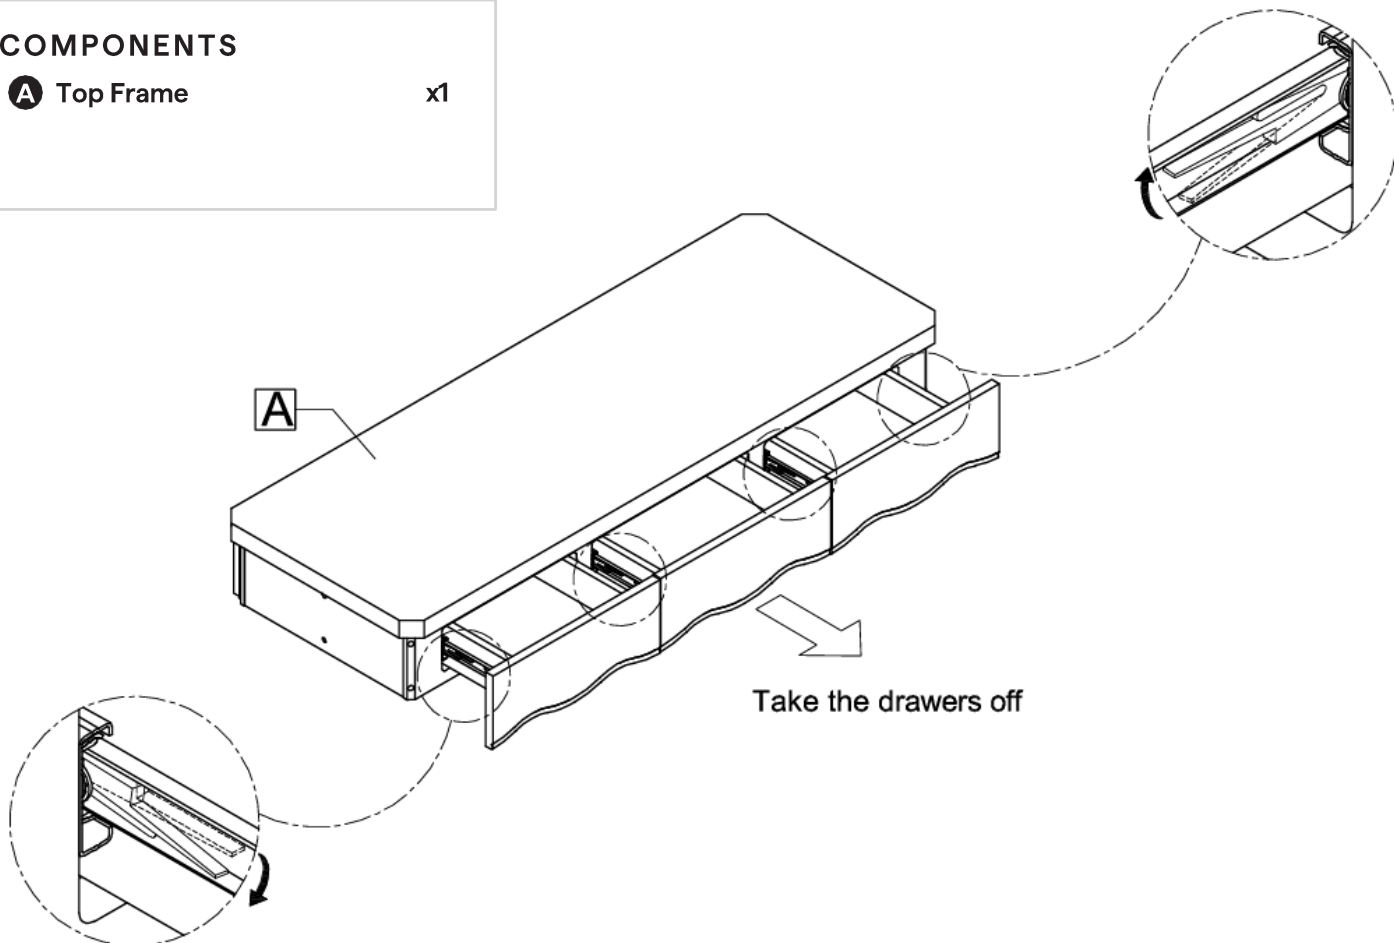

STEP 02

HARDWARE


- 1** Ø¼" x 30mm Bolt x2
2 Ø¼" x 70mm Bolt x4
3 Ø6 Spring washer x6
4 Ø6 x 16mm Flat washer x6

COMPONENTS

- A** Top Frame x1
B Leg Frame x1

TOOLS

- 5** Allen Key x1

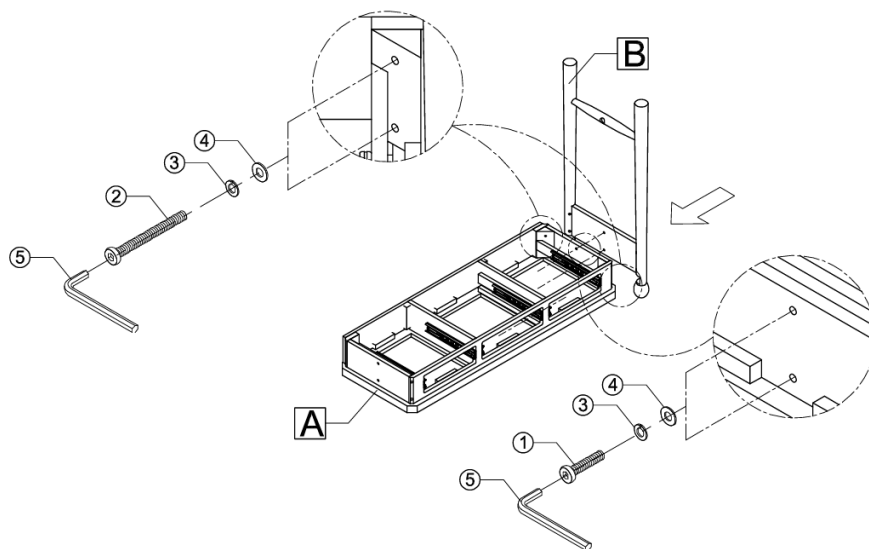

STEP 03

HARDWARE


- | | |
|-------------------------|----|
| ① Ø¼" x 30mm Bolt | x2 |
| ② Ø¼" x 70mm Bolt | x4 |
| ③ Ø6 Spring washer | x6 |
| ④ Ø6 x 16mm Flat washer | x6 |

COMPONENTS

- | | |
|--------------|----|
| Ⓐ Top Frame | x1 |
| Ⓑ Leg Frame | x2 |
| Ⓒ Bottom Bar | x1 |

TOOLS

- | | |
|-------------|----|
| ⑤ Allen Key | x1 |
|-------------|----|

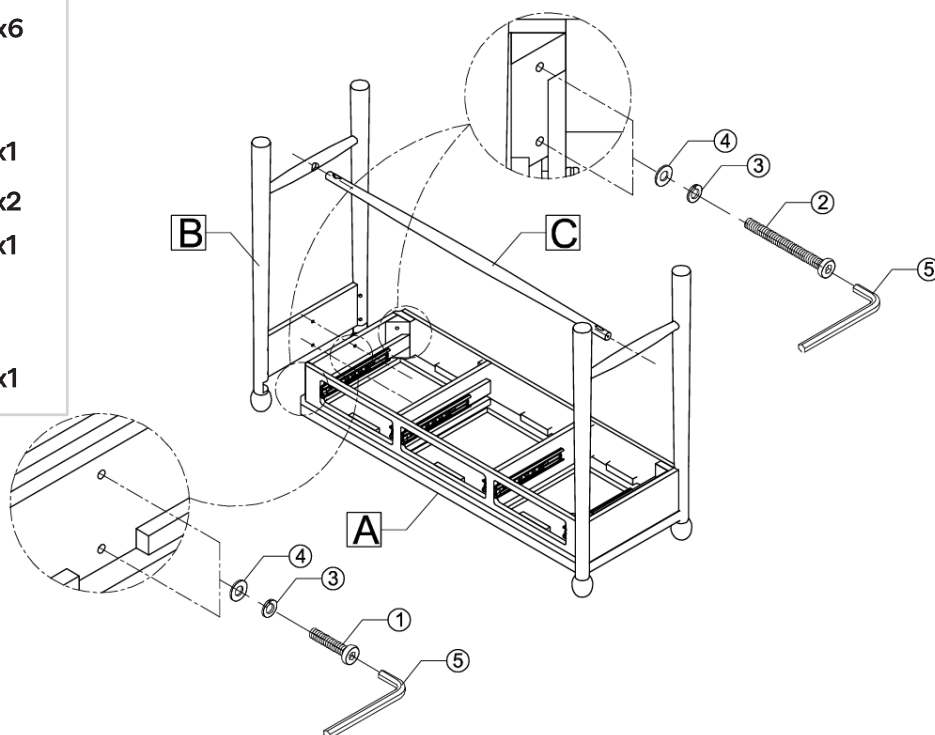


STEP 04

HARDWARE

- | | |
|--------------|----|
| ⑥ Screw 40mm | x2 |
|--------------|----|

COMPONENTS


- | | |
|--------------|----|
| Ⓐ Top Frame | x1 |
| Ⓑ Leg Frame | x2 |
| Ⓒ Bottom Bar | x1 |

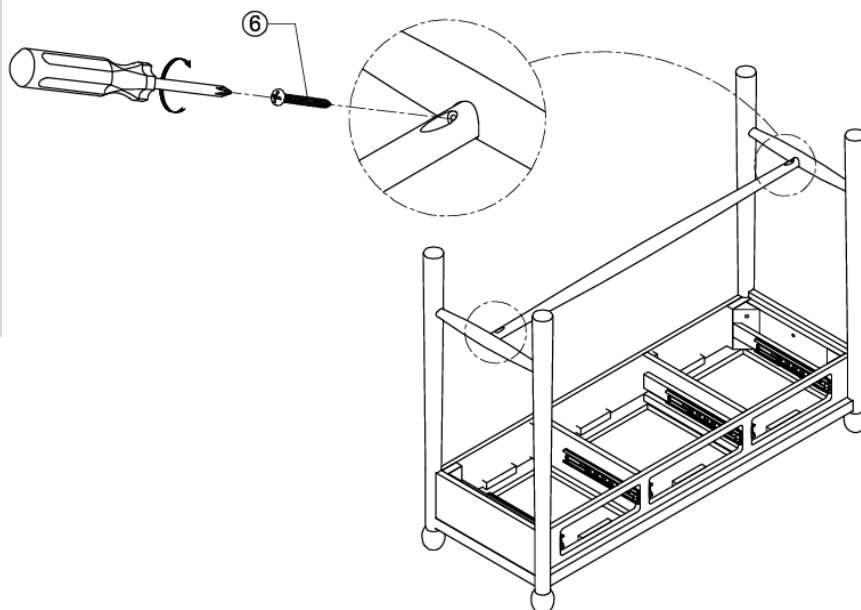

STEP 05

COMPONENTS

- | | |
|---------------------|----|
| A Top Frame | x1 |
| B Leg Frame | x2 |
| C Bottom Bar | x1 |

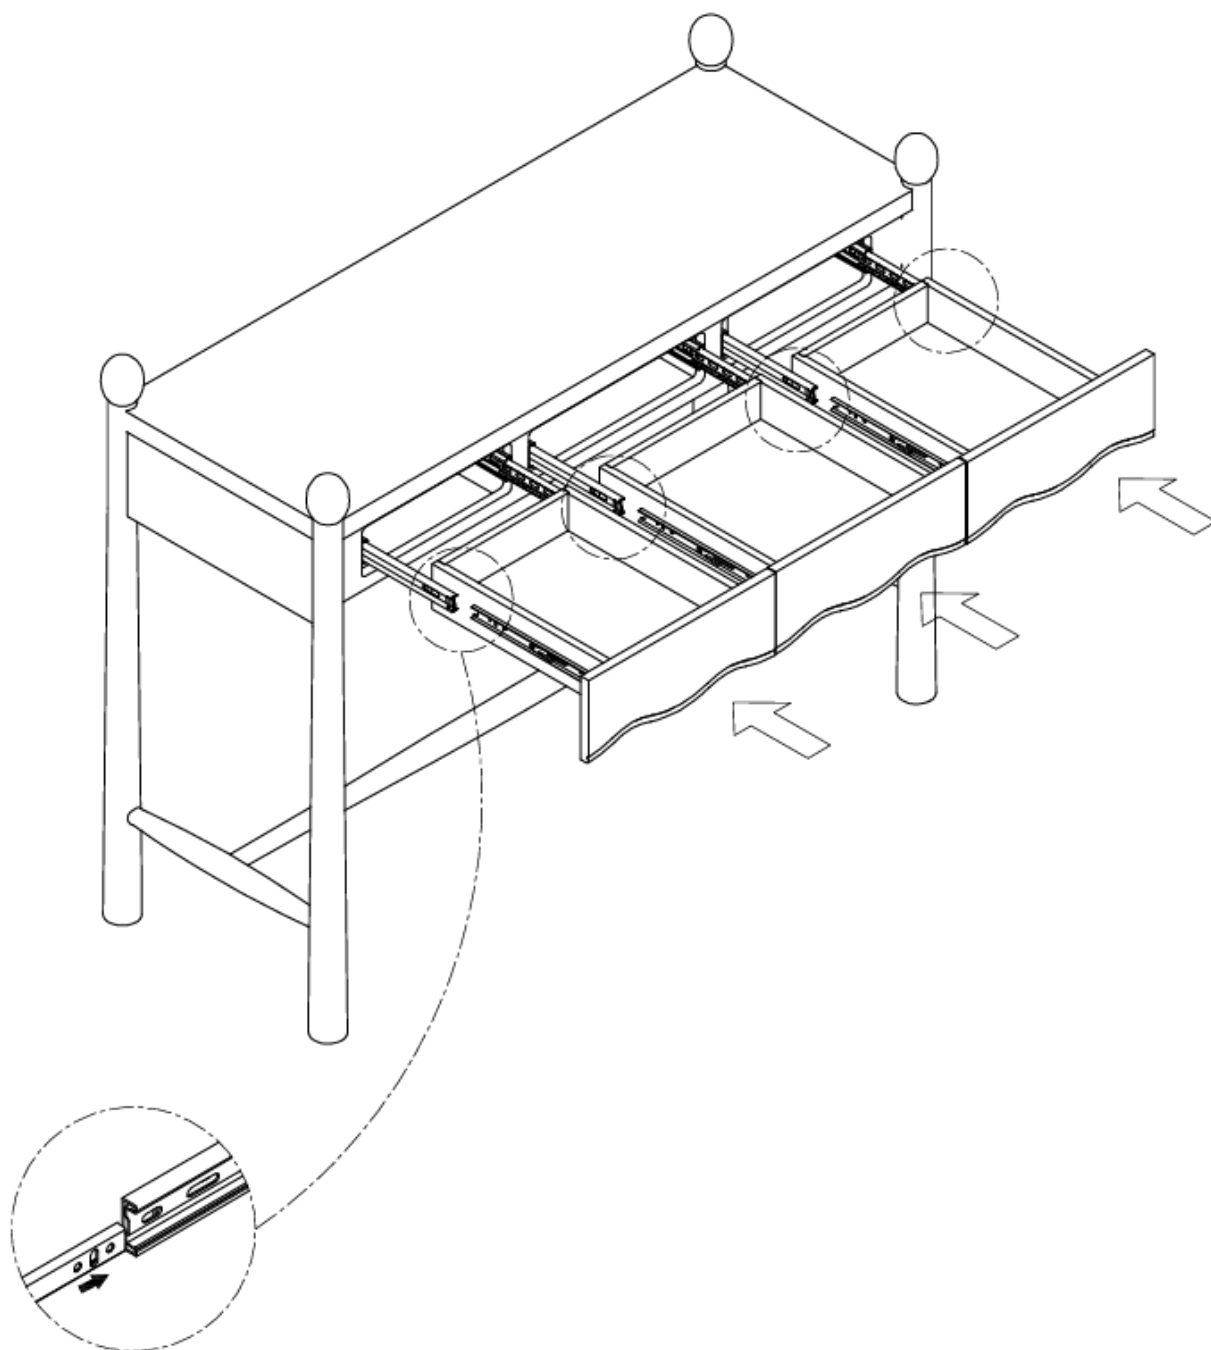


Great job!

Your new drawer console is complete.

CARING FOR YOUR ITEM

- Depending on use, it may be necessary to tighten the hardware from time to time, so please save the tools that have been provided.
- Not contract grade.
- Clean using a non-abrasive cloth and a mild cleaner.

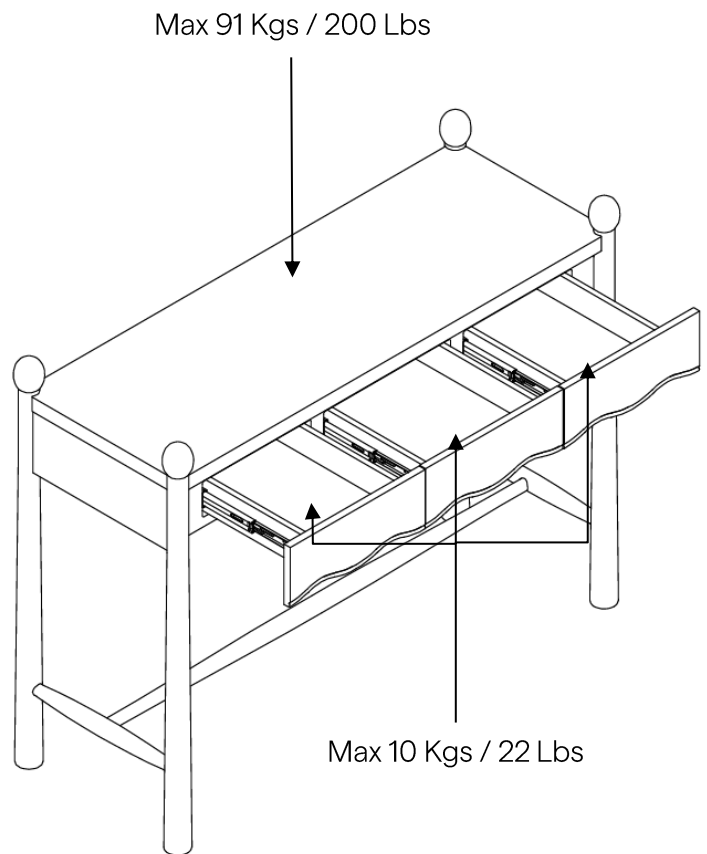

CONNECT WITH US!

Tag us **@modway_furniture** and **#modway** for a chance to be featured.

modway



Questions? Contact us!

609.256.9000

cs@modway.com