



**TOV**

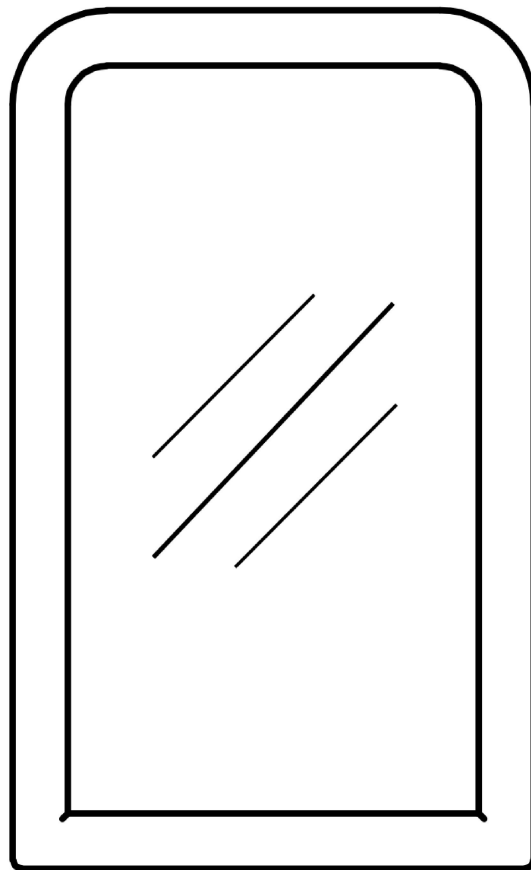

**Heidi Oversized  
Upholstered Floor  
Mirror**

**DON'T BE BORING.**

# Hardware and Components



..... **A** x1pc




..... **B** x4pcs(19mm)



..... **C** x4pcs(30mm)



..... **D** x2pcs

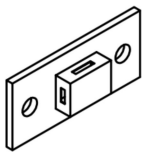

..... **E** x8pcs



..... **F** x4pcs

## Step 1

Open bag of hardware and mirror.

This hardware bag will be fixed  
on the main box.

Look for the red streamer.



## Step 2

Mark four drill points on your wall with the help of brackets (E).



## Step 3

Drill the holes into the wall.





## Step 4

Put the anchors (F) into the holes on the wall .



## Step 5

Install the brackets (E) into the holes on the wall using the screws (C).

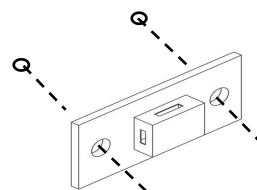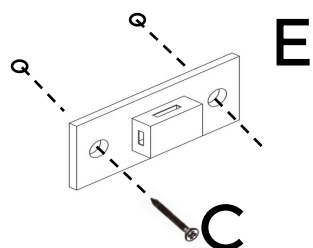



## Step 6

A. Install another set of brackets (E) on the back of the mirror with screws (B), according to the position of the brackets installed on the wall

B. Thread the strap (D) through the openings of both brackets and also through the ratcheting "buckle".

C. Tighten the strap until several clicks are heard.

D. Complete! The mirror is now securely fixed to the wall.

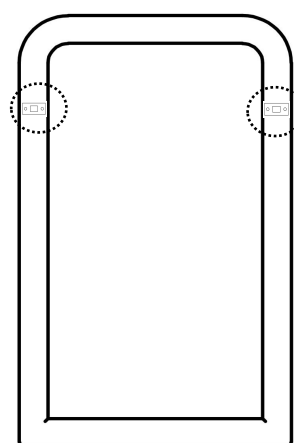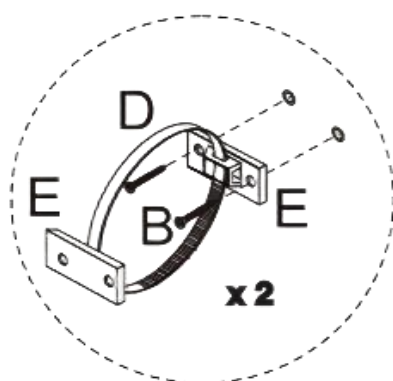

Stuck?

Contact our team @ 516-888-3355

Scan for product care!



# TOV



## Follow us!

Show your new purchase some love by tagging it on our Instagram!

 @tovfurniture

 516-888-3355

 hello@tovfurniture.com

 www.tovfurniture.com

If the future is female—your furniture should be, too. No mahogany in sight. Sexy settees shaped like lips. Price points for any budget. At TOV, we do things differently.