



TOV

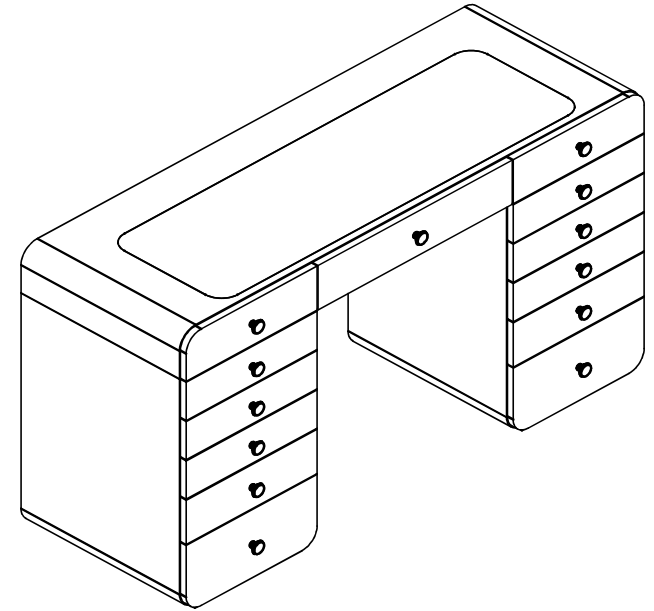

**Hollywood
Vanity Desk**

DON'T BE BORING.

Hardware and Components

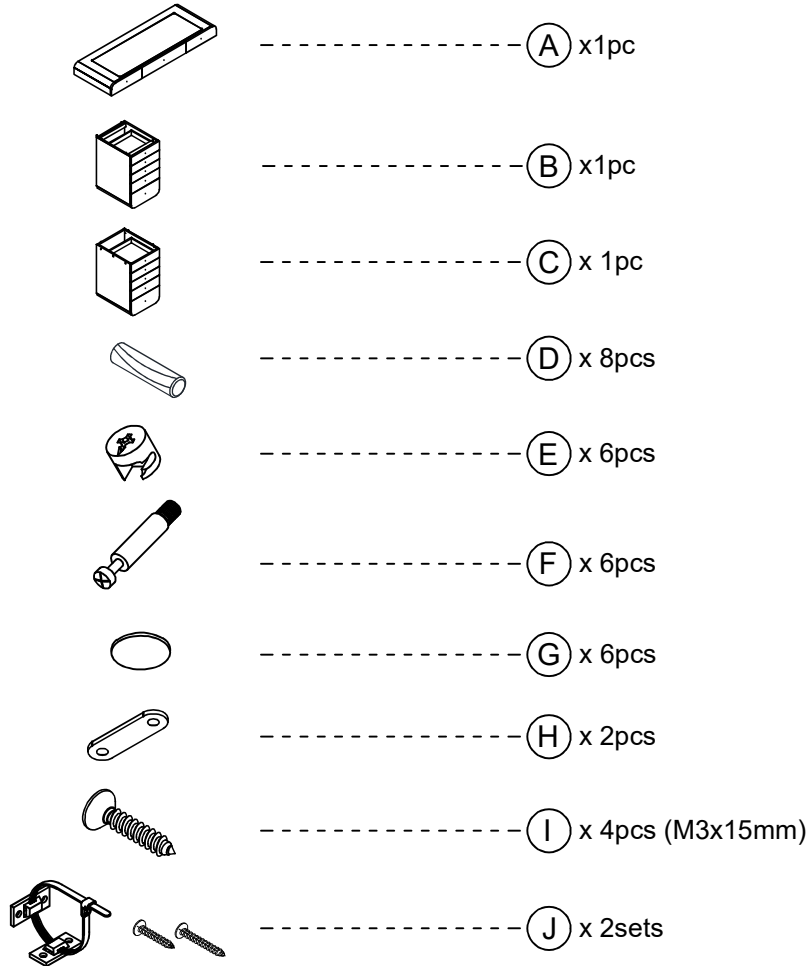

Step 1

Open box of hardware and legs.

This hardware box will be a smaller box inside of the main box. Look for the red streamer.




TOV



Follow us!

Show your new purchase some love by tagging it on our Instagram!

 @tovfurniture

 516-888-3355

 hello@tovfurniture.com

 www.tovfurniture.com

If the future is female—your furniture should be, too. No mahogany in sight. Sexy settees shaped like lips. Price points for any budget. At TOV, we do things differently.

Complete!

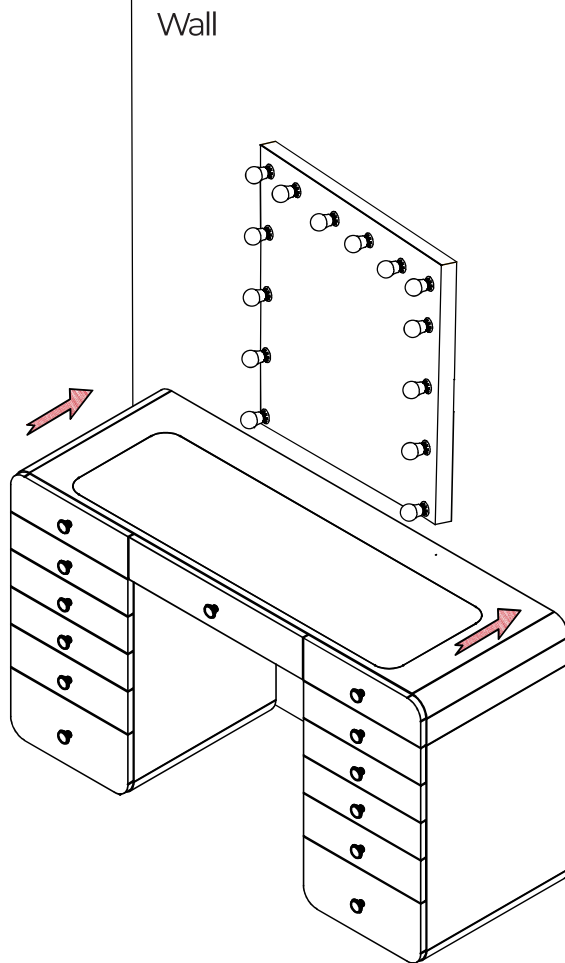


Image of the dis-assembly of the Lola Vanity Mirror base stand.


Stuck?

Contact our team @ 516-888-3355

Scan for product care!




Step 2

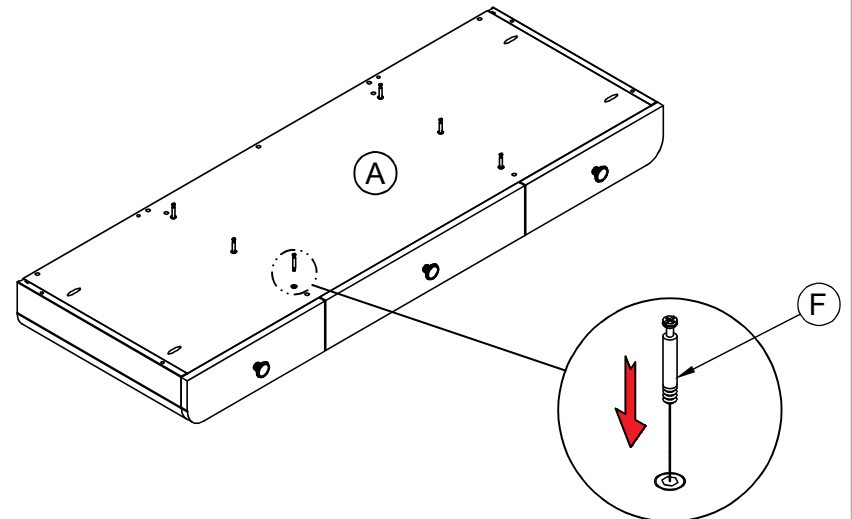


Insert **(F)** into the pre-drilled holes on the bottom side of **(A)** (the top panel). Make sure it is fully inserted and facing the correct direction as shown.

Step 3

Connect part **(A)** to parts **(B)** and **(C)** using wooden dowels

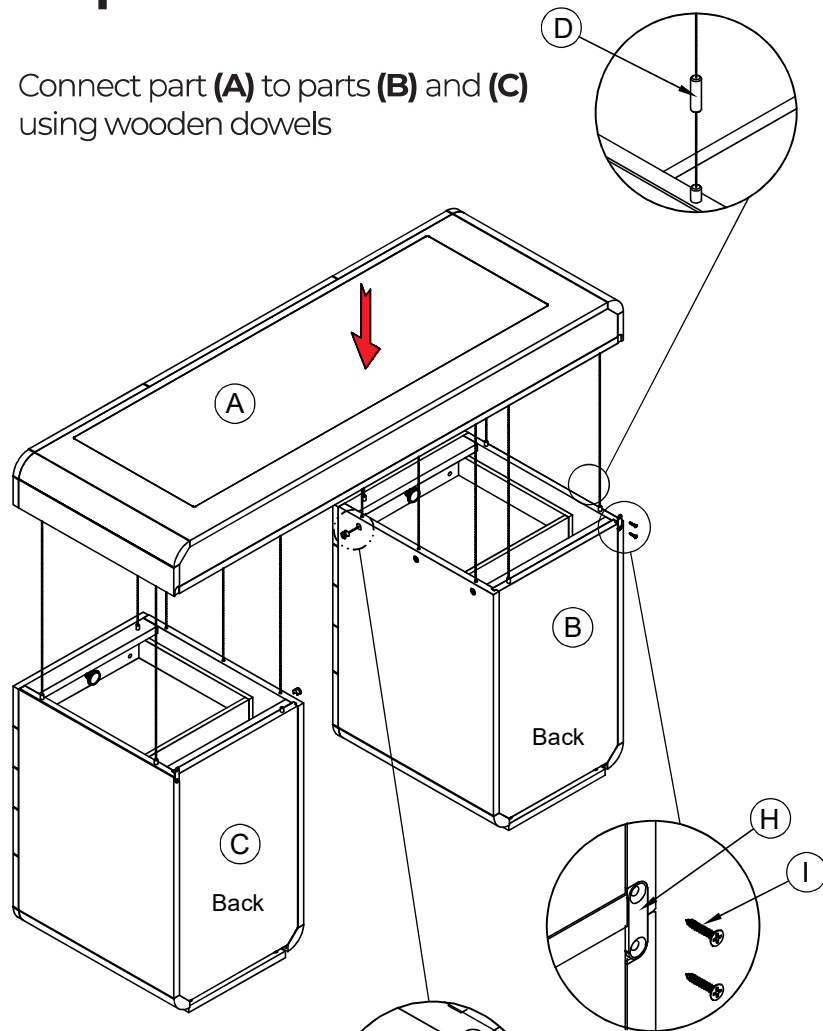


Attach **(E)** and **(G)** to **(B)** and **(C)** as shown in the illustration.

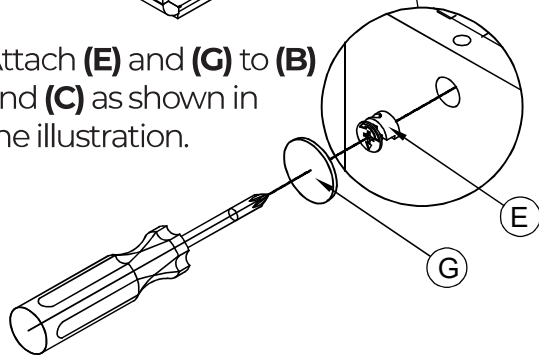

Screw **(I)** into **(H)** as shown in the illustration.


Option 2

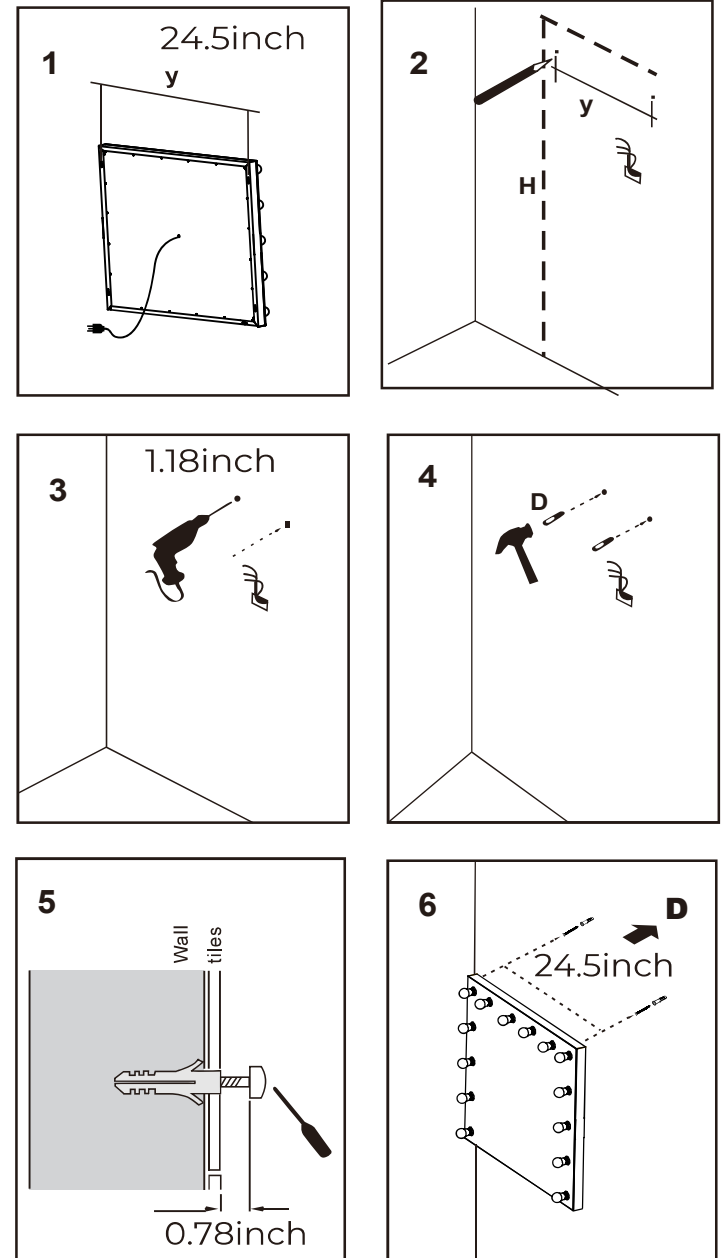

The Hollywood pairs perfectly with TOV's Lola Vanity Mirror. They are designed to go together.


The Lola Vanity Mirror has a base built onto it if you choose to use it elsewhere. For the Hollywood Vanity, we suggest removing that base and using the keyhole hardware to attach it to the wall behind your Vanity.

Option 1

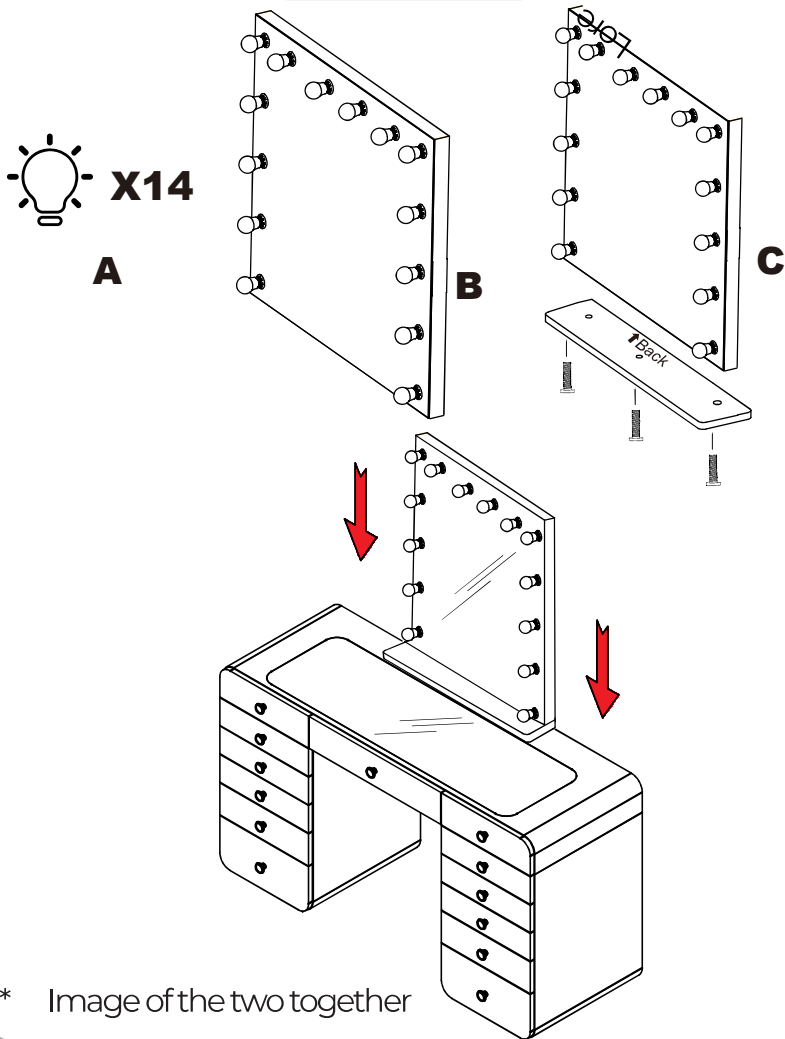


Step 4

Pull the center drawer out as shown.

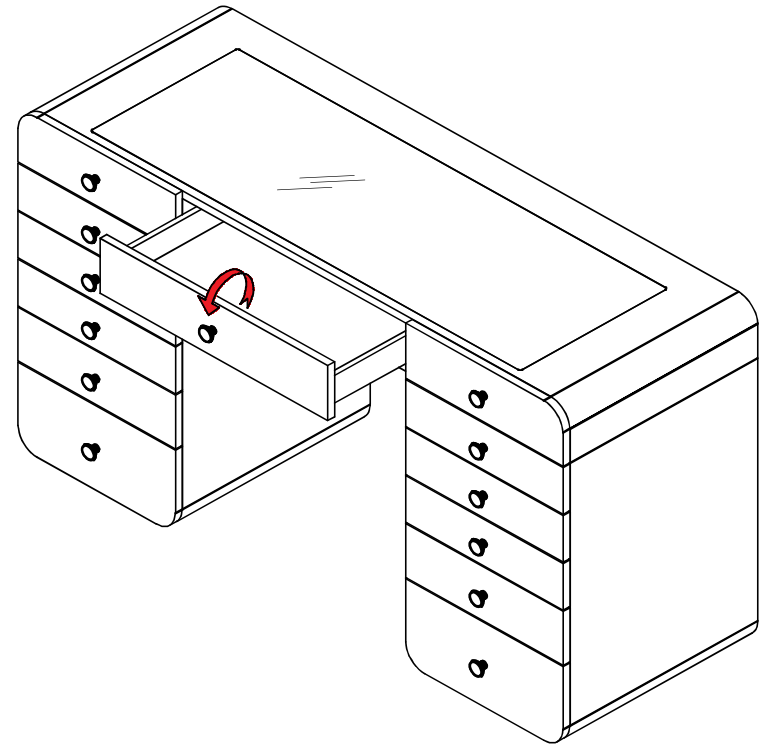

Step 5

Reach inside the compartment and push the glass panel upward as shown in the illustration.

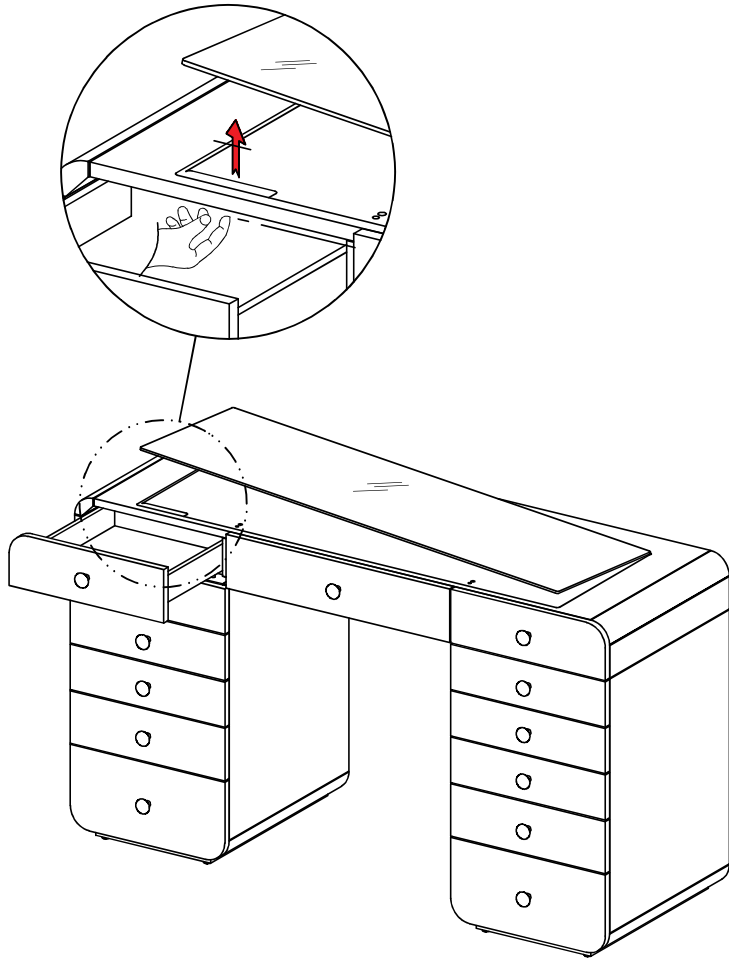

Step 6

Install the anti-tip kit (**J**) on the back of the desk as shown in the illustration.

