

TOV



Follow us!

Show your new purchase some love by tagging it on our Instagram!

 @tovfurniture


 516-888-3355

 hello@tovfurniture.com

 www.tovfurniture.com

If the future is female—your furniture should be, too. No mahogany in sight. Sexy settees shaped like lips. Price points for any budget. At TOV, we do things differently.

TOV

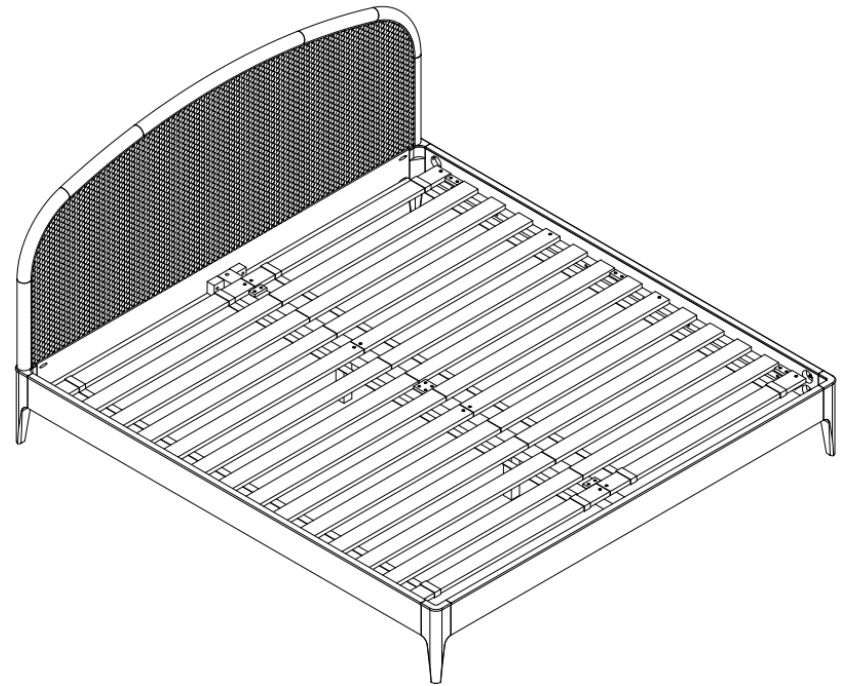


Mico Rattan Bed

DON'T BE BORING.

Step 6

- A.** Unroll slatroll (D) and place it on bedframe. Slats need to be straight and tight.
- B.** Secure the slats in place by using screws (L) at the head, middle, and foot positions on both sides and support bar.
- C.** Your bed is complete, place mattress on slatroll and enjoy your new bed!

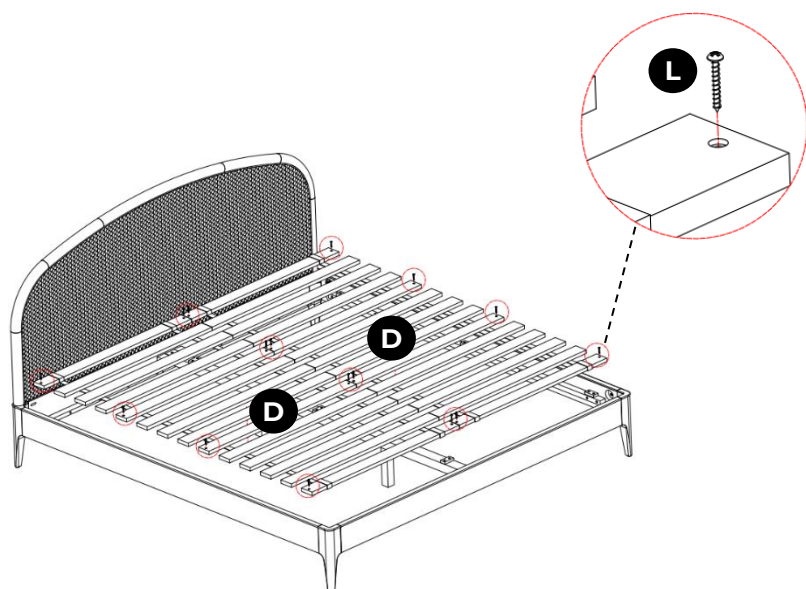


Stuck?
Contact our team @ 516-888-3355

Scan for product care!



Hardware and Components

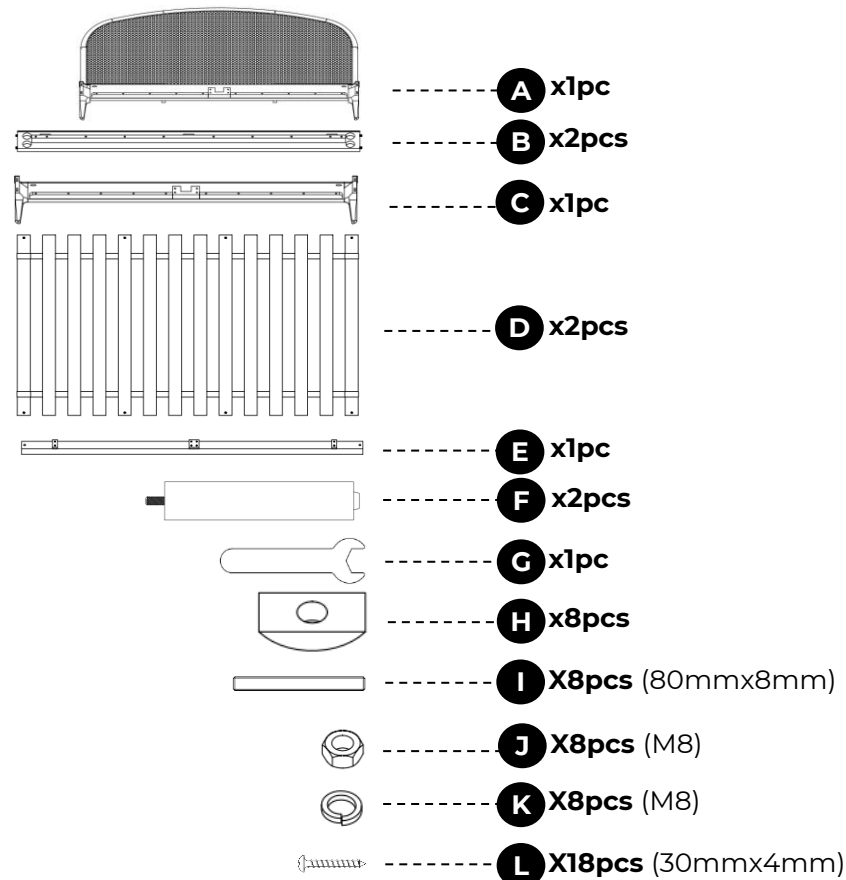

Step 1


Open box of hardware and legs.

This hardware box will be a smaller box inside of the main box. Look for the red streamer.




Step 2

A. Attach the 2 support legs (F) to the support bar. Ensure all legs are tight.

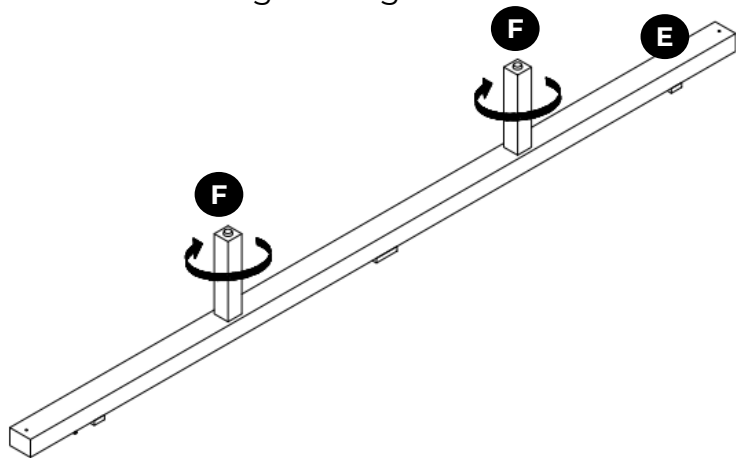


Step 3

A. Insert hardware (I) into the holes on headboard (A) and footboard (C)

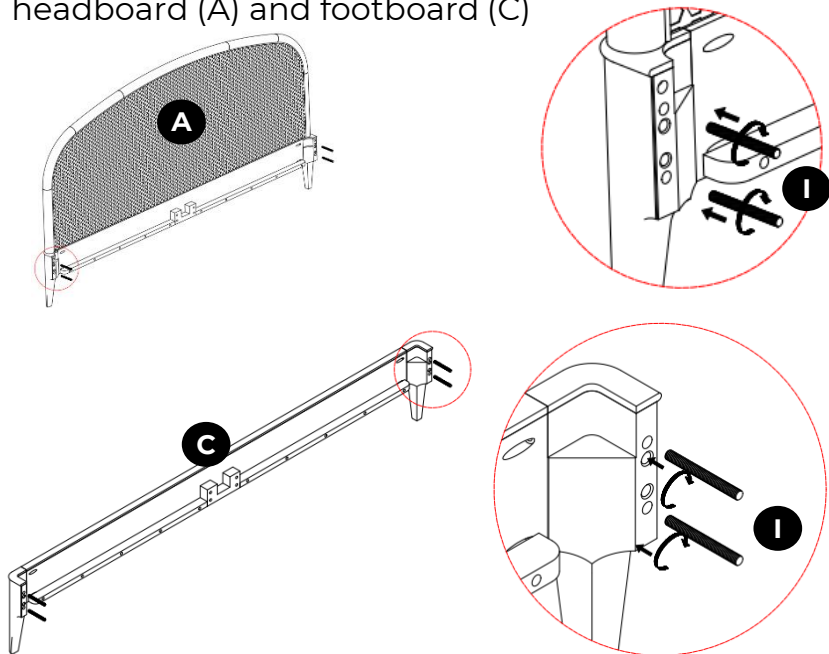


Step 4

A. Attach both end of side rails (B) to headboard (A) and footboard (C) with hardware (H), (J) and (K) using wrench (G).

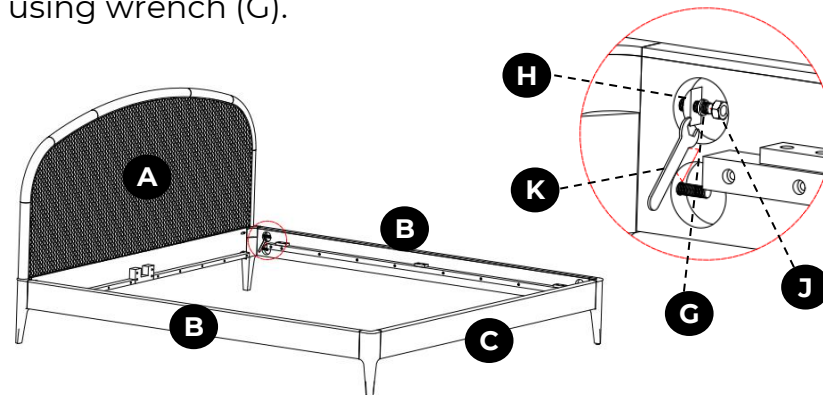

Step 5

A. Attach the center support bar (E) with hardware (L) as shown.

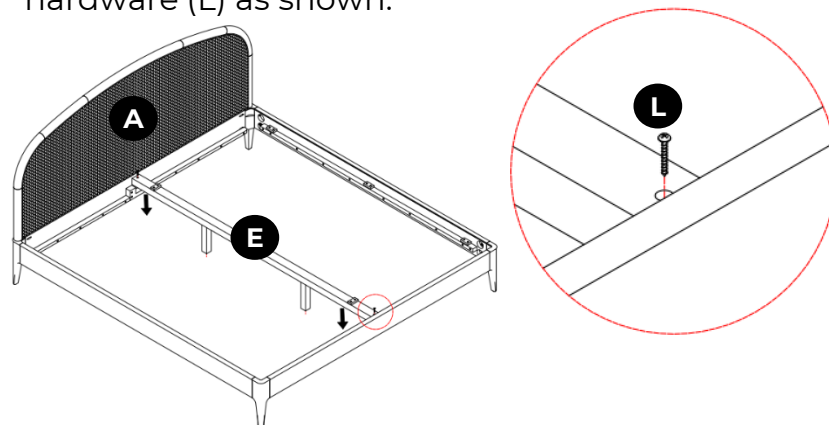

Stuck?
Contact our team @ 516-888-3355

Scan for product care!

