TOV

Follow us!

Show your new purchase some love by tagging it on our Instagram!

@tovfurniture


516-888-3355

hello@tovfurniture.com

www.tovfurniture.com

If the future is female—your furniture should be, too. No mahogany in sight. Sexy settees shaped like lips. Price points for any budget. At TOV, we do things differently.


TOV

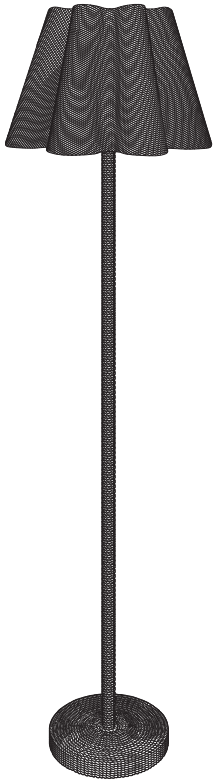

Ondelys Scallop Jute Floor Lamp


DON'T BE BORING.

Hardware and Components

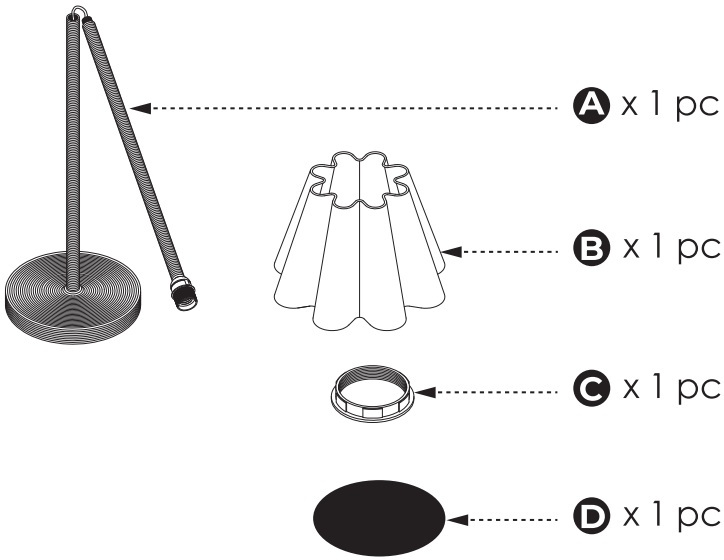


Step 1

Connect the two tubing segments on arch tube & lamp base (A) by twisting them together clockwise until fully tightened. Pull the excess cord length through the bottom of the lamp base on the assembly as shown until you have the desired length.

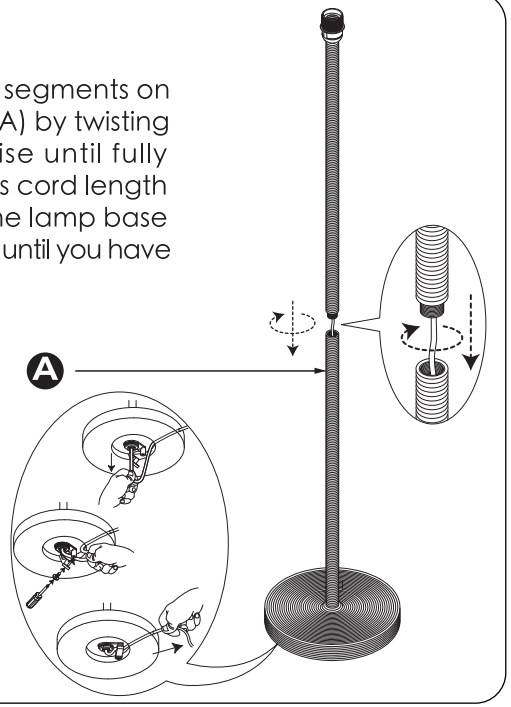


Step 2

Attach the lamp shade (B) on the lamp base (A) and tighten the holder ring (C).
Twist the holder ring (C) clockwise until it is snug.

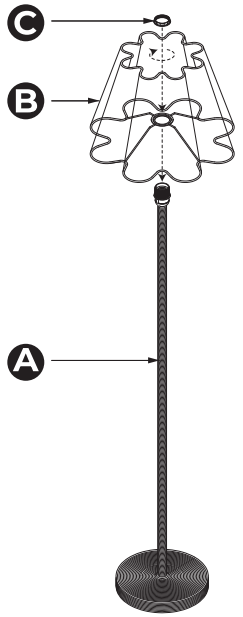

Step 3

Place the lamp into the desired location. Using a second person to assist you, tilt the base of the light slightly and apply fabric pad (D) to the bottom of the base by pulling away the protective film and sticking the adhesive side of the pad to the bottom of the base assembly as shown.

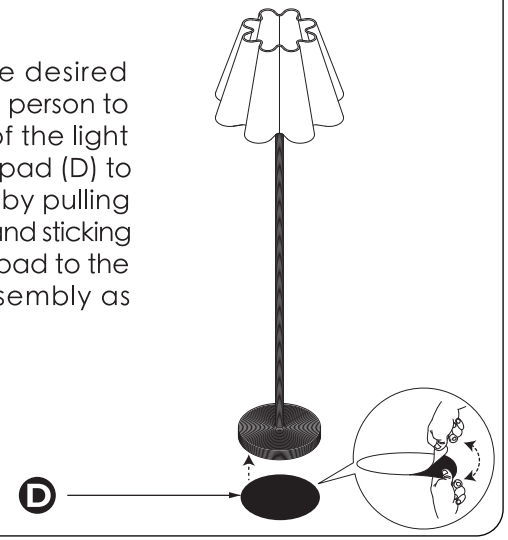

Stuck ?

Contact our team @ 516-888-3355

Scan for product care!