


MOE'S

Assembly Instructions


Alfie Queen Storage Bed Green Stripe

RN-1168-16-0

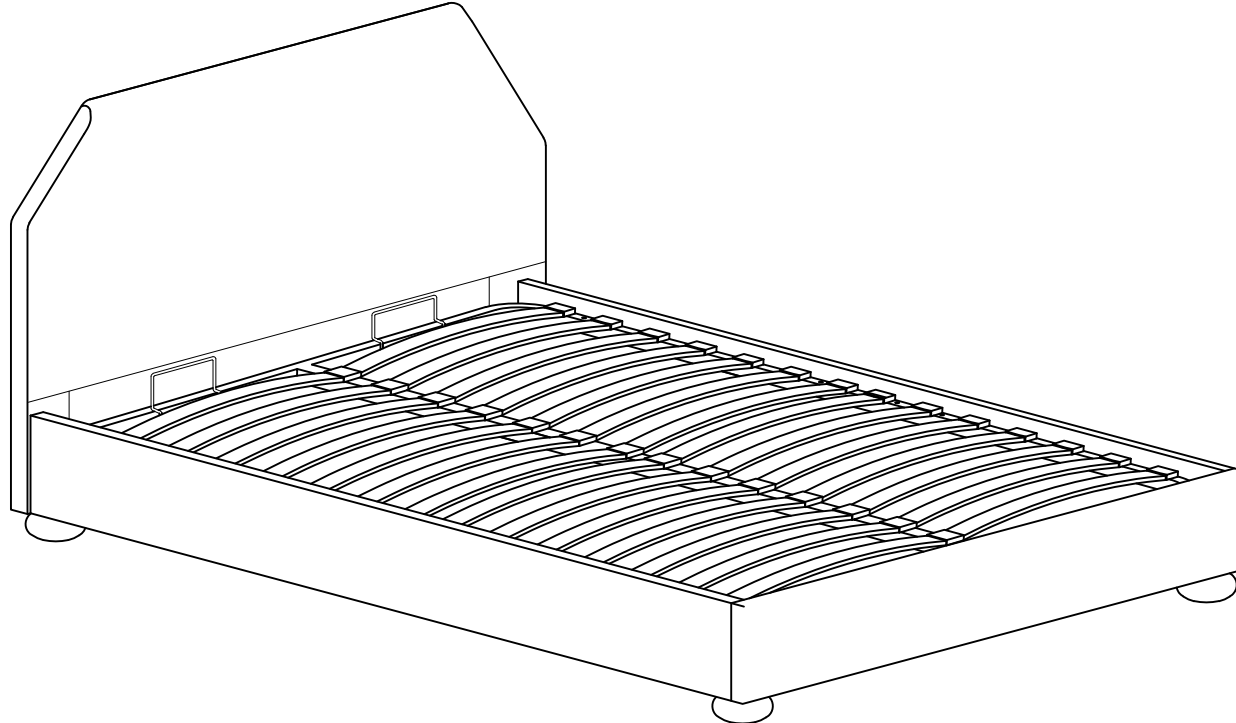

THANK YOU FOR YOUR PURCHASE!

Parts and Hardware

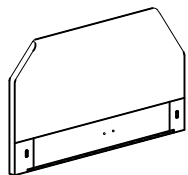

① Headboard=1pc



⑤ Feet=4pcs




⑥ Bracket=2pcs

Notes


Thank you for purchasing this quality product!
Be sure to check all packing material carefully
for small part that may have come loose inside
the carton during shipping.

CAUTION: The item is heavy, assembly
should be performed by two people.




Step 1

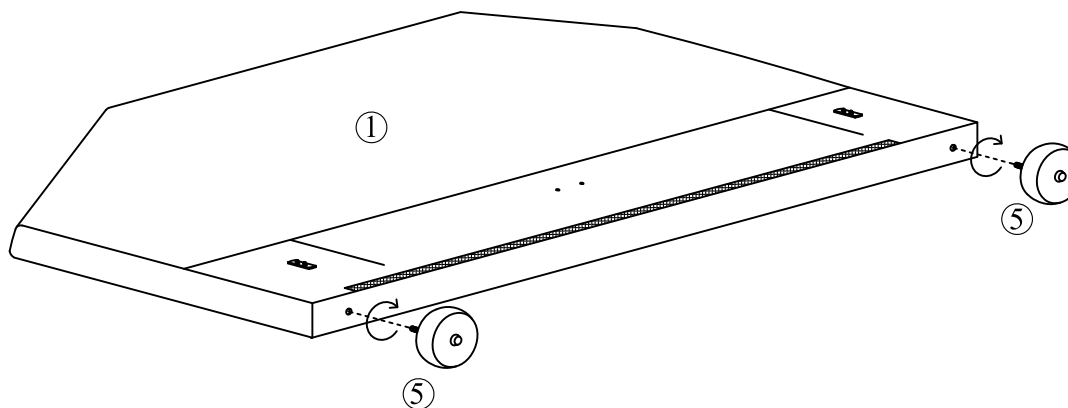

Step 2

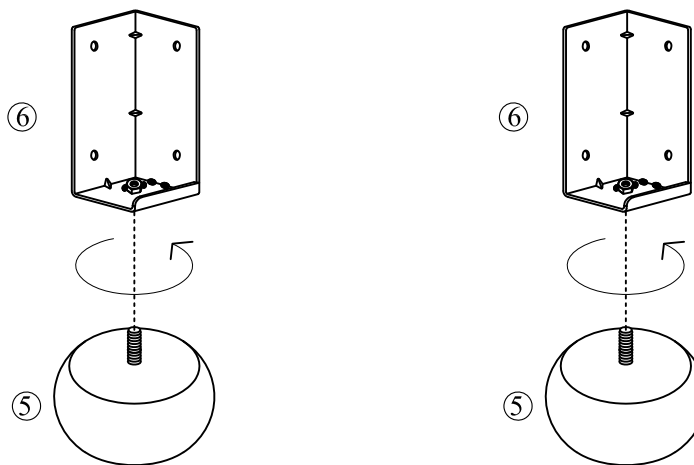

Parts and Hardware


 ③ Right Side Rail =1pc	 ④ Left Side Rail =1pc
 ⑦ Gold Bolts(M8*18mm) =4pcs	 (M5) ⑧ Allen Key=1pc
 ⑨ Bolts(M8*25mm) =4pcs	 ⑩ Washers (M8)=4pcs

Notes


Thank you for purchasing this quality product!
Be sure to check all packing material carefully
for small part that may have come loose inside
the carton during shipping.

CAUTION: The item is heavy, assembly
should be performed by two people.


Step 3

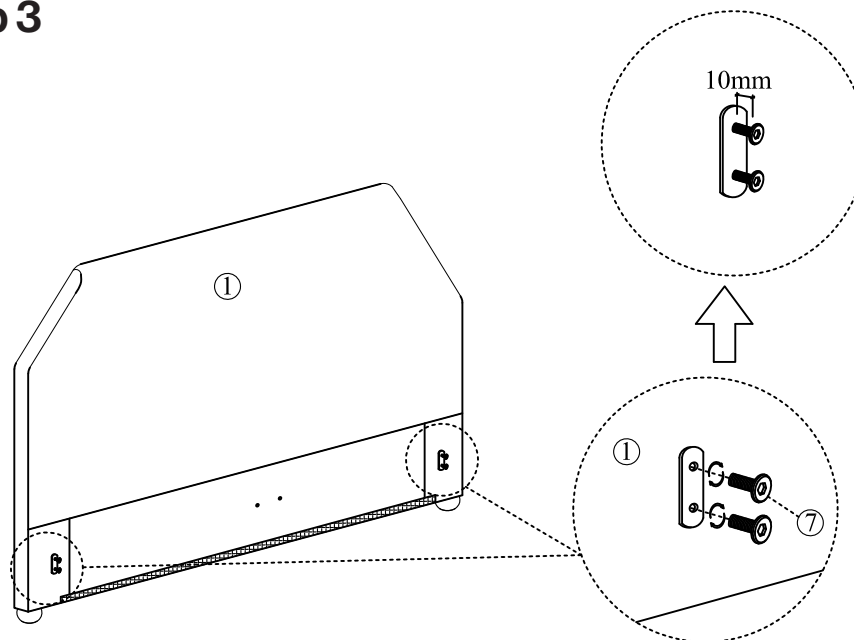

Step 4

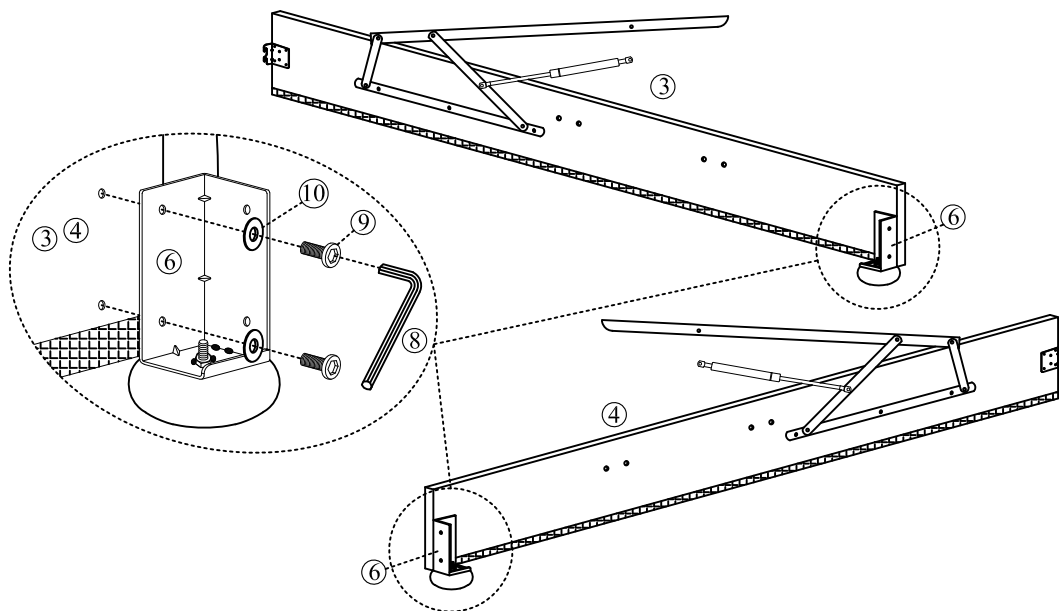

Parts and Hardware


 ② Footboard=1pc	 ⑧ Allen Key=1pc (M5)
 ⑨ Bolts(M8*25mm) =4pcs	 ⑩ Washers (M8)=4pcs

Notes


Thank you for purchasing this quality product!
Be sure to check all packing material carefully
for small part that may have come loose inside
the carton during shipping.

CAUTION: The item is heavy, assembly
should be performed by two people.

Step 5

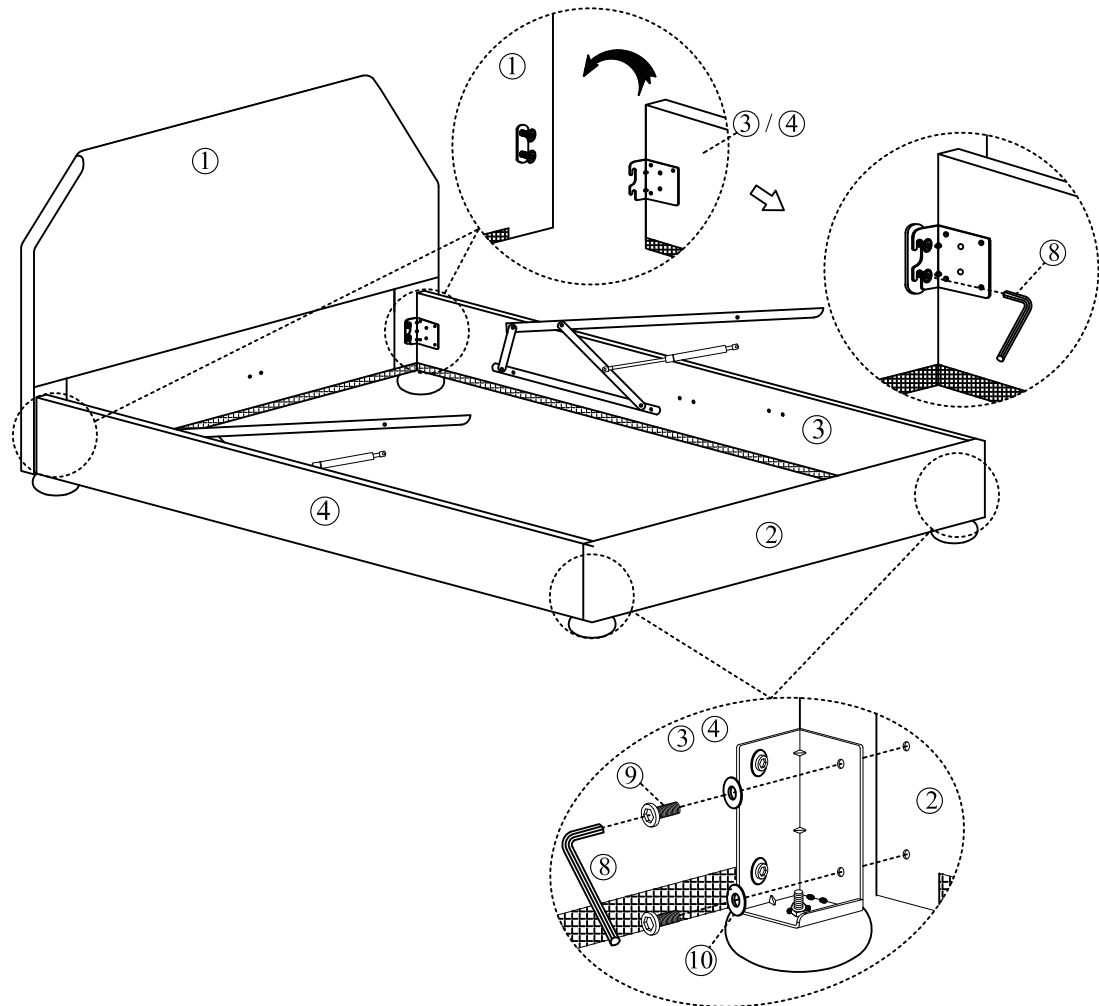

Parts and Hardware


 ⑧ Allen Key=1pc	 ⑨ Bolts(M8*25mm) =12pcs
 ⑪ Bracket=6pcs	 ⑫ Stick Felts=6pcs
 ⑬ Baseboards=1pc	

Notes


Thank you for purchasing this quality product!
Be sure to check all packing material carefully
for small part that may have come loose inside
the carton during shipping.

CAUTION: The item is heavy, assembly
should be performed by two people.

Step 6

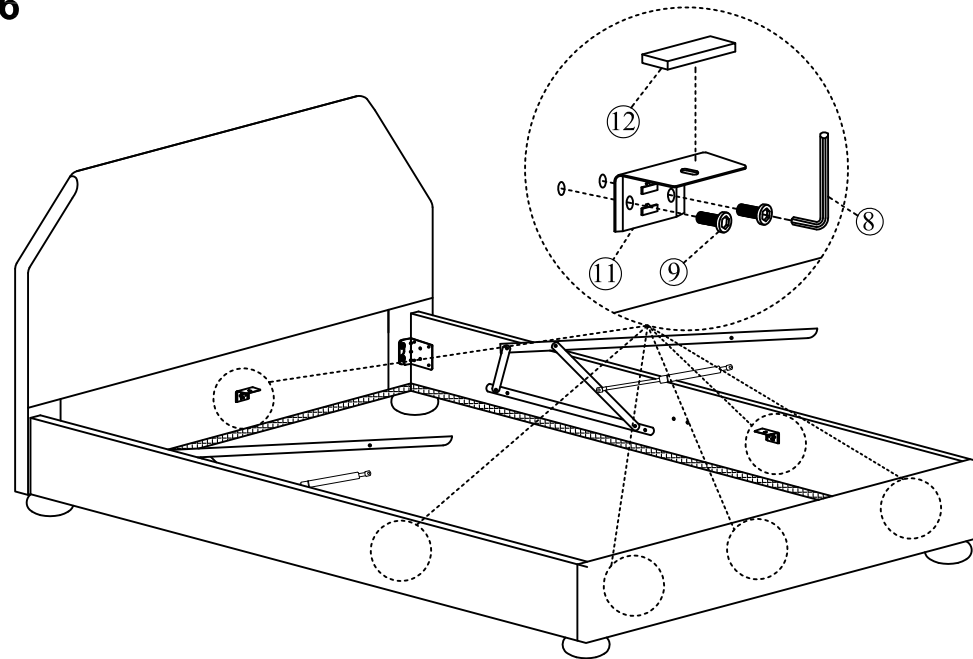

Step 7

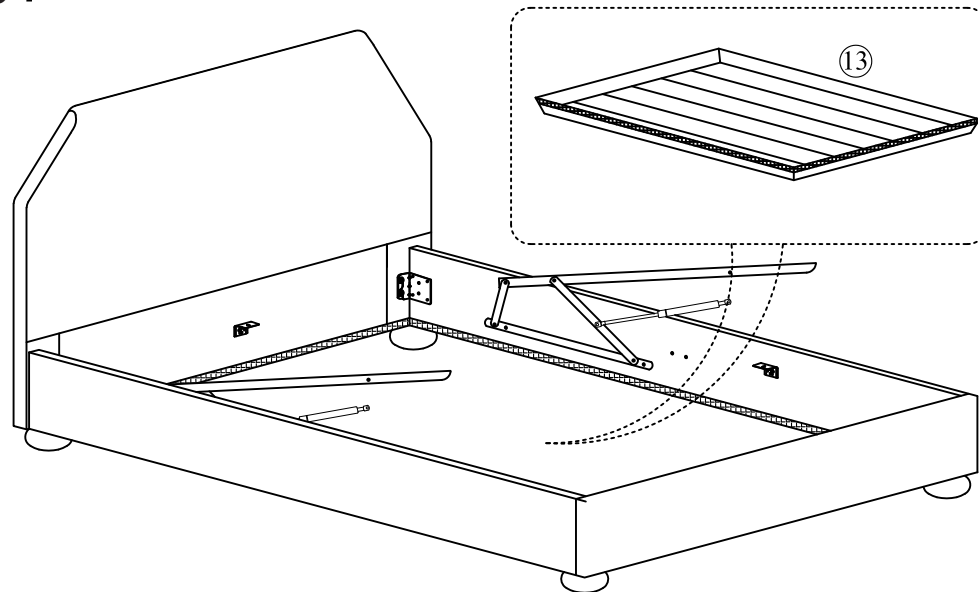

Parts and Hardware



⑫ Stick Felts=2pcs



⑭ Metal cross rail
=1pc




⑮ Screws(M5*40mm)
=4pcs

Notes


Thank you for purchasing this quality product!
Be sure to check all packing material carefully
for small part that may have come loose inside
the carton during shipping.

CAUTION: The item is heavy, assembly
should be performed by two people.

Step 8

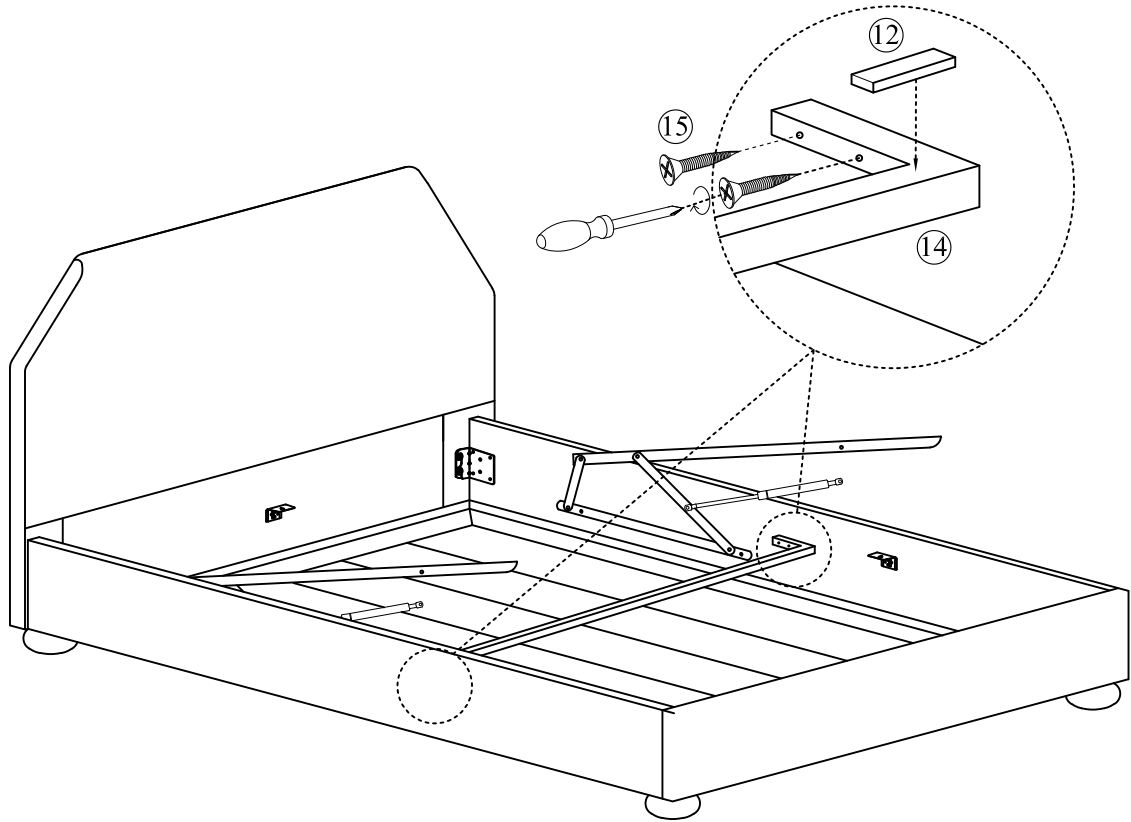

Parts and Hardware

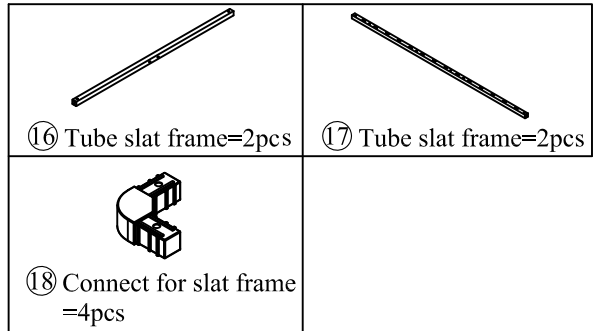


Notes

Thank you for purchasing this quality product!
 Be sure to check all packing material carefully
 for small part that may have come loose inside
 the carton during shipping.

CAUTION: The item is heavy, assembly
 should be performed by two people.

Step 9

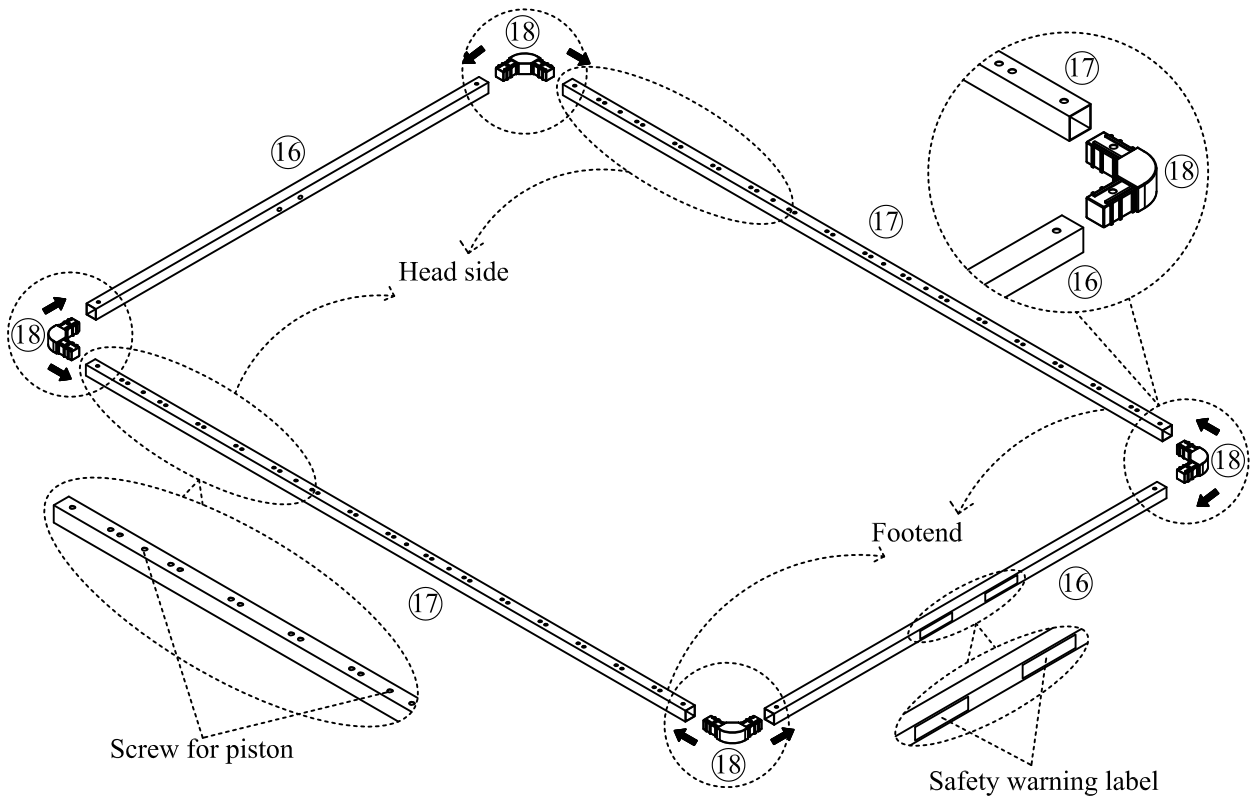

Note: The tube ①⑥ with safety warning label should be assembled footend.

Parts and Hardware



(M4)
①⑨ Allen Key=1pc




②⑩ Bolts(M6*10mm)
=8pcs

Notes


Thank you for purchasing this quality product!
Be sure to check all packing material carefully
for small part that may have come loose inside
the carton during shipping.

CAUTION: The item is heavy, assembly
should be performed by two people.

Step 10

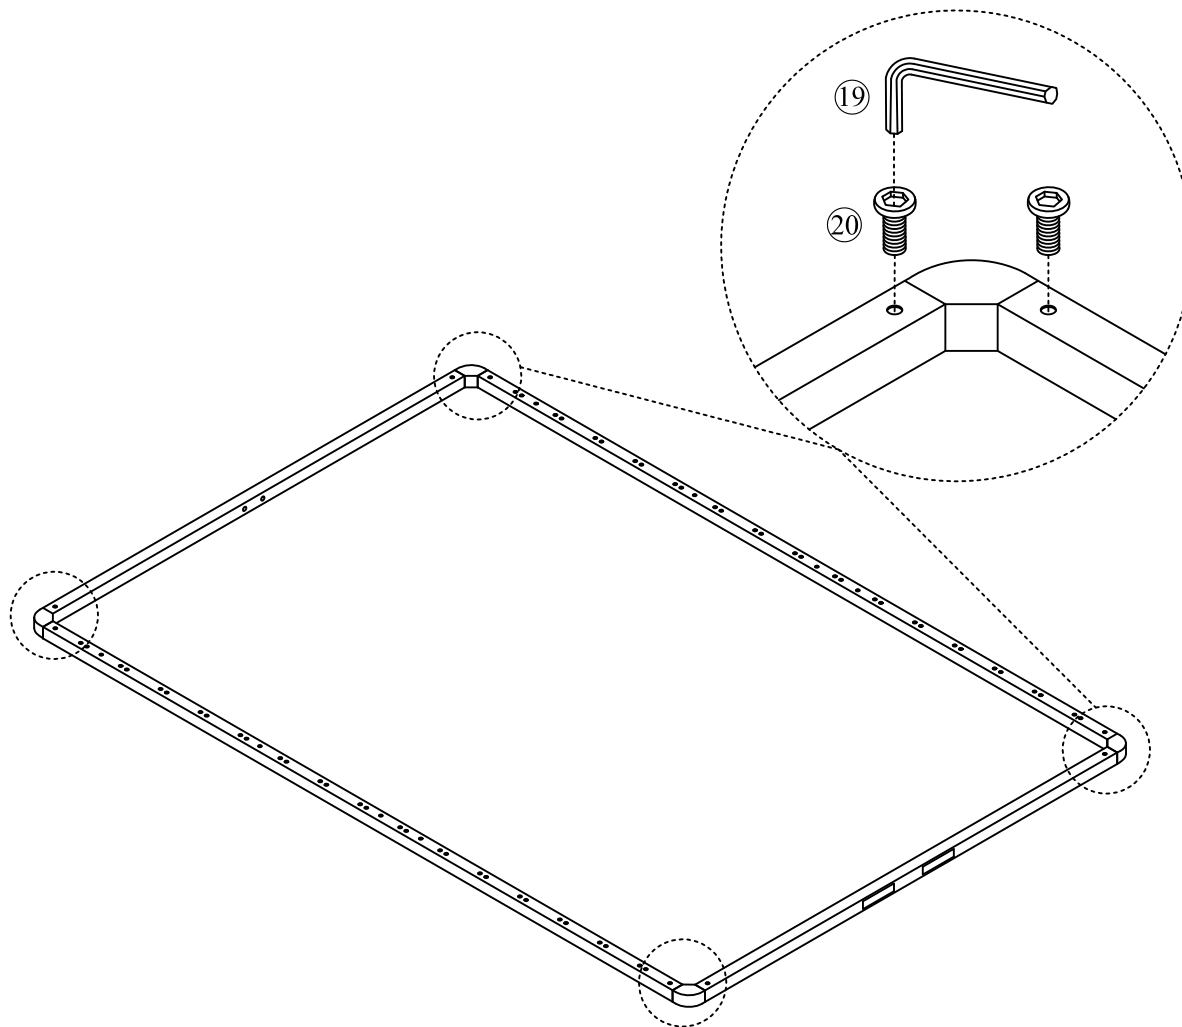

Parts and Hardware


 ⑧ Allen Key=1pc (M5)	 ⑨ Bolts(M8*25mm) =4pcs
 ⑩ Washers (M8)=4pcs	 ⑪ Tube slat frame=1pc

Notes

Thank you for purchasing this quality product!
Be sure to check all packing material carefully
for small part that may have come loose inside
the carton during shipping.

CAUTION: The item is heavy, assembly
should be performed by two people.

Step 11

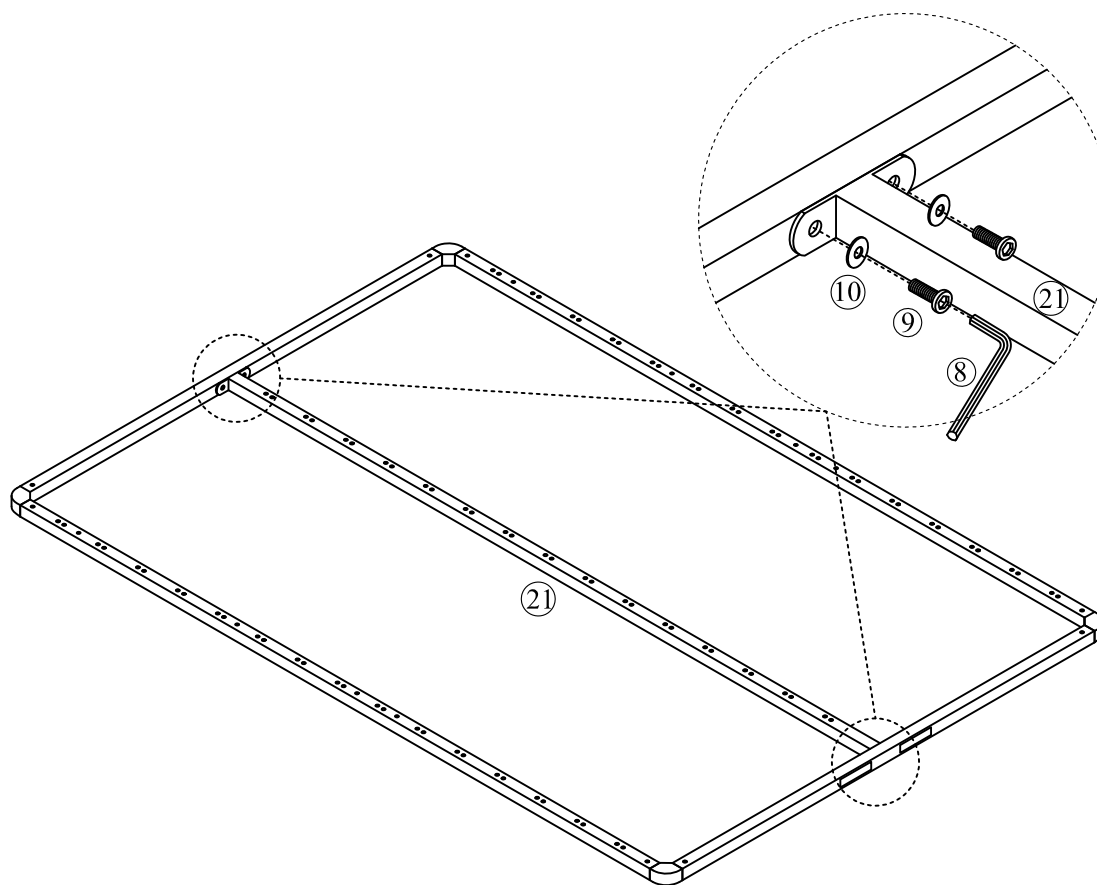

Parts and Hardware


 ②② Wid plastic cap (Big) =14pcs	 ②③ End plastic cap (Small) =28pcs
 ②④ Slats=28pcs	

Notes



Thank you for purchasing this quality product!
Be sure to check all packing material carefully
for small part that may have come loose inside
the carton during shipping.

CAUTION: The item is heavy, assembly
should be performed by two people.

Step 12

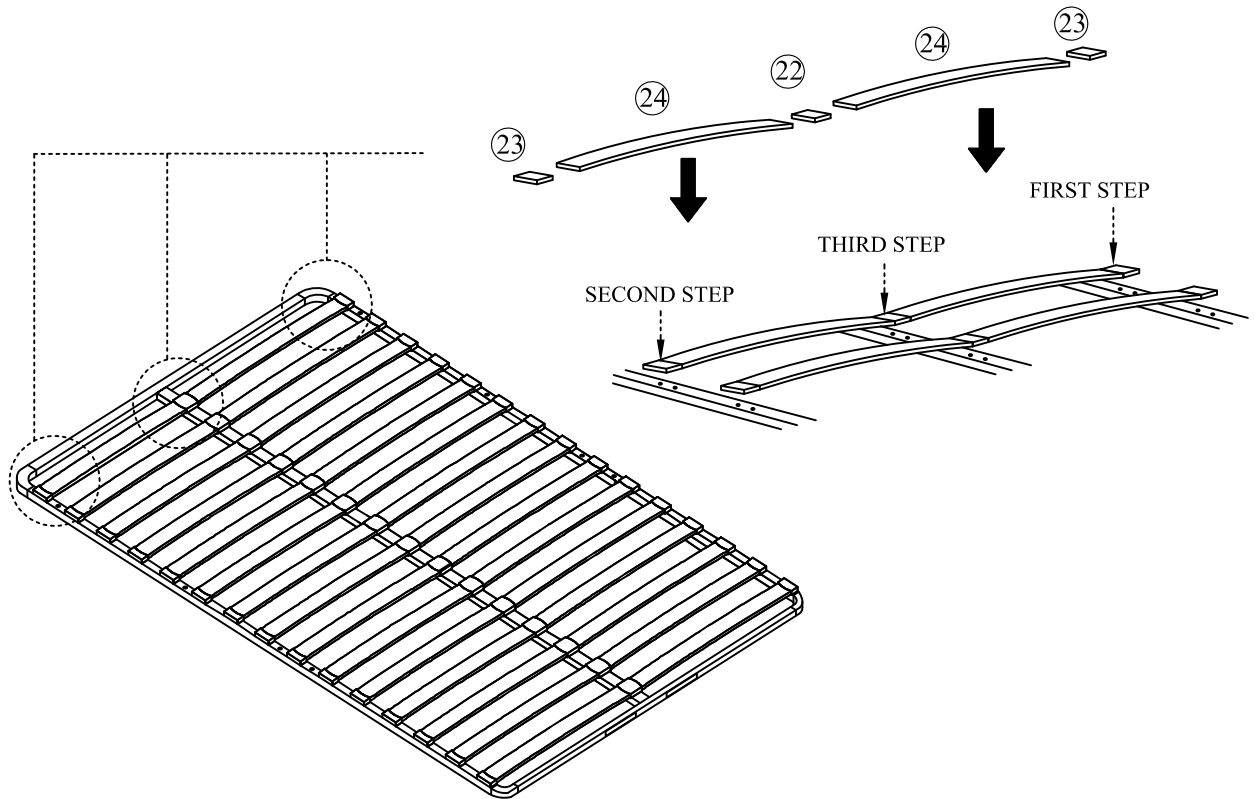

Parts and Hardware


 ⑧ Allen Key(M5)=1pc	 ⑨ Bolts(M8*25mm)=4pcs
 ⑩ Washers (M8)=4pcs	 ⑫ Metal Support legs=2pcs

Notes

Thank you for purchasing this quality product!
Be sure to check all packing material carefully
for small part that may have come loose inside
the carton during shipping.


CAUTION: The item is heavy, assembly
should be performed by two people.

Step 13

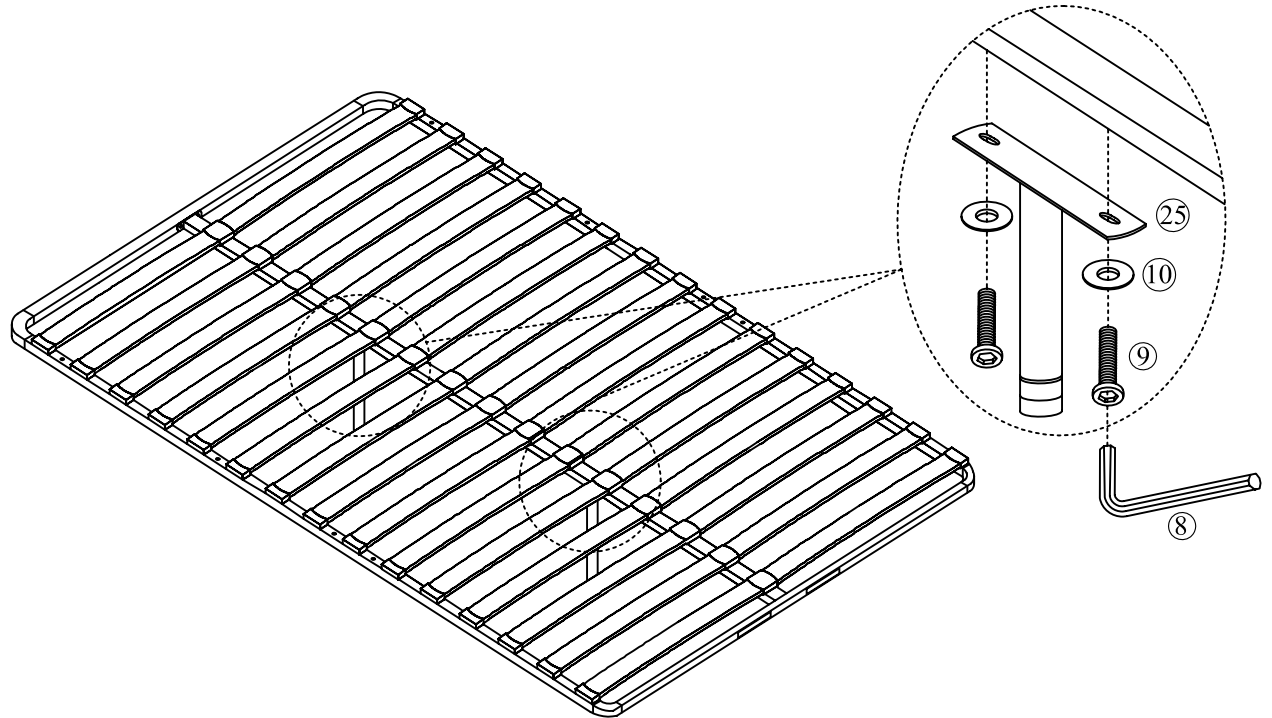

The centre support legs should be 5-10mm off the ground.

Parts and Hardware


 (M5) ⑧ Allen Key=1pc	 ⑩ Washers (M8)=16pcs
 ②⑥ Bolts(M8*45mm)=8pcs	 ②⑦ Nuts (M8)=8pcs
 ②⑧ Spanner=1pc	

Notes

Thank you for purchasing this quality product! Be sure to check all packing material carefully for small part that may have come loose inside the carton during shipping.


CAUTION: The item is heavy, assembly should be performed by two people.

Step 14

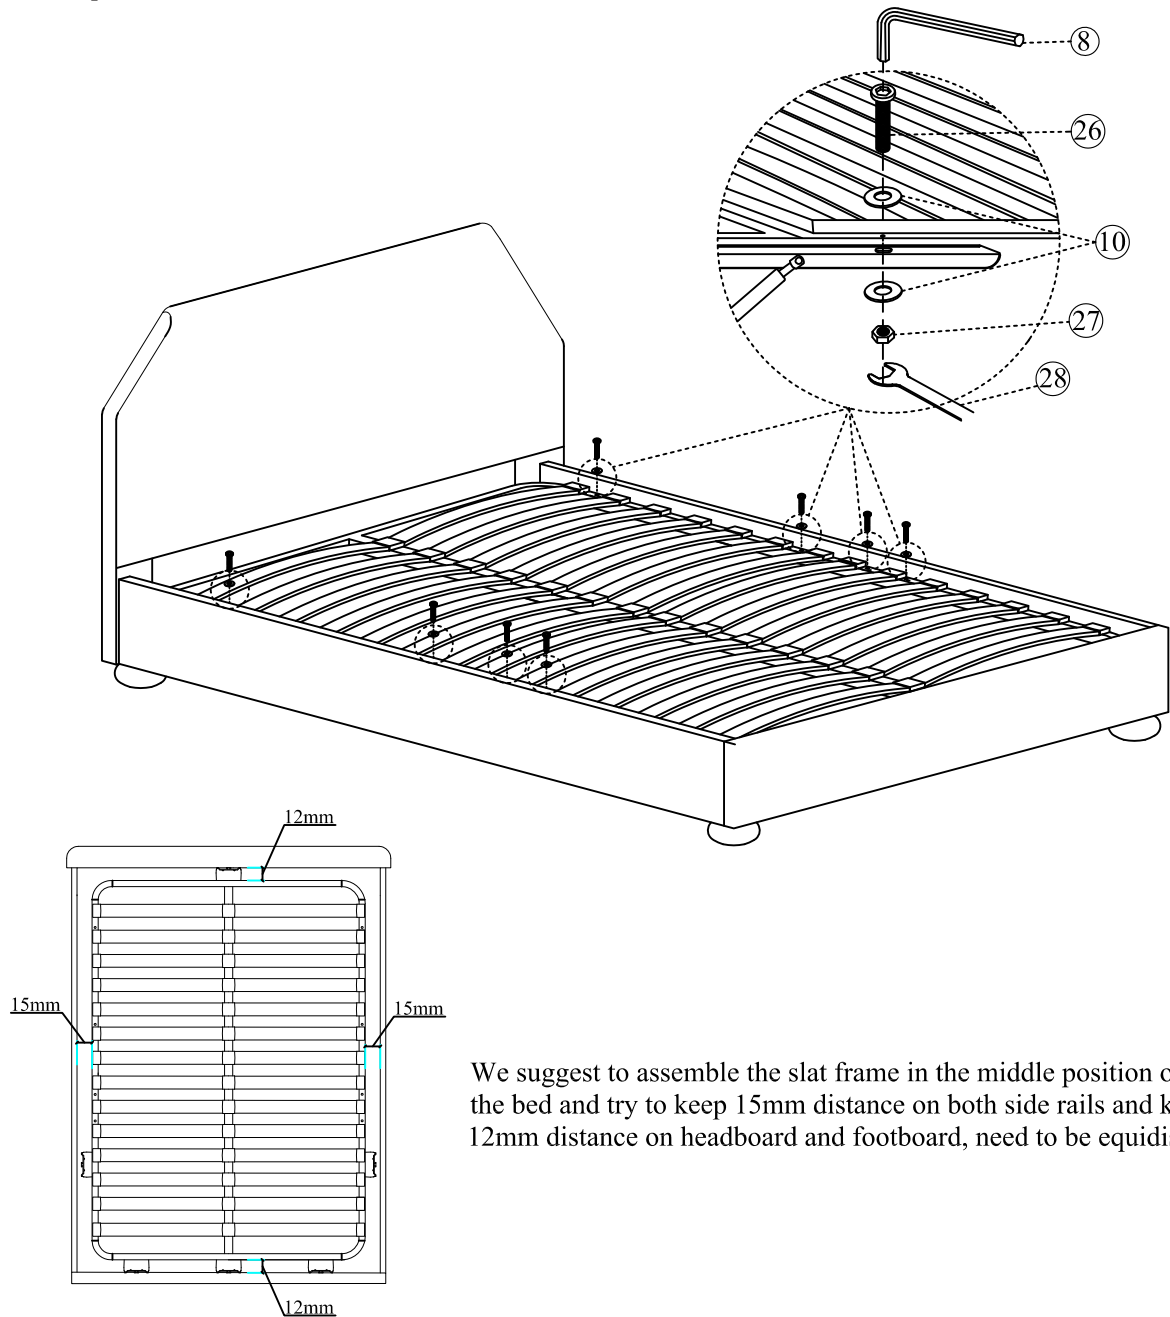

We suggest to assemble the slat frame in the middle position of the bed and try to keep 15mm distance on both side rails and keep 12mm distance on headboard and footboard, need to be equidistant.

Parts and Hardware



②⑨ Belt=1pc


Notes

Thank you for purchasing this quality product!
Be sure to check all packing material carefully
for small part that may have come loose inside
the carton during shipping.


CAUTION: The item is heavy, assembly
should be performed by two people.

Step 15

NOTES: It is recommended that the BELT be placed
in the middle position, as shown in the below image.

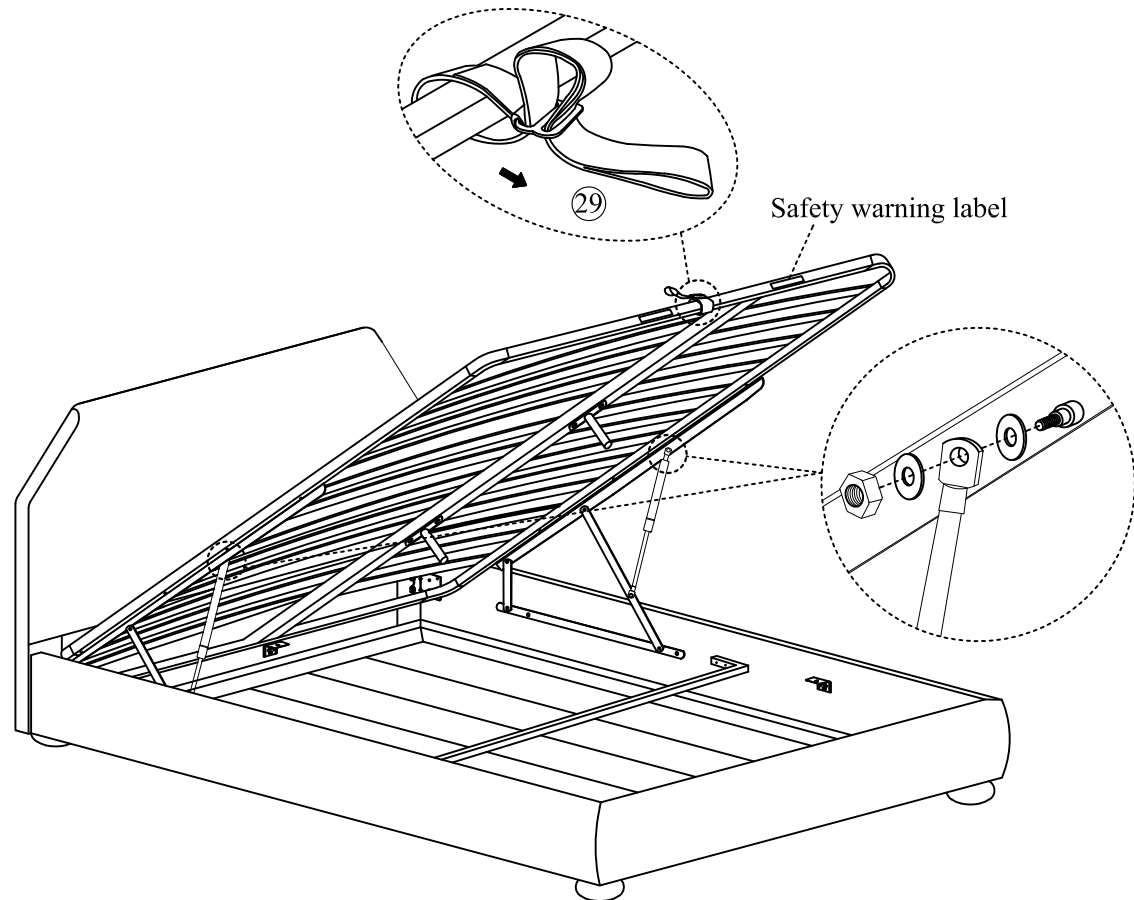

Parts and Hardware

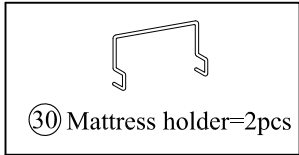


Notes

Thank you for purchasing this quality product!
Be sure to check all packing material carefully
for small part that may have come loose inside
the carton during shipping.

CAUTION: The item is heavy, assembly
should be performed by two people.

Step 16

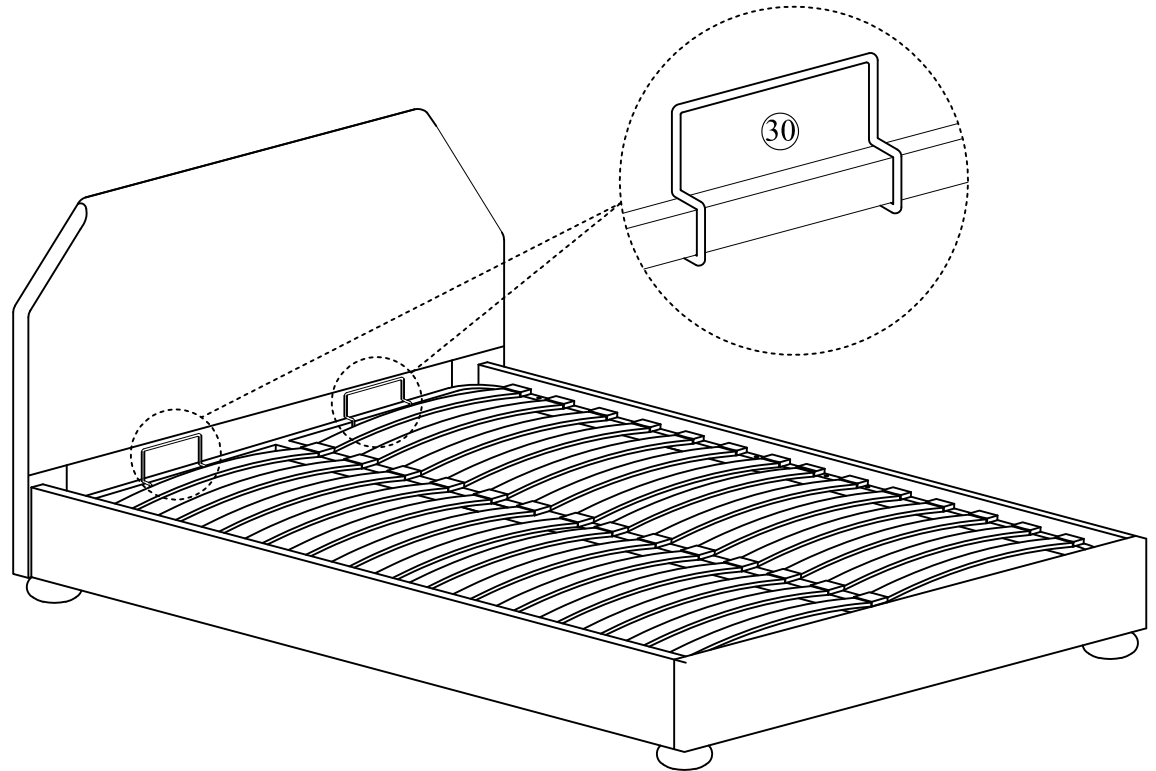

Warning: When you need to move the bed please lift it, do not drag it.