


# MOE'S

## Assembly Instructions


### Martine Queen Storage Bed Berry

RN-1170-38-0

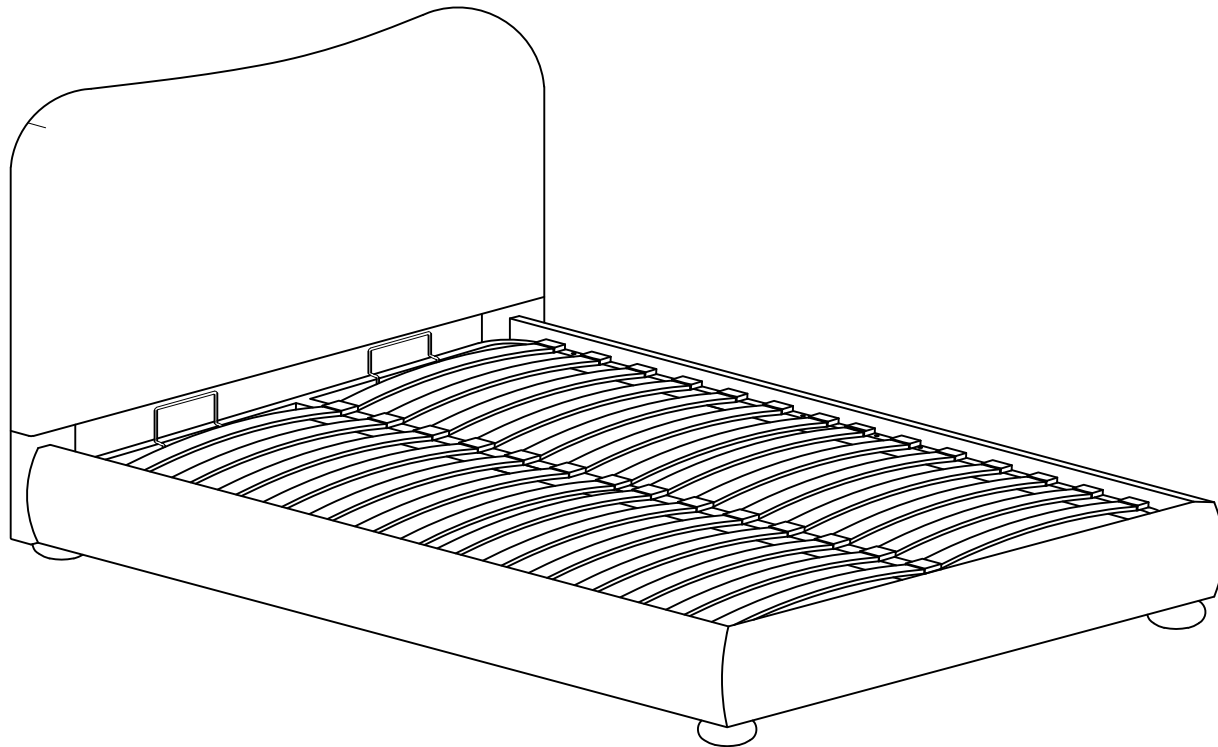

THANK YOU FOR YOUR PURCHASE!

## Parts and Hardware

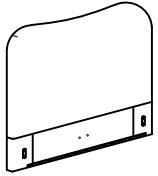

① Headboard=1pc



⑤ Feet=4pcs




⑥ Bracket=2pcs

## Notes


Thank you for purchasing this quality product!  
Be sure to check all packing material carefully  
for small part that may have come loose inside  
the carton during shipping.

**CAUTION:** The item is heavy, assembly  
should be performed by two people.




## Step 1

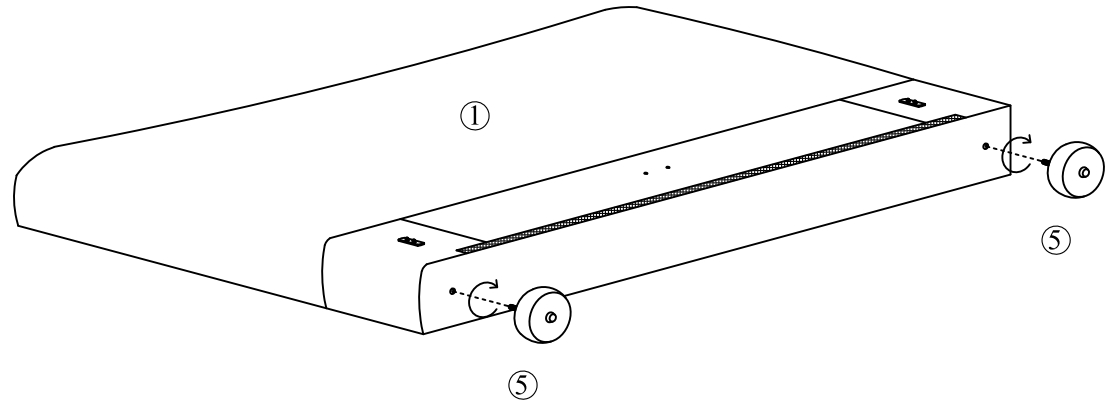

## Step 2

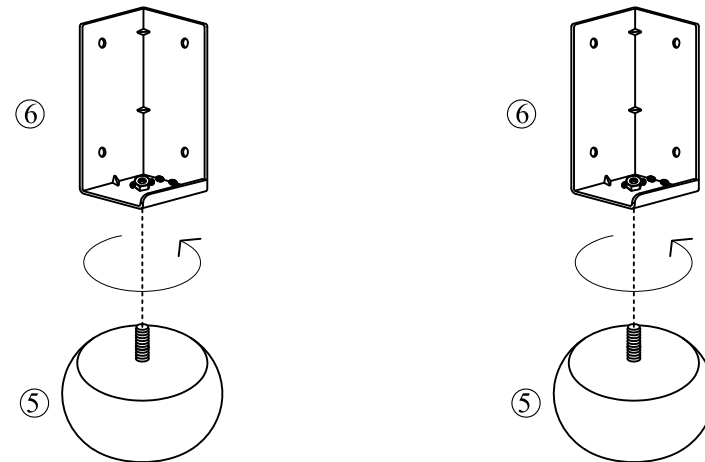

## Parts and Hardware


|                                                                                   |                                                                                   |
|-----------------------------------------------------------------------------------|-----------------------------------------------------------------------------------|
|  |  |
| ③ Right Side Rail<br>=1pc                                                         | ④ Left Side Rail<br>=1pc                                                          |
|  |  |
| ⑦ Gold Bolts(M8*18mm)<br>=4pcs                                                    | (M5)<br>⑧ Allen Key=1pc                                                           |
|  |  |
| ⑨ Bolts(M8*25mm)<br>=4pcs                                                         | ⑩ Washers (M8)=4pcs                                                               |

## Notes


Thank you for purchasing this quality product!  
Be sure to check all packing material carefully  
for small part that may have come loose inside  
the carton during shipping.

**CAUTION:** The item is heavy, assembly  
should be performed by two people.


## Step 3

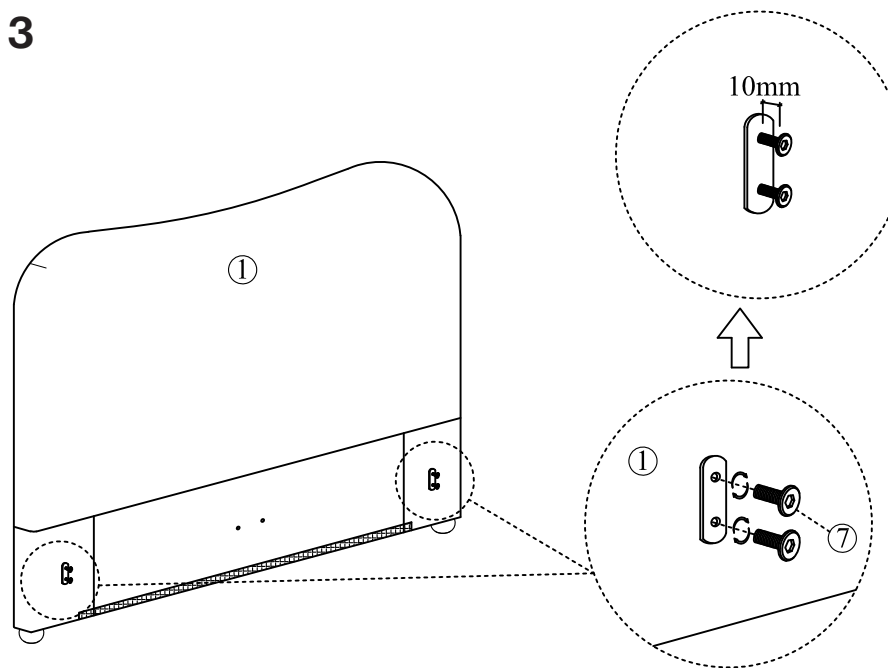

## Step 4

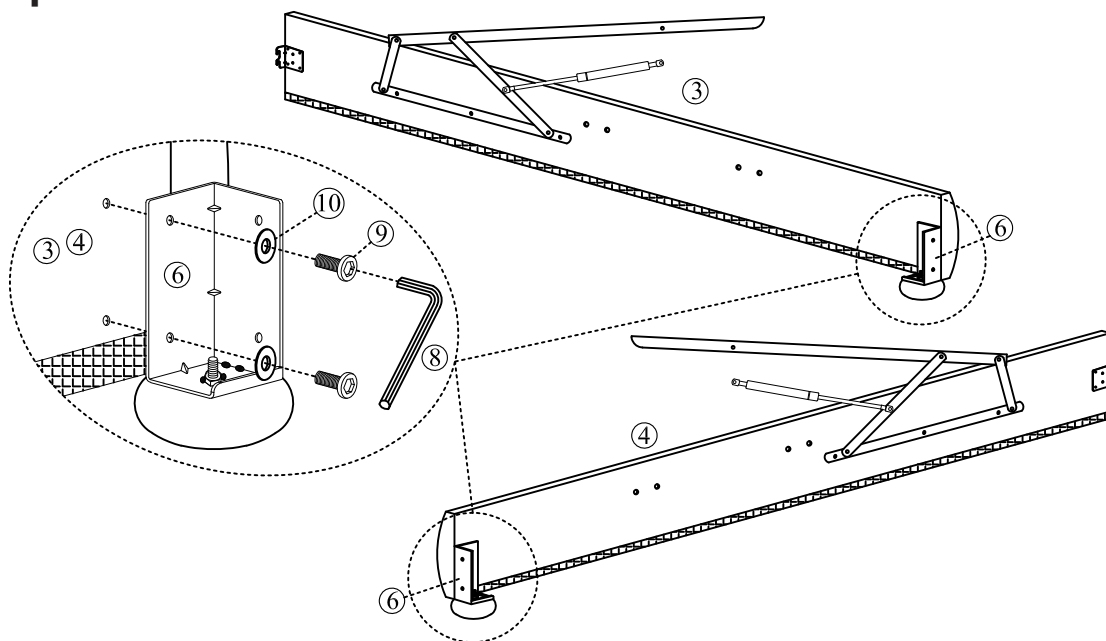

## Parts and Hardware


|                                                                                                                     |                                                                                                                   |
|---------------------------------------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------|
|  <p>② Footboard=1pc</p>            |  <p>⑧ Allen Key=1pc<br/>(M5)</p> |
|  <p>⑨ Bolts(M8*25mm)<br/>=4pcs</p> |  <p>⑩ Washers (M8)=4pcs</p>      |

## Notes


Thank you for purchasing this quality product!  
Be sure to check all packing material carefully  
for small part that may have come loose inside  
the carton during shipping.

**CAUTION:** The item is heavy, assembly  
should be performed by two people.

## Step 5

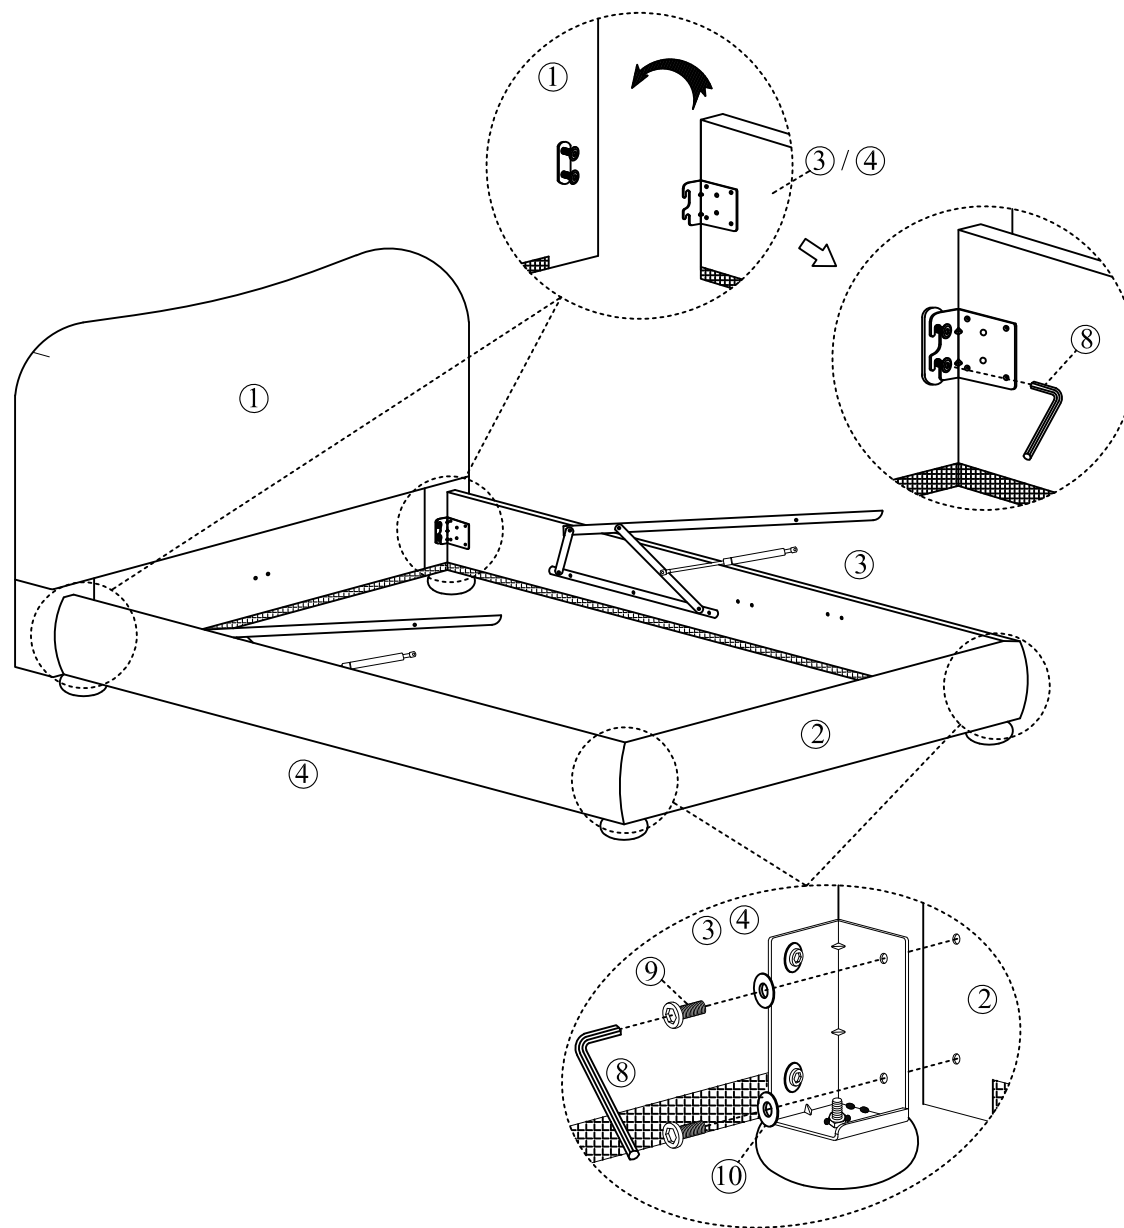

## Parts and Hardware


|                                                                                                       |                                                                                                                 |
|-------------------------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------|
| <br>⑧ Allen Key=1pc  | <br>⑨ Bolts(M8*25mm)<br>=12pcs |
| <br>⑪ Bracket=6pcs   | <br>⑫ Stick Felts=6pcs         |
| <br>⑬ Baseboards=1pc |                                                                                                                 |

## Notes


Thank you for purchasing this quality product!  
Be sure to check all packing material carefully  
for small part that may have come loose inside  
the carton during shipping.

**CAUTION:** The item is heavy, assembly  
should be performed by two people.

## Step 6

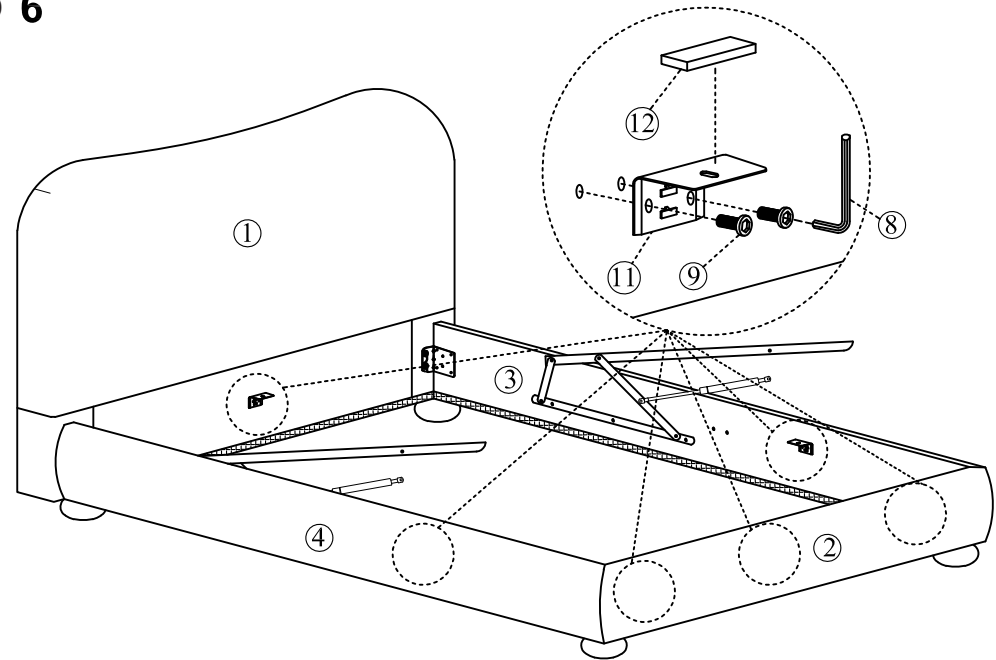

## Step 7

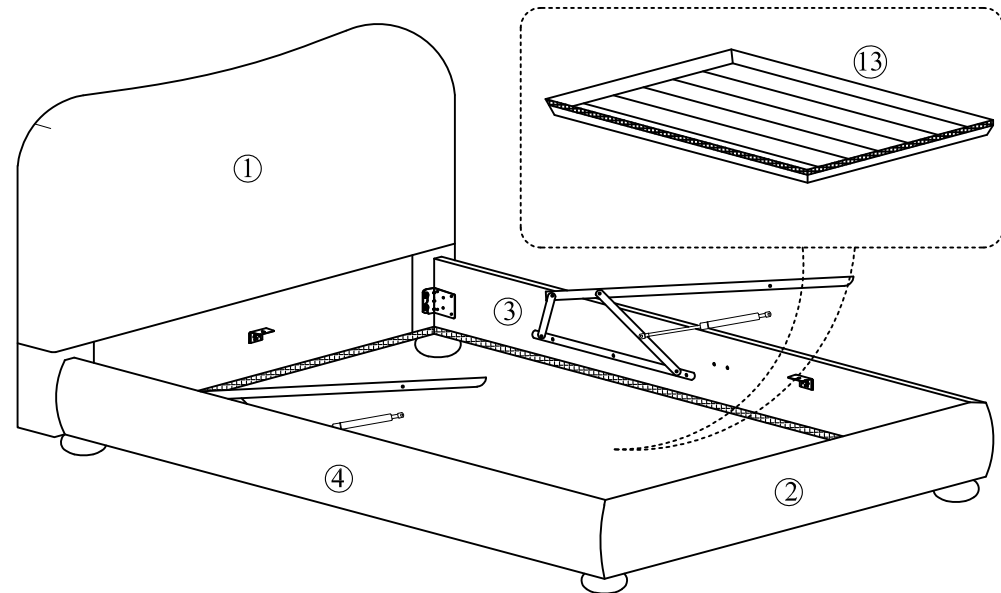

## Parts and Hardware



⑫ Stick Felts=2pcs



⑭ Metal cross rail  
=1pc




⑮ Screws(M5\*40mm)  
=4pcs

## Notes


Thank you for purchasing this quality product!  
Be sure to check all packing material carefully  
for small part that may have come loose inside  
the carton during shipping.

**CAUTION:** The item is heavy, assembly  
should be performed by two people.

## Step 8

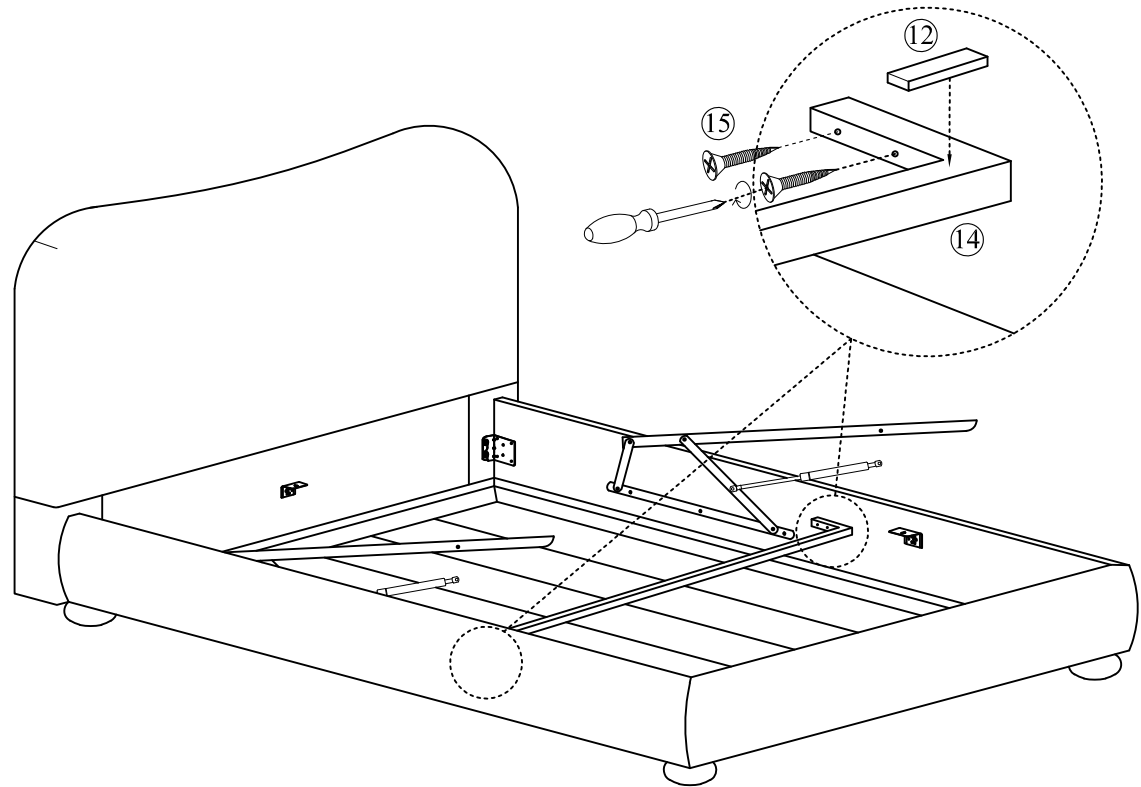

## Parts and Hardware

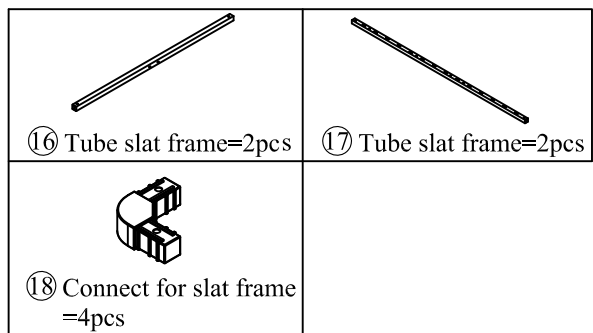


## Notes

Thank you for purchasing this quality product!  
 Be sure to check all packing material carefully  
 for small part that may have come loose inside  
 the carton during shipping.


**CAUTION:** The item is heavy, assembly  
 should be performed by two people.

## Step 9

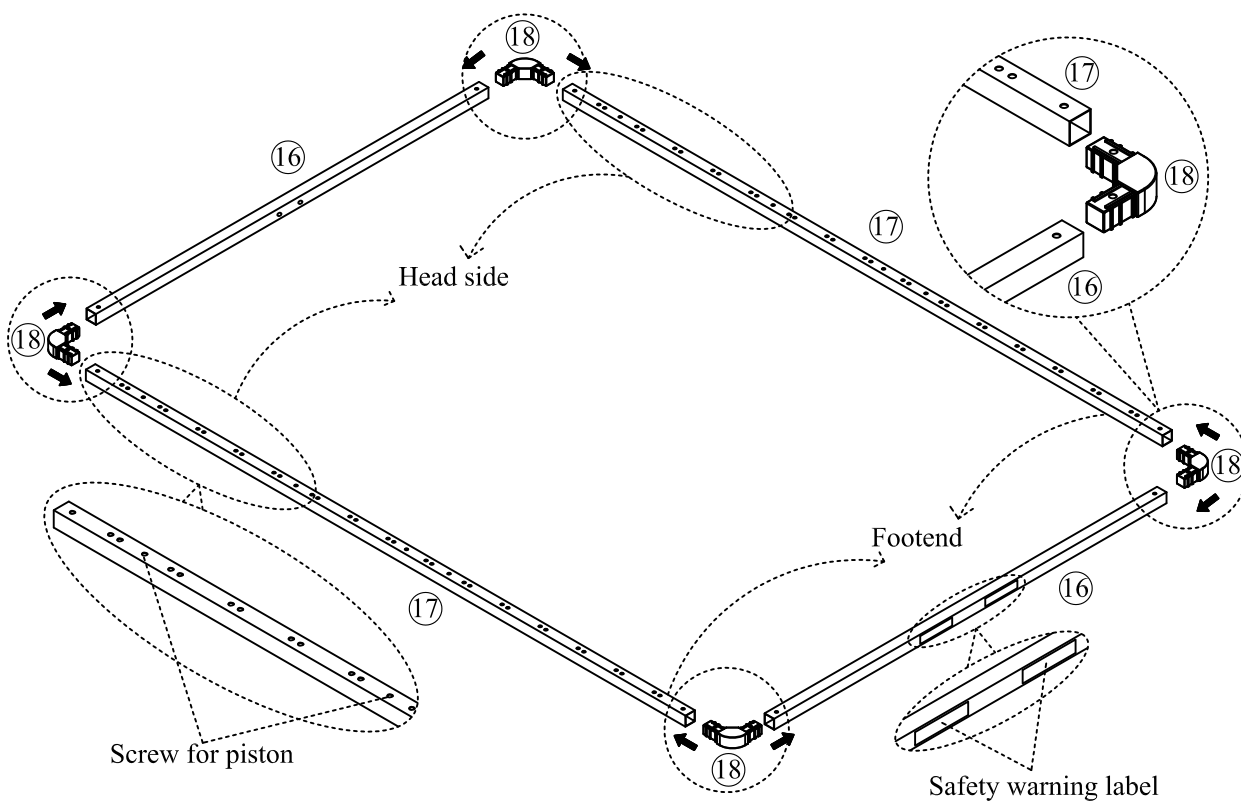

Note: The tube ①⑥ with safety warning label should be assembled footend.

## Parts and Hardware



(M4)  
①⑨ Allen Key=1pc




②⑩ Bolts(M6\*10mm)  
=8pcs

## Notes


Thank you for purchasing this quality product!  
Be sure to check all packing material carefully  
for small part that may have come loose inside  
the carton during shipping.

**CAUTION:** The item is heavy, assembly  
should be performed by two people.

## Step 10

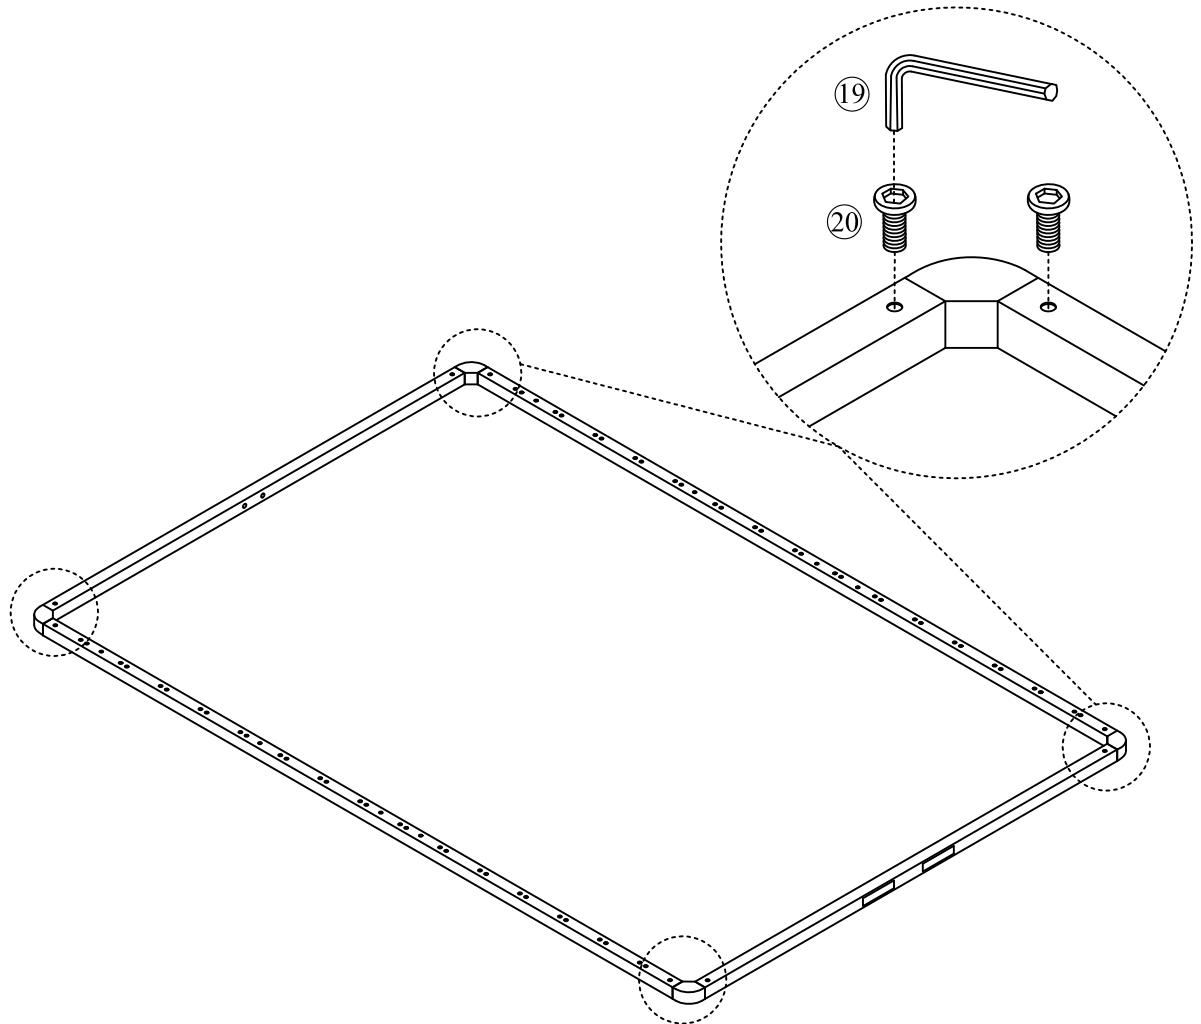

## Parts and Hardware


|                                                                                                              |                                                                                                                |
|--------------------------------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------|
| <br>⑧ Allen Key=1pc<br>(M5) | <br>⑨ Bolts(M8*25mm)<br>=4pcs |
| <br>⑩ Washers (M8)=4pcs     | <br>⑪ Tube slat frame=1pc     |

## Notes

Thank you for purchasing this quality product!  
Be sure to check all packing material carefully  
for small part that may have come loose inside  
the carton during shipping.

**CAUTION:** The item is heavy, assembly  
should be performed by two people.

## Step 11

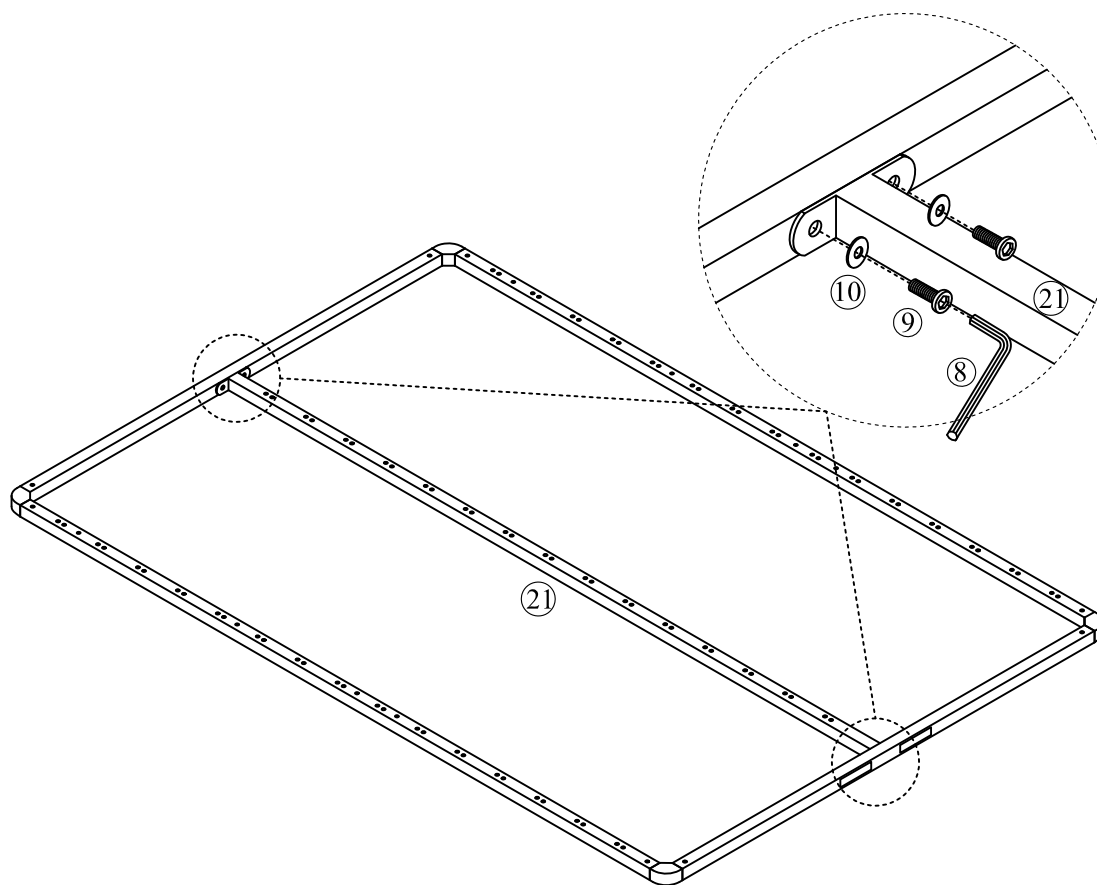

## Parts and Hardware


|                                                                                                                         |                                                                                                                           |
|-------------------------------------------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------------------------------|
| <br>②② Wid plastic cap (Big)<br>=14pcs | <br>②③ End plastic cap (Small)<br>=28pcs |
| <br>②④ Slats=28pcs                     |                                                                                                                           |

## Notes



Thank you for purchasing this quality product!  
Be sure to check all packing material carefully  
for small part that may have come loose inside  
the carton during shipping.

**CAUTION:** The item is heavy, assembly  
should be performed by two people.

## Step 12

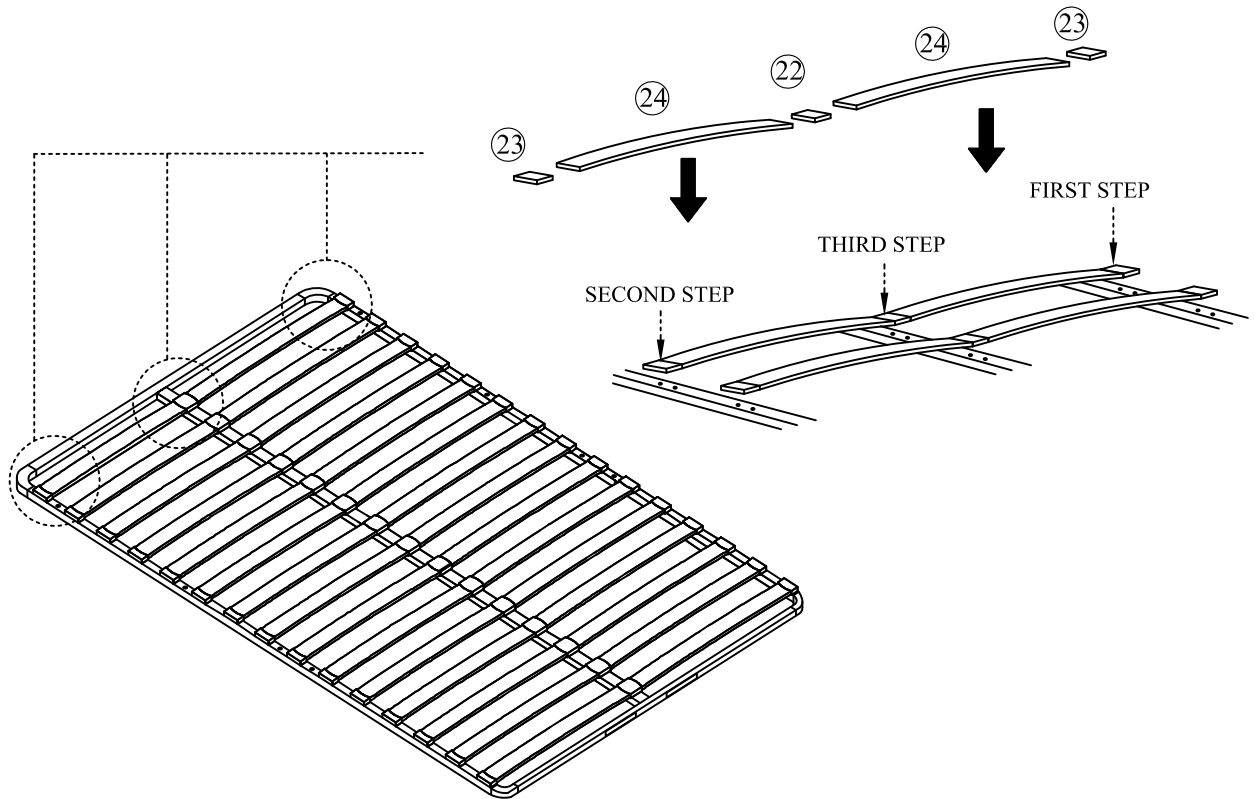

## Parts and Hardware


|                                                                                                          |                                                                                                                |
|----------------------------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------|
| <br>⑧ Allen Key(M5)=1pc | <br>⑨ Bolts(M8*25mm)=4pcs     |
| <br>⑩ Washers (M8)=4pcs | <br>⑫ Metal Support legs=2pcs |

## Notes

Thank you for purchasing this quality product!  
Be sure to check all packing material carefully for small part that may have come loose inside the carton during shipping.



**CAUTION:** The item is heavy, assembly should be performed by two people.

## Step 13

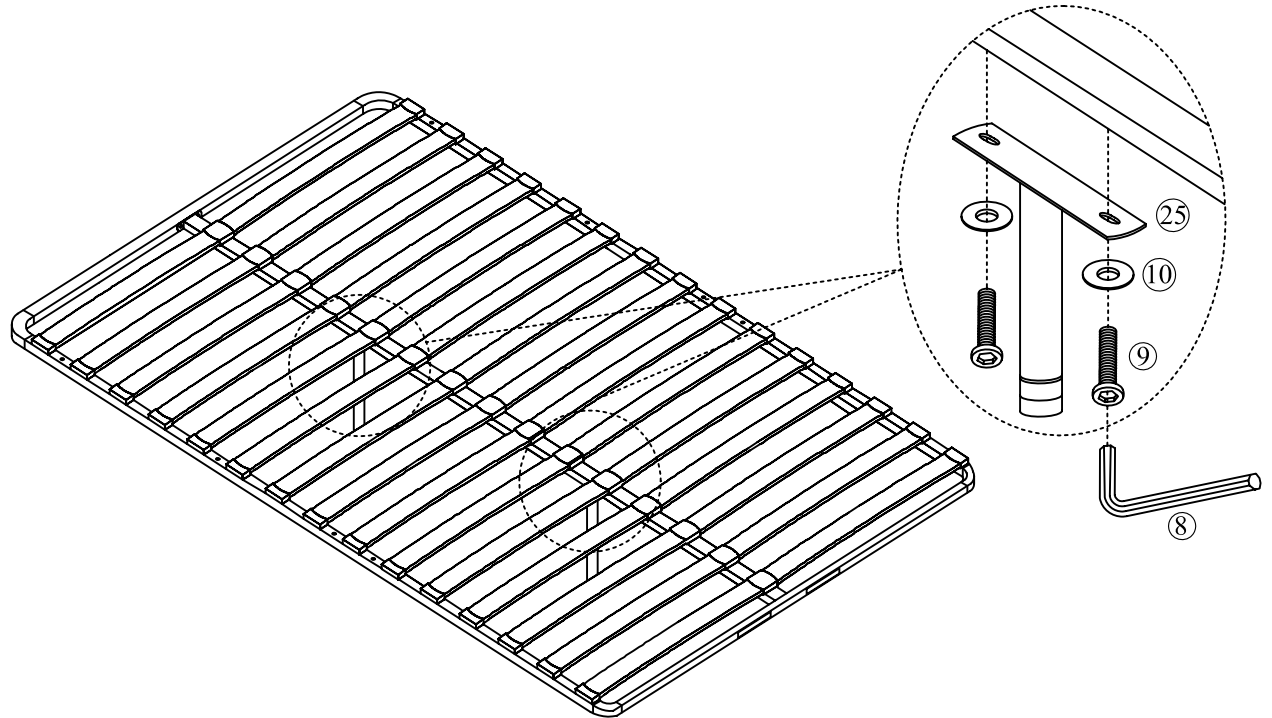

The centre support legs should be 5-10mm off the ground.

## Parts and Hardware


|                                                                                                                 |                                                                                                           |
|-----------------------------------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------|
| <br>(M5)<br>⑧ Allen Key=1pc    | <br>⑩ Washers (M8)=16pcs |
| <br>②⑥ Bolts(M8*45mm)<br>=8pcs | <br>②⑦ Nuts (M8)=8pcs    |
| <br>②⑧ Spanner=1pc             |                                                                                                           |

## Notes

Thank you for purchasing this quality product!  
 Be sure to check all packing material carefully  
 for small part that may have come loose inside  
 the carton during shipping.


**CAUTION:** The item is heavy, assembly  
 should be performed by two people.

## Step 14

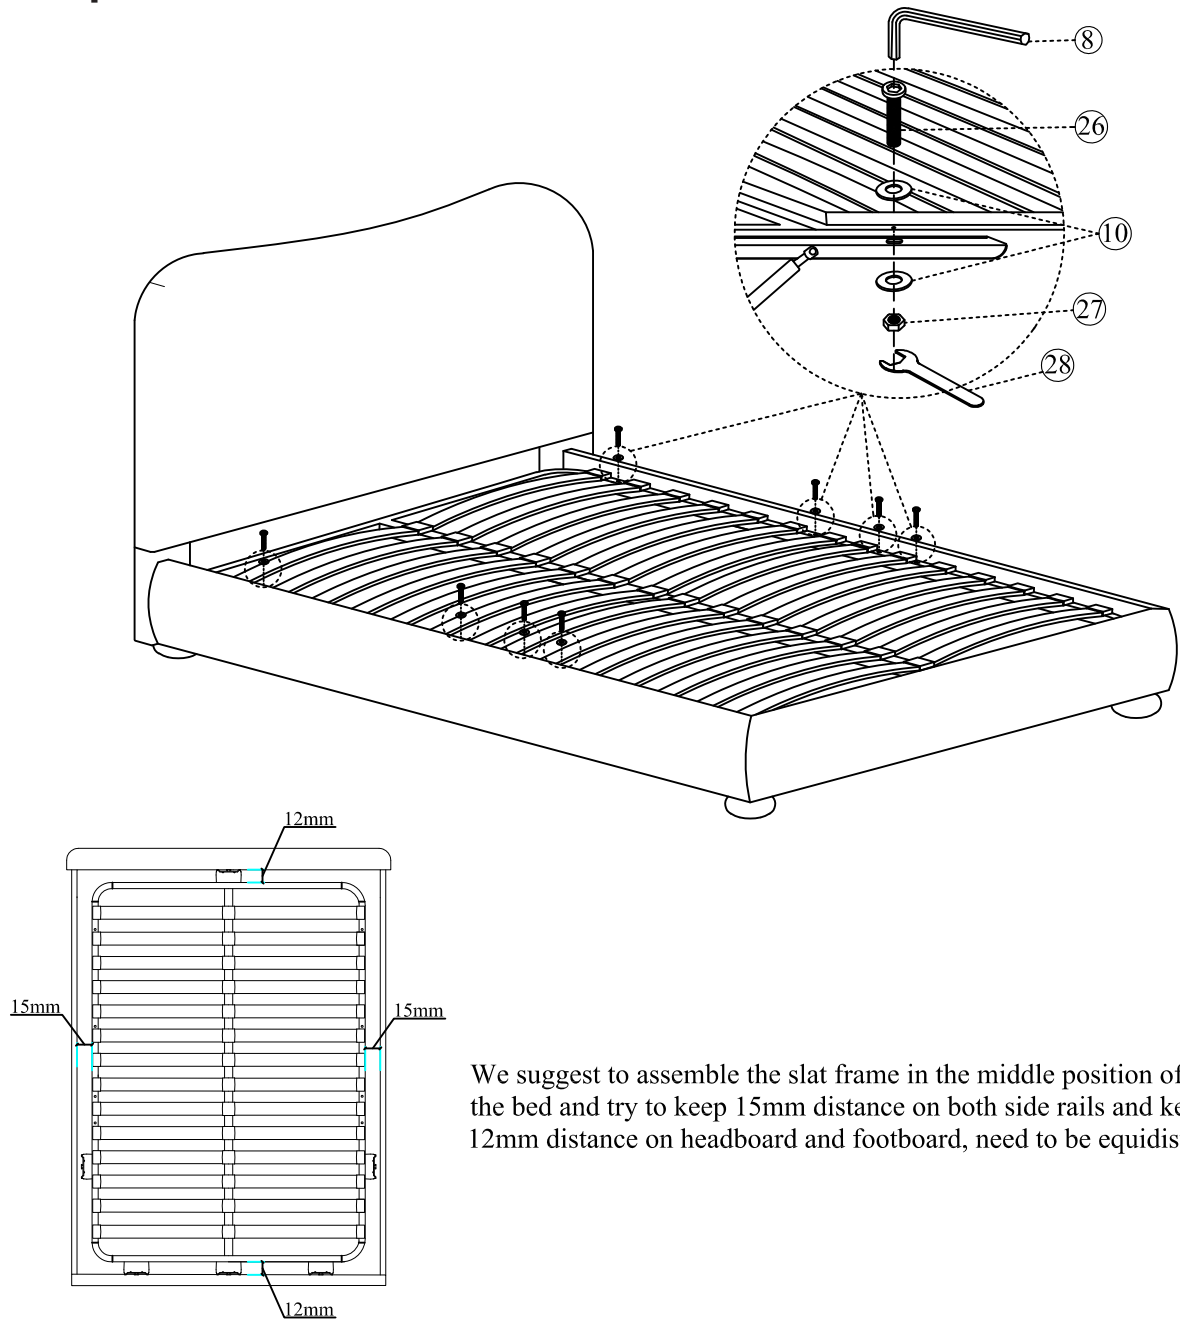

We suggest to assemble the slat frame in the middle position of  
 the bed and try to keep 15mm distance on both side rails and keep  
 12mm distance on headboard and footboard, need to be equidistant.


## Parts and Hardware



②⑨ Belt=1pc

## Step 15

NOTES: It is recommended that the BELT be placed in the middle position, as shown in the below image.

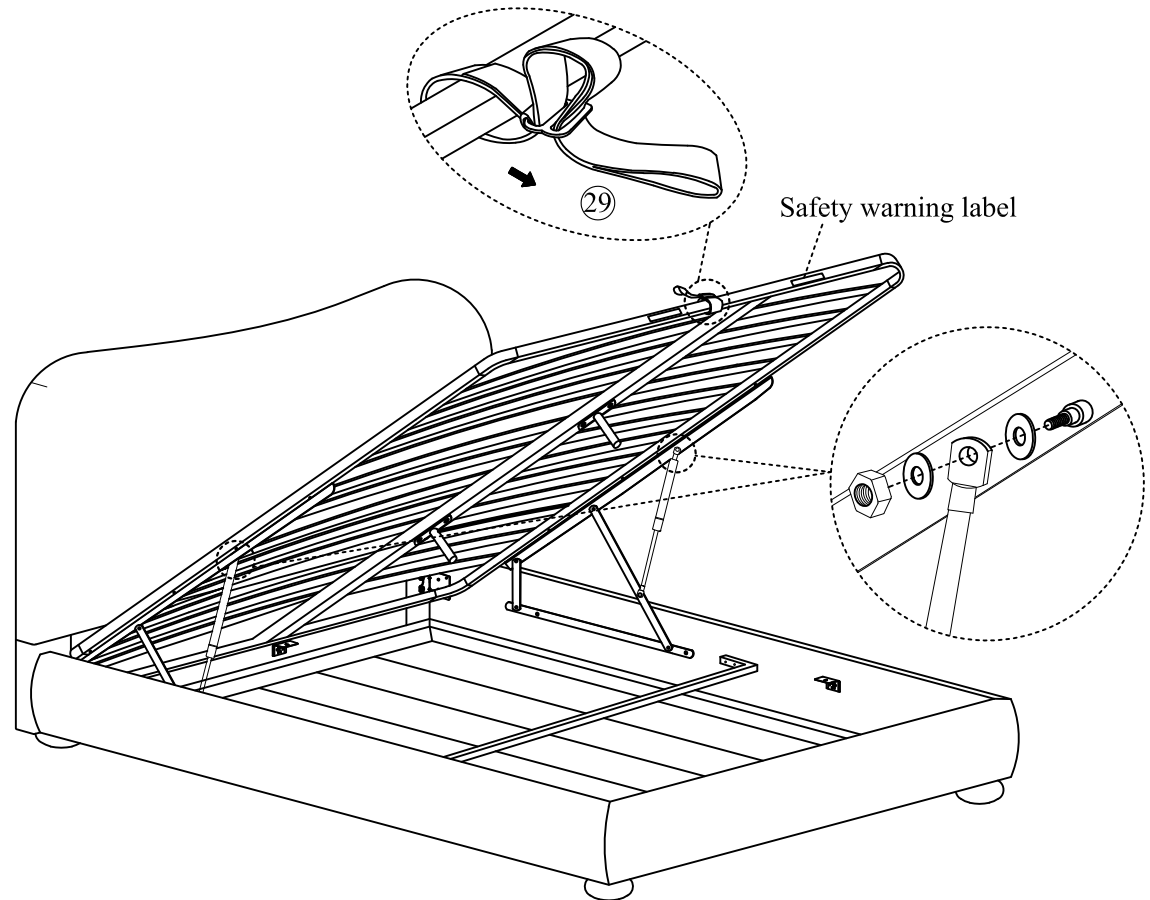


## Notes


Thank you for purchasing this quality product! Be sure to check all packing material carefully for small part that may have come loose inside the carton during shipping.

**CAUTION:** The item is heavy, assembly should be performed by two people.

## Parts and Hardware

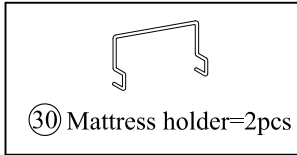

## Step 16

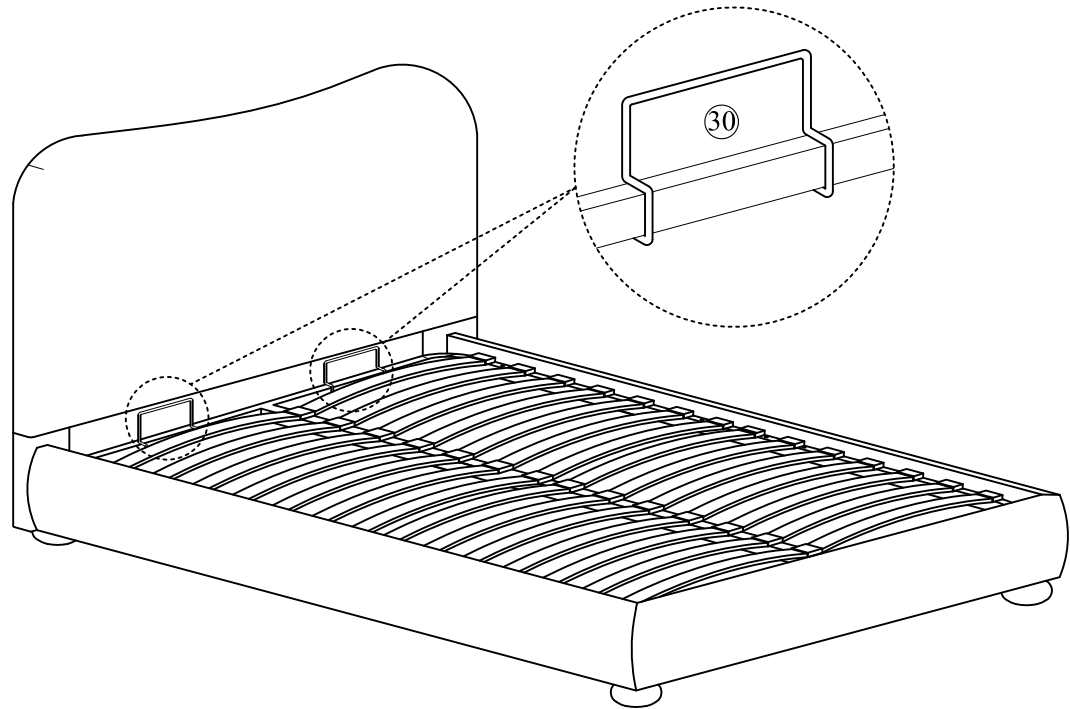

## Notes

Thank you for purchasing this quality product!  
Be sure to check all packing material carefully  
for small part that may have come loose inside  
the carton during shipping.

**CAUTION:** The item is heavy, assembly  
should be performed by two people.

**Warning:** When you need to move the bed please lift it, do not drag it.