TOV

Sydney

Counter Stool

DON'T BE BORING.

Hardware and Components

A ×1pc

B ×1pc

C ×1pc

D ×1pc

E ×4pcs(6*16mm)

F ×4pcs(6*25mm)

G ×4pcs(6*18mm)

H ×1pc Allen Key-4mm

Step 1

The hardware will be in a plastic bag found inside of the main box.

Step 2

A. Use the bolts (E) and Allen key (H) to connect the front leg (B), back leg (C), and foot connection rod (D) to form a metal base.

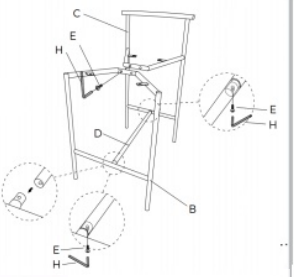

B. Connect the chair seat (A) to the metal base with the bolts (F) and washers (G), using the Allen key (H).

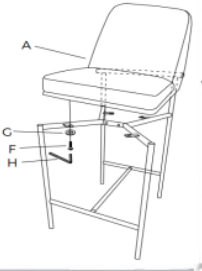

Step 3

Fully tighten all bolts with the Allen Key (H).

Stuck?
Contact our team @ 516-888-3355

Scan for product care!

TOV

Follow us!

Show your new purchase some love by tagging it on our Instagram!

@tovfurniture

516-888-3355

hello@tovfurniture.com

www.tovfurniture.com

If the future is female—your furniture should be, too. No mahogany in sight. Sexy settees shaped like lips. Price points for any budget. At TOV, we do things differently.