


TOV

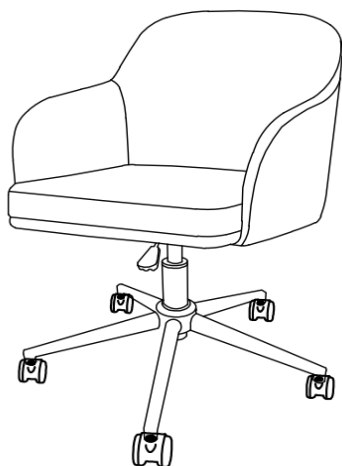

Sydney Desk Chair

DON'T BE BORING.

Hardware and Components



A

x1pc



B

x1pc



C

x1pc



D

x1pc



E

x5pcs



F

x1pc



G

x4pcs



H

x4pcs



I

x1pc Allen Key-4mm

Step 1


Open box of hardware and legs.

This hardware will be a plastic bag inside of the main box.
Look for the red streamer.




Step 2

- A.** Press firmly to attach the wheels (E) onto the frame (B). Then place the decorative cover (F) onto the assembled frame.

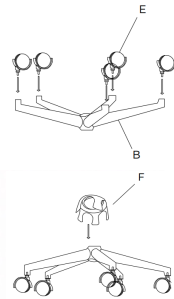


- B.** Remove the cap from gas lift (D) before assembling. Then attach it onto the frame.

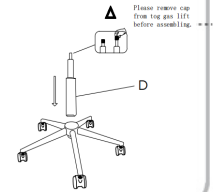


Step 3

- A.** Tip the seat (A) over, and attach the connecting plate (C) to it with the bolts (G) and washers (H), using the Allen Key (I).

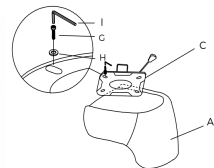

- B.** Attach the two assembled parts.

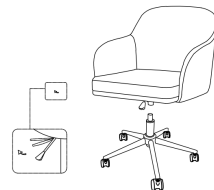

Step 4

A. Fully tighten all bolts with the Allen Key (I).



B. Complete!

Stuck?

Contact our team @ 516-888 3355

Scan for product care!



TOV



Follow us!

Show your new purchase some love by tagging it on our Instagram!

 @tovfurniture

 516-888-3355

 hello@tovfurniture.com

 www.tovfurniture.com

If the future is female—your furniture should be, too. No mahogany in sight. Sexy settees shaped like lips. Price points for any budget. At TOV, we do things differently.