


TOV

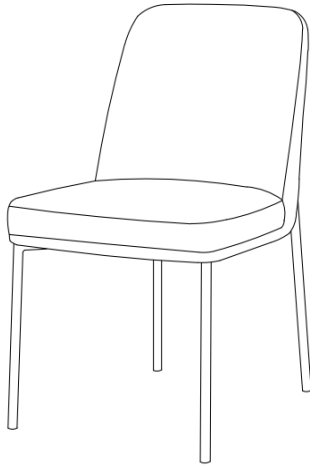

Sydney

Dining Chair

DON'T BE BORING.

Hardware and Components



A ×1pc



B ×1pc



C ×1pc



D ×2pcs(6*16mm)



E ×4pcs(6*25mm)



F ×4pcs(6*18mm)



G ×1pc Allen Key-4mm


Step 1

The hardware will be in a plastic bag found inside of the main box.




Step 2

A. Connect front leg (B) and back leg (C) with bolts (D), using the Allen Key (G) to form the metal base.

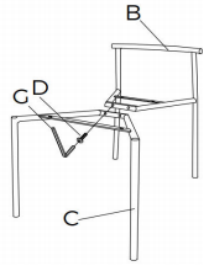

B. Connect the chair seat (A) to the metal base with bolts (E) & washers (F), using the Allen Key (G).

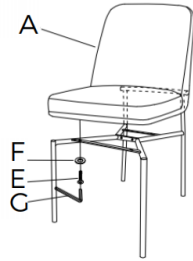

Step 3

Fully tighten all bolts with the Allen Key (G).



Stuck?
Contact our team @ 516-888-3355

Scan for product care!




TOV



Follow us!

Show your new purchase some love by tagging it on our Instagram!

 @tovfurniture

 516-888-3355

 hello@tovfurniture.com

 www.tovfurniture.com

If the future is female—your furniture should be, too. No mahogany in sight. Sexy settees shaped like lips. Price points for any budget. At TOV, we do things differently.