

TOV



Follow us!

Show your new purchase some love by tagging it on our Instagram!

 @tovfurniture


 516-888-3355

 hello@tovfurniture.com

 www.tovfurniture.com

If the future is female—your furniture should be, too. No mahogany in sight. Sexy settees shaped like lips. Price points for any budget. At TOV, we do things differently.


TOV

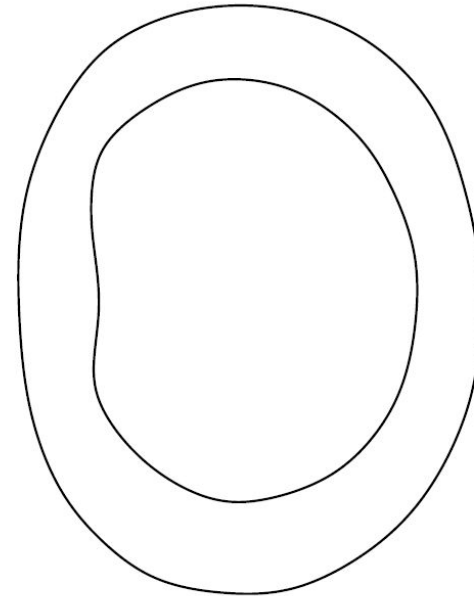

**Orpheus Ribbed
Forest Green
Fiberglass Thick Wall
Mirror**

DON'T BE BORING

Hardware and Components

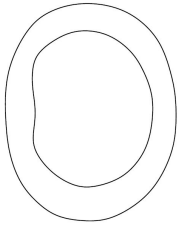


..... **A** Mirror x 1 Pcs



..... **B** Wall Anchors x 3 Pcs



..... **C** Screws x 3 Pcs



..... **D** Wall mount x 1 Pcs

Step 1

Open box of hardware :

This hardware box will be a smaller box inside of the main box. Look for the red streamer.



Step 2

A. Unwrap the product and place it on a flat surface.

B. Do not discard any material or the instruction card until the assembly is completed.


C. Using a pencil, mark the locations on the wall where the wall mount will line up. This is where the hardware will be installed.

D. Make at least two holes in the wall with the help of a drill. We recommend drilling 3 holes.

E. Insert the wall anchors (B) into the holes in the wall, press and turn clockwise until the anchors are flush with the wall.

F. Install the wall mount (D) to the inserted wall anchors (B) in the wall with the help of provided screws (C).

G. Hang the mirror on the wall mount as illustrated and installation is complete.

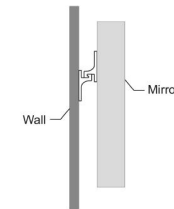

Stuck?

Contact our team @ 516-888-3355

Scan for product care!

