


**TOV**

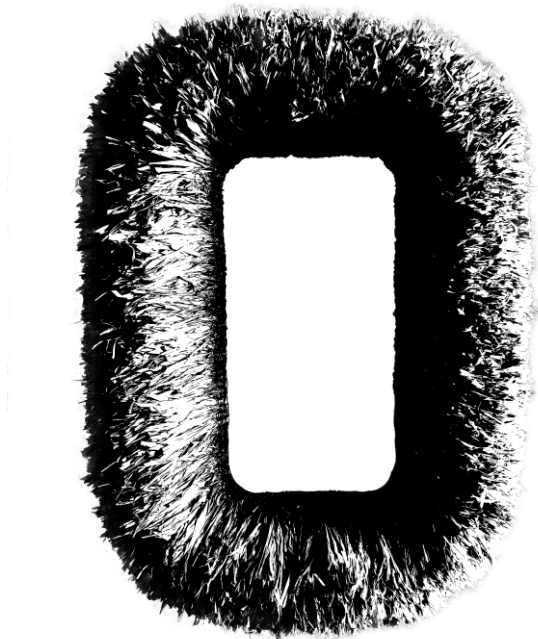

**PALM SISAL RECTANGULAR  
WALL MIRROR**

**DON'T BE BORING.**

# Hardware and Components




\_\_\_\_\_

(A)



\_\_\_\_\_

(B)

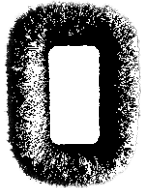

\_\_\_\_\_

(C)


## Step 1

Open the box.  
Hardware materials are in the plastic on the back of mirror.



## Step 2

Using a drill, install the included wall mount (A) and screw (B), and mount the mirror on the wall.

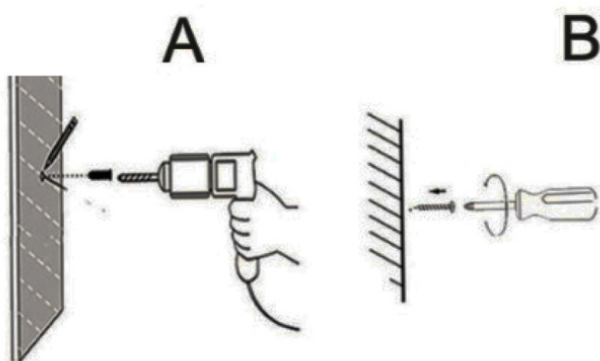


### PREPARATION

Before beginning assembly of product, make sure all parts are present. Compare parts with package contents list and hardware contents list. If any part is missing or damaged, do not attempt to assemble the product. Estimated Assembly Time: 10 minutes.

### Step 3

Complete!

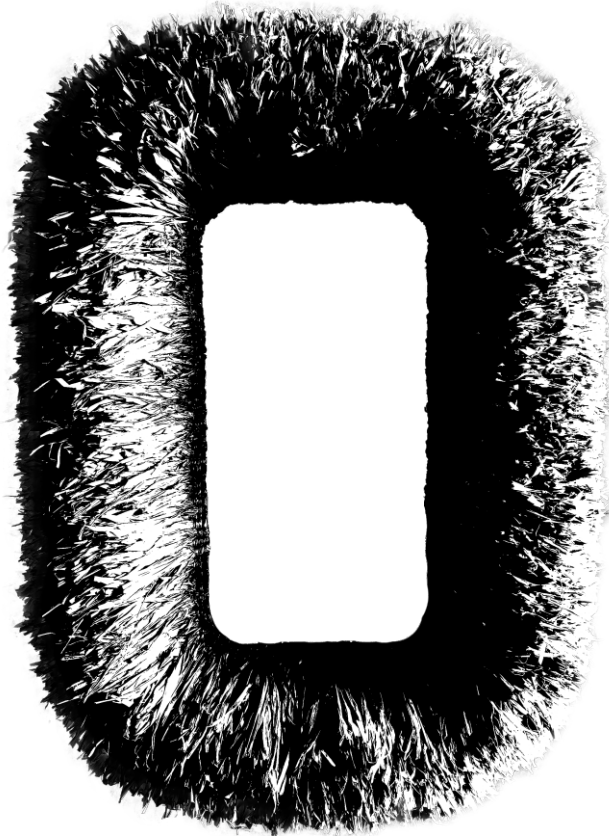

Stuck?

Contact our team @ 516-888-3355

Scan for product care!




# TOV



## Follow us!

Show your new purchase some love by tagging it on our Instagram!

 @tovfurniture

 516-888-3355

 hello@tovfurniture.com

 www.tovfurniture.com

If the future is female—your furniture should be, too. No mahogany in sight. Sexy settees shaped like lips. Price points for any budget. At TOV, we do things differently.